


指挥官 245 (大球)TENT


安装说明

Instruction manual

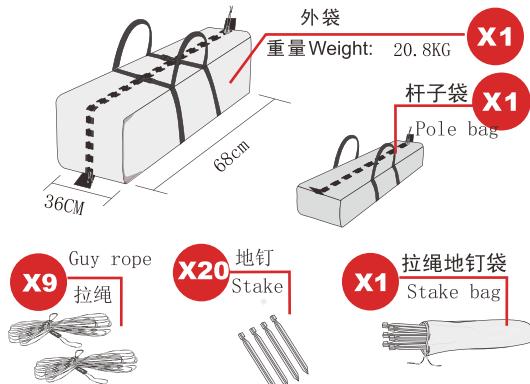


从外袋中取出帐篷，杆子袋，地钉袋（如上图），选择背风、平整的地面，防止有锐物划伤底部，把帐篷平摊于地。

Take tent and pole bag out from carry bag, then choose the leeward and flat ground.

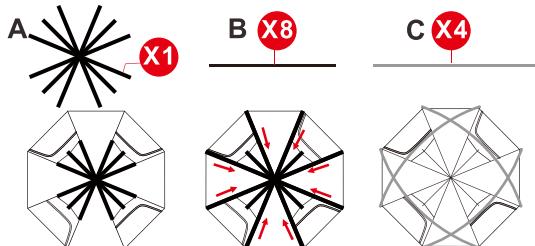

先将A杆中间的通孔插入塑料件内，有4个末端是铝头插入有调节扣的铝片，穿好后调好调节扣。

Put the tent outside top hook into the the pole hub, and put pole ending with alu tip into the alu part, then fix it with headpin.

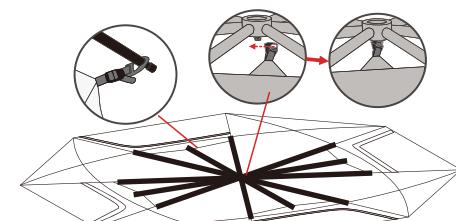


从杆子袋中取出支杆安装成图中所画的形状“如图1”并将支杆按图例位置摆放。


Take poles out from pole bag and install it as above shape.

养护说明


1

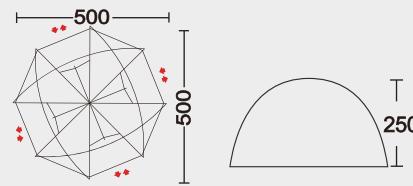

A杆一周的杆子钩上G型钩。
Fix the tent with G hook on all the pole A.

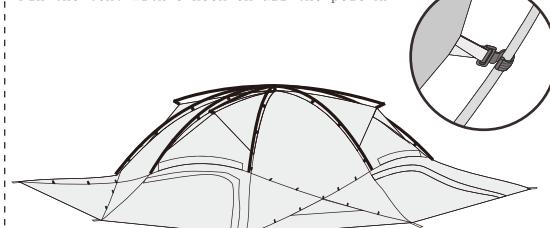

4

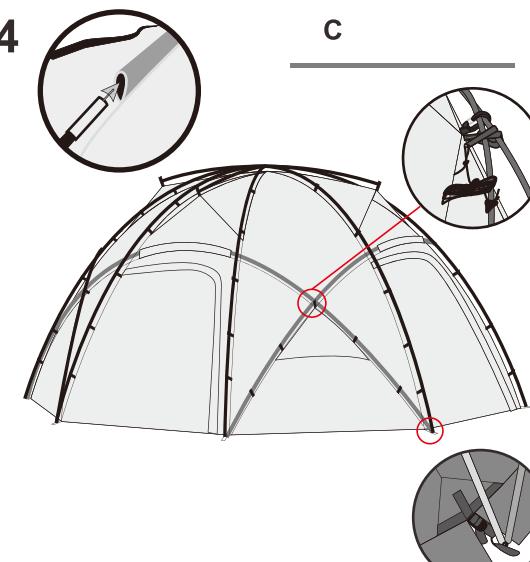

2




3

将A的末端插入B杆，B杆要插到头，在将B杆的末端插入圈棒内。
Put the pole A ending into the pole B and put the pole B ending into the pin ring.



5

综合配件 Accessories

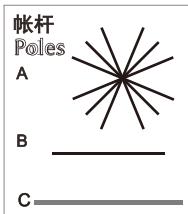

MOBI GARDEN

若有质量问题，请立即与销售商联系。
售后咨询电话：400 066 2858
依据ISO9001
Aftersales service:
0086-4000662858