## 晴日2 SUNNY2 TENT


## 安装说明

Instruction Manua



从外袋中取出帐篷,杆子袋,地钉袋(如上图), 选择背风、平整的地面,防止有锐物划伤底部,把 帐篷平摊于地。


Take tent and pole bag out from carry bag, then choose

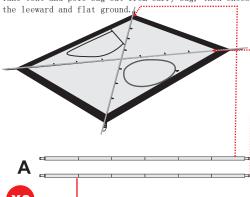


从杆子袋中取出支杆安装成"一"字形状(如图1) 并将支杆按图例位置摆放。



 Take poles out from pole bag and 杆子需要穿到位 install it as above shape.






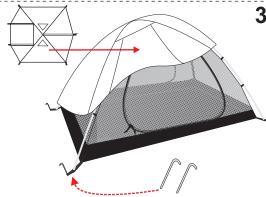

从地钉袋中取出地钉, 将地钉穿过内帐底各角落的塑料环后斜插入地面, 并(如图3所示)披上外帐。

Take stake from stake bag and fix the tent with stakes.

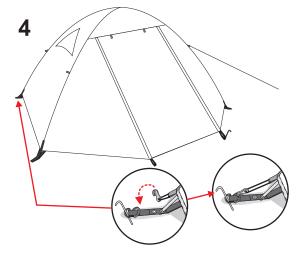

将外帐四角的塑料钩钩住内帐底的塑料环, 再将拉攀上的防护风绳固定在地面,使帐篷更加稳固。(如图4)


Put the flysheet on the inner tent and connect it with hooks Then fix the tent with guy ropes and stakes.





双竖大门设计,使进出帐篷更加方便; 同时在前厅形成两个相对独立的储存空间。


## 综合配件

    Accessories













- 帐篷不可使用洗衣机清洗,可用水冲,手搓等洗涤方法,使用非碱性清洗剂,清洗后放置通风处阴干,拆好装进收纳袋存放在干燥、阴凉的地方,帐篷要不规律折叠,因为多次使用帐篷后,折叠太规律整齐会使折痕硬化出现裂痕。
- 使用帐篷时注意不可穿鞋进入内帐, 因为鞋底连带的泥土、石子等极其容易将内帐底部划破, 从而失去防水意义。
- 避免在帐篷内炊事、吸烟、高温及明火对帐篷的危害很大, 如果外部天气恶劣必须在帐内炊事, 则需在炉头下垫上铝膜或其他隔热物品, 并将帐篷的所有门窗打开。
- 夜间帐内照明尽量避免使用蜡烛等无保护措施的明火物品做为照明道具,尽量使用头灯,手电及帐篷专用汽灯。
- 出现破洞,拉链及支架破损可以联系经销商或者联系厂家。



若有质量问题,请立即与销售商联系。 售后咨询电话: 400 066 2858 依据ISO5912

Aftersales service:0086-4000662858

