


# linärie

# GAVARNIE

## Portable DISHWASHER

### LB3SDW

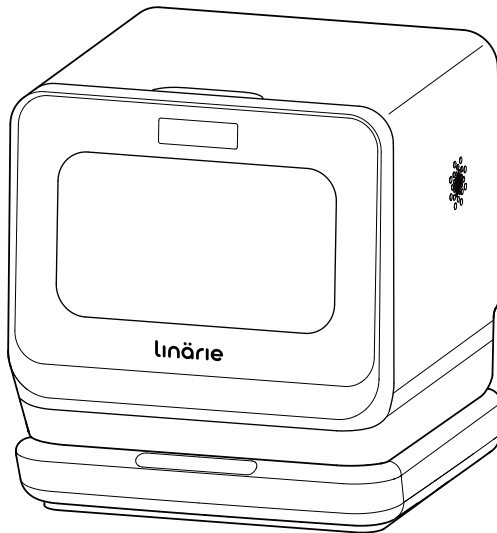

**EN**

Operation, Installation  
& Instruction Manual

[www.linärie.com.au](http://www.linärie.com.au)

Register  
your  
product  
online

# CONGRATULATIONS

Congratulations and thank you for choosing Linärie to introduce a new comfort of cooking in your home. We are sure you will find your new appliance a pleasure to use and a great asset to your kitchen.

This appliance complies with all relevant safety requirements in Australia. Inappropriate use can, however, lead to personal injury and damage to property.

In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and usage. This user manual which provides you with all required instructions related to safety, installation, use and maintenance of the appliance.

For future reference, please store this booklet in a safe place and ensure that all users are familiar with the contents. Pass them on to any future owner of the appliance.

Record Model & Serial Number

Model:.....

Serial Number .....

Register your product [www.linarie.com.au](http://www.linarie.com.au)

---

## TABLE OF CONTENTS

<b>Table of contents</b> .....	02	<b>8. Overview of programme</b> .....	11
<b>1. General Information</b> .....	03	<b>9. Adding detergent</b> .....	11
<b>2. General Safety Instructions</b> .....	03	<b>10. Utensils Selection</b> .....	12
2.1 Safety instruction - Installation .....	04	<b>11. Tableware placement attention</b> ...	12
2.2 Safety instruction - Operation .....	05	<b>12. Loading the basket</b> .....	13
2.3 Cleaning and maintenance .....	05	<b>13. Maintenance and cleaning</b> .....	14
<b>3. Product Overview</b> .....	06	13.1 Cleaning the filter utility .....	14
<b>4. Technical Information</b> .....	07	13.2 Cleaning the spray arms .....	14
<b>5. Packaging list</b> .....	07	13.3 Cleaning the dishwasher interior ...	14
<b>6. Installation</b> .....	07	<b>14. Service information</b> .....	15
Installation of inlet pipe .....	08	14.1 Error code list	
Installation of suction pipe .....	08	14.2 Common fault approach .....	15-16
Installation of drain pipe .....	08	<b>15. Circuit diagram</b> .....	17
Installation of water tank.....	09	Disclaimer .....	17
Water tank use .....	09	<b>16. Environmental tips</b> .....	18
<b>7. Operation</b> .....	10	<b>17. Warranty and after sales</b>	
7.1 Control Panel .....	10	<b>service</b> .....	18



## IMPORTANT

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under Linärie's manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on Linärie's manufacturer's warranty in the event that your product fault is due to failure to adhere this manual.

### Correct Conditions of Use

- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments; farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

And the dishwasher can only be used to wash household utensils.

The dishwasher will be damaged or the user will be injured when the operation is wrong.



Linärie does not assume any liability for damage arising from non-adherence to these documents and from improper assembly. The electricity connection must be made by a qualified specialist. Installation must comply with the valid standards, regulations and laws. All safety and warning information and the operating and installation instructions must be complied with.

## 1. GENERAL INFORMATION

- A damaged appliance can be dangerous. If you find the appliance is damaged or marked, you must report it within 7 days if you wish to claim for damage/marks under the manufacturer's warranty. This does not affect your statutory rights. Do not use a damaged appliance.
- The manufacturer's warranty will be invalidated if the appliance is not repaired by a Linärie approved service technician.
- Faulty components must only be replaced by genuine Linärie spare parts. The manufacturer can only guarantee the safety of the appliance when Linärie replacement parts are used.
- If the power cord is damaged, it must only be replaced by a Linärie authorized service technician or suitably qualified electrician in order to avoid a hazard.
- Linärie cannot be held liable for noncompliance with these instructions, resulting from incorrect or improper use or operation.

## 2. GENERAL SAFETY INTRUCTIONS



The appliance complies with the stipulated safety requirements in Australia. The user is responsible for appliance cleaning and maintenance as well as its safe use. Improper use can lead to personal injury and damage to property.



## WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Additional information on products, accessories, warranty, replacement parts and services can be found at [www.linarie.com.au](http://www.linarie.com.au)

## Children and People with Special Needs

- The appliance is NOT suitable for use by children without supervision.
- Young children should be supervised near the appliance to ensure they do not play with this appliance.
- Children may be able to wrap themselves in packing material or pull it over their heads with the risk of suffocation. Keep children away from any packing material.

## Unauthorized Modifications

- Unauthorised modifications can cause the appliance to pose risks. Do not conduct any modifications to the appliance.

## 2.1 Safety Instructions - Installation



The appliance must only be installed and assembled by trained specialists who are familiar with and comply with the standard national regulations and supplementary regulations.

- In order to avoid any potential hazard, the installation instructions must be followed.
- Observe all regional regulations for the installation.
- Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead.
- Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults. Under no circumstances should any other parts of the housing be opened.
- The power source of dishwasher has to adopt earth line for safety.
- After installation, please make sure the connection of water and power is well connected before using.
- The installation position of drainage pipe should not exceed 40cm or higher than the top of the appliance, which will cause poor drainage, electrical shortcircuits and water leakage.
- This dishwasher is an automatic appliance, DO NOT add water manually when the appliance is working.
- Do not open the door during operation as the steam can cause serious injury.
- If it is necessary to load or unload some utensils, please use the pause button and wait for 10 seconds, then open the door slightly and wait for the steam to dissipate completely, then open the door and move your utensils.
- Be careful when cutting up the cable ties, sharp scissor might burst the pipe and cord.
- The appliance is to be connected to the water mains using a new hose sets.
- Do not use an old hose sets.
- During installation, the power supply must not be excessively or dangerously bent or flattened.
- Please use flat scissors to cut the cable tie of water pipes and power lines when unpacking boxes.
- Position the appliance in the desired location. Confirm that the machine has been leveled.
- Please don't put anything else on either side, The openings must not be obstructed by a carpet.
- Please use cold water or warm water not exceeding 49°C.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The door is not left in the open position since this could present a tripping hazard.
- **WARNING:** Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the dishwasher when the door is open. Check that the detergent receptacle is empty after completion of the wash cycle.

## 2.2 Safety Instructions - Operation

- Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.
- Do not move or clean appliance when it is working. It might cause electrical shock or water leakage.
- Please use specialized detergents. Do not use washing-up liquid, washing powder, hand sensitizer soap or others detergents that is not specialized for dishwasher.
- Do not try to use this appliance in damp place. High humidity will make the appliance rusty, or leak.
- Place specialized detergent on a place where kids can not reach. Detergents are contains acidoid and alkaline, which are really dangerous.
- Utensils will be hot after washing, please take it out after 30 minutes.
- Please keep the appliance at room temperature for 8 hours after receiving the product in winter, to avoid the droplets appearing on the surface of the glass, and it can damage the appliance.
- Always close the door when not in use.
- Always cut off the power and water after using.



### WARNING

Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.



### WARNING

When using your dishwasher, follow basic precautions, including the following:

- Read all instructions before using the dishwasher.
- Use the dishwasher only for its intended function.
- Use only detergents or wetting agents recommended for use in a dishwasher and keep them out of the reach of children.
- When loading items to be washed:
  - Locate sharp items so that they are not likely to damage the door seal;
  - Load sharp knives with the handles up to reduce the risk of cut-type injuries.
- Do not wash plastic items unless they are marked "dishwasher safe" or the equivalent. For plastic items not so marked, check the manufacturer's recommendations.
- Do not touch the heating element during or immediately after use.
- Do not operate your dishwasher unless all enclosure panels are properly in place.
- Do not tamper with controls.
- Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
- **HYDROGEN GAS IS EXPLOSIVE.** Under certain conditions, hydrogen gas might be produced in a hot-water system that has not been used for two weeks or more. Before using the dishwasher turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. **Do not smoke or use an open flame during this time.**
- Remove the door of the washing compartment when removing an old dishwasher from service or discarding it.

## 2.3 Cleaning & Maintenance

- The device must be cleaned regularly. Dirt can lead to damage or the buildup of odors. (See "Cleaning and maintenance" section).
- Always clean the appliance exactly as indicated in the operating instructions.
- Always ensure the appliance is switched off before cleaning or replacing parts.
- Clean the appliance immediately after any food spillage and the filter regularly to keep the appliance working efficiently.
- There is a risk of fire if cleaning is not carried out as described in these operating instructions.
- Make sure no water penetrates inside the device when cleaning. Do not use any steam device to clean this appliance. The steam could reach electrical components and cause a short circuit.
- In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the machine and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the machine warranty.





## IMPORTANT

- This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of an electric shock by providing a path of least resistance of electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug.

### 3. PRODUCT OVERVIEW


#### Parts of Dishwasher

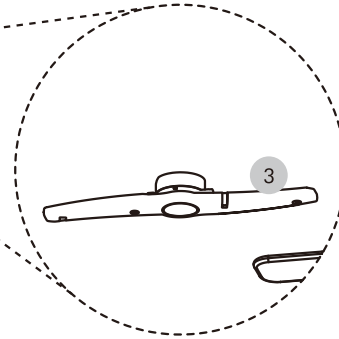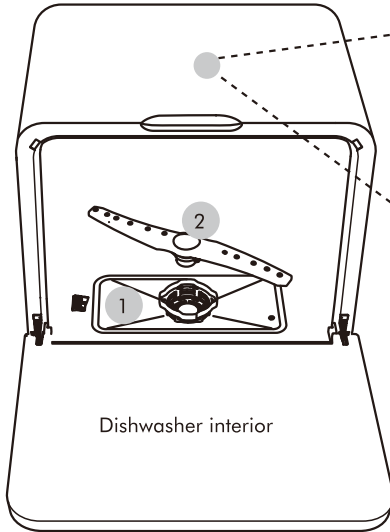

1 Filter assembled

2 Lower spray arm

3 Upper spray arm

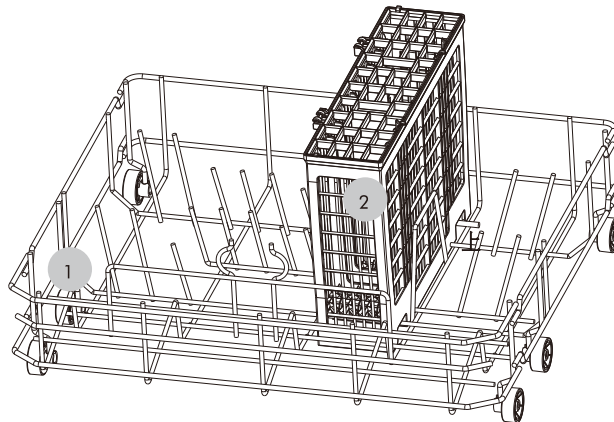

1 Basket

2 Cutlery basket

(Pictures for reference only)

## 4. TECHNICAL INFORMATION

Capacity	3 Place settings		
Waterproof	IPX1	Nominal voltage	220-240V~
Rated power	850W	Frequency	50Hz
Water pressure	0.04-1.0Mpa	Inlet Water temperature	Limited 50°C
Outline size	W440 X D413 X H495mm		

\* Due to the continuous improvement of products, such as the technical parameters in this manual, are modified without prior notice.

## 5. PACKAGING LIST

\* Please check the accessories one by one after you open the box. Please contact the seller if there is any shortage or damage.

Name	Quantity
Complete appliance	1
Basket	1
Cutlery basket	1
User instruction	1


Name	Quantity
Inlet hose (Depending on model)	1
Clamping band	1
Drain hose	1
Water tank	1



### WARNING

Please use flat scissors to cut the cable tie of water pipes and power lines.

## 6. INSTALLATION

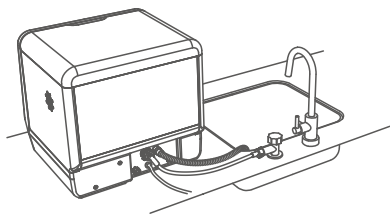


### Running water inlet

This is the default installation mode.

It is recommended that this mode be selected for installation in good installation conditions.

Refer to Steps 1 and 3 (on the next page) for installation.

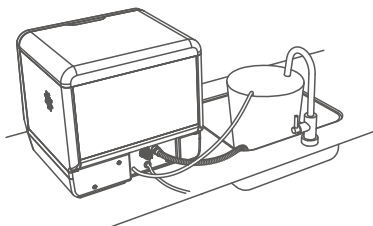

(Depends on the model)

### Suction water pipe

When the installation conditions of the inlet pipeline can not meet the installation requirements, and you do not want to change the pipeline. This installation mode is optional for models with this function.

Refer to Steps 2 and 3 (on the next page) for installation.






### WARNING

The top of water that is in container should be lower than the top of table.




The water in appliance turns yellow when you turn your appliance for the first time, which is normal.

## continue INSTALLATION




### 1 Installation of inlet pipe
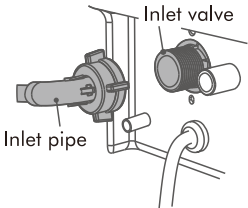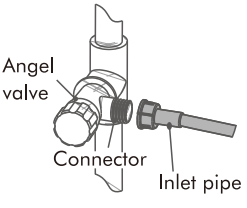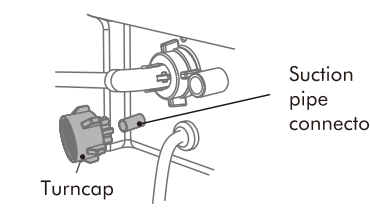
<p>1 Connect inlet pipe to inlet valve.</p>  <p>Inlet valve Inlet pipe</p>	<p>2 Connect inlet pipe to the Angle valve.</p>  <p>Angel valve Connector Inlet pipe</p>	<p>3 When the suction pipe is working, please put the turncap into Suction pipe connector, otherwise the water from suction pipe connector will leak.</p>  <p>Suction pipe connector Turncap</p>
---	---	--

### 2 Installation of suction pipe
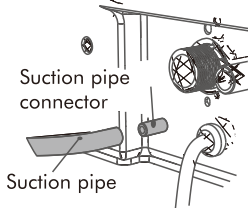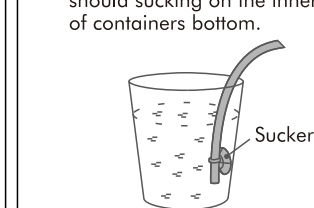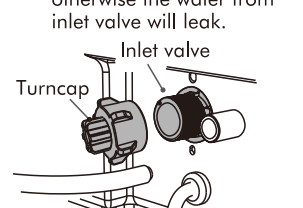
<p>1 Connect the suction pipe to the suction pipe connector.</p>  <p>Suction pipe connector Suction pipe</p>	<p>2 Insert one end of the pipe with the filter into the container. Suction cups should sucking on the inner of containers bottom.</p>  <p>Sucker</p>	<p>3 When the suction pipe is working, please put the turncap into the inlet valve, otherwise the water from inlet valve will leak.</p>  <p>Inlet valve Turncap</p>
---	--	---

### 3 Installation of drain pipe
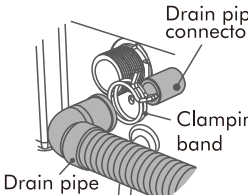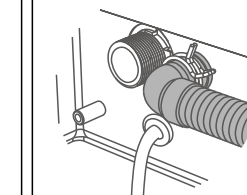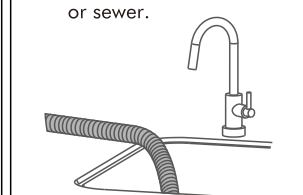
<p>1 Connect the drain to the drain port.</p>  <p>Drain pipe connector Clamping band Drain pipe</p>	<p>2 Fix the drain pipe with the clamping band.</p> 	<p>3 Please put the free end of the drain pipe into the sink or sewer.</p> 
---	--	--

## ⚠ WARNING

1. Please use cold water or warm water not exceeding 50.
2. The inlet pipe and drain pipe can not be folded, otherwise may affect the washing.
3. Ensure that the appliance is situated securely on the door; otherwise it will cause over ow and electric leakage. Take the package out from appliance.
4. After installation, please retain all documents and components for later use or for the subsequent owner.




⚠ The inlet pipe can not be recycled. Do not use an old inlet pipe in installation.



## continue INSTALLATION

### Installation of water tank



In addition to the previous installation mode of suctioning water, you can also choose this installation mode of water tank, as shown in the following steps.
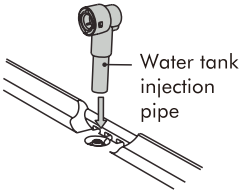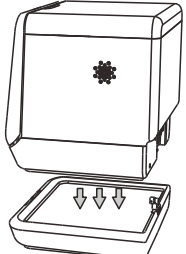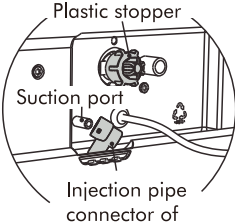
<p>① Insert the injection pipe of the water tank into the injection of the water tank, as shown.</p>  <p>Water tank injection pipe</p>	<p>② After placing the water tank on the table horizontally, put the Dishwasher onto it align with the groove.</p> 	<p>③ Put the injection pipe connector of water tank onto the suction port of the Dishwasher. Then, put the plastic stopper on the injection port in case the water leaks.</p>  <p>Plastic stopper Suction port Injection pipe connector of water tank.</p>
---	--	--

### Water tank use


#### WARNING

1. Before pouring water into the water tank, please check if the appliance is ON.
2. Check if both the drain and inlet hoses is connected well.
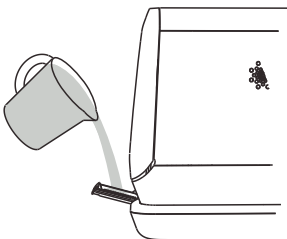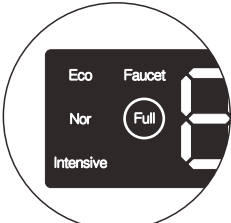
<p>① Open the drawer of the water tank, and pour water into it. Pay attention and carefully control the pouring of water to avoid spilling.</p> 	<p>② When pouring water into the tank, the appliance will beep and the icon marked below will light up when the water is full. Stop Adding water, and push the drawer back to the appliance.</p>  <p>Eco Faucet Nor Full Intensive</p>
---	---

## 7. OPERATION

### 7.1 Control Panel

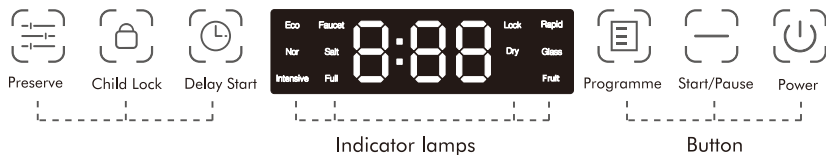


Faucet: Display "Check Water Supply"

Lock: Lock indicator

Dry: Drying indicator

#### 1 Operate the Dishwasher


Close the door of the dishwasher and start the appliance by pressing  for one second,



Power



Programme

 
Change wash programme with  button. Please select a suitable programme .

The indicator lamps flashes. It means that the Dishwasher is working.

Eco



Start/Pause

Start wash programme by pressing  button.

#### 2 Overview of programmes



Delay Start

You can delay the start of the programme by up to 24 hours.



Power



Programme



Delay Start




 
Cyclic display




Start/Pause

Start the appliance


Select suitable programme

Press  button, the display repeatedly shows H:00 H:01...H:24. Select delay start time. If press  button for 3 seconds, the screen will be reset to H:00, which means no preselection.

Press  button to delay the start of the programme.





Preserve

The preserve button has the function of regular ventilation and storage, which can effectively remove odor, mild dew, moisture (etc). The "Dry" indicator on the display is on when you select it. The dishwasher will run this function after the washing program finished with fan ventilate every 3 hours for 18 minutes within 24 hours . Meanwhile the fan running, the Indicator will displays "FAN". Press the  button when you need to cancel this function. The dishwasher will not start this function after the washing program is completed and the "Dry" indicator on the display is turned off.



Child Lock

It means Lock button. You can secure your appliance from being unintentionally programmed. (e.g. improper operation by children). To activate the button lock: Hold down the button  for 3 seconds until "Lock" is indicated on the digital display. To deactivate the button lock: Hold down the button  for 3 seconds until the display "Lock" goes out.

## 8. OVERVIEW OF PROGRAMMES

Special dishwasher detergent will remove oil and food residues. It is a must every time you use the appliance. Detergent dosage depends on the amount of and type of soiling.

Programme	Type of Soiling	Consumption of detergent		Wash cycle	Dry cycle
		washing powder /washing tablet			
Eco	Part dried, common household food remnants	18g	1 pcs	2:20	-
Normal	Little dried, normal household food remnants	18g	1 pcs	1:00	1:27
Intensive	Very adhesive burned-in or dried-on food remnants	18g	1 pcs	2:00	1:29
Rapid	Fresh food remnants, Light and less oil.	-	-	0:35	1:26
Glass	Slightly adhesive, temperature sensitive plastic and glasses	18g	1 pcs	1:30	1:27
Fruit	Suitable for cleaning fruits and vegetables	-	-	0:18	-

The dry cycle starts automatically after each washing program, "FAN" is indicated on the display during the dry cycle to dry the inner cabinet, the energy consumption on this function is about 0.16kWh/cycle.




### IMPORTANT

- Please don't put too much the detergent. Excessive detergent will not only produce a lot of bubbles, but also affect the cleaning effect.
- Please choose a suitable washing tablet, you should use the small one for this appliance. The actual runtime of each program is possibly different from the preset time cycle due to the water temperature, the amount of utensils, the type of soiling and the recovery of water softening. It is a normal condition, please use it with confidence.

## 9. ADDING DETERGENT

Add the required amount of detergent after a pushed basket.  
Please put the detergent in the designated place.

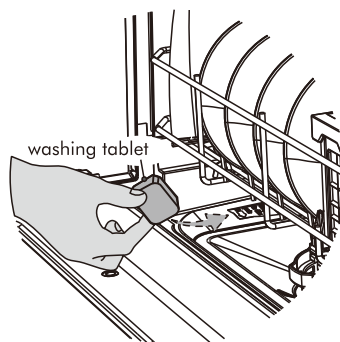

## 10. UTENSIL SELECTION



Ceramic tableware



Glassware



Stainless steel tableware

### IMPORTANT

- Precious metal, aluminum and colored glaze utensils may turn cloudy after being washed in a dishwasher.
- Cutlery made of bamboo or wood: It may come loose or crack at high temperatures.
- Plastics items: Please see manufacturer's instructions for plastics cutlery or items with plastics parts, because these items may come loose or crack at high temperature.
- Cleaning cloth: Cleaning cloth may cause your dishwasher faulty.
- Cast iron items: Cast iron items may rust after being washed in a dishwasher.

## 11. TABLEWARE PLACEMENT ATTENTION

- Remove large food remnants such as bones or leaves.
- All utensils with dirt should be face down. Opening face or closing face down will leave the water on the top.
- Utensils are secured and cannot be tipped over, one place for one utensil.
- Do not let the utensils out of the basket to avoid obstruction of the spray arm's rotation.
- Small sized utensils might drop out from the basket and obstruct the spray arm's rotation, Please do not put these small items in the appliance.
- When pushing basket back, do not let the sharp parts of utensils get in touch with the seal.
- Avoid scratching top coat of basket, or it will be rusted.
- Always place unsorted cutlery with the tips face down, in the cutlery basket.


### IMPORTANT

To check if the spray arm can still rotate, flip the spray arm after pushing the basket.

### WARNING

Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.


## 12. LOADING THE BASKET

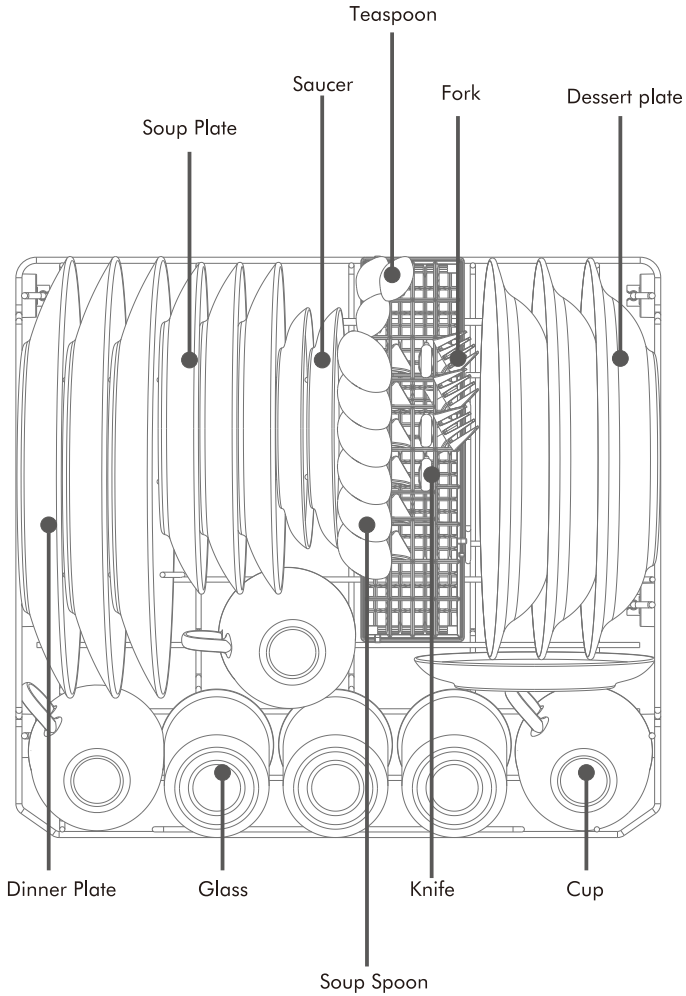


## 13. MAINTENANCE and CLEANING

### 13.1 Cleaning the filter assembly

After running the appliance for a while, there will be some residue and other things left in it. Please clean it when you see the residue and things immediately.

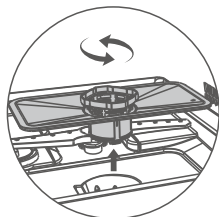


- 1 Make sure the power is off. Turn the filter assembly out counter - clockwise, then put the filter assembly back in, - clockwise.

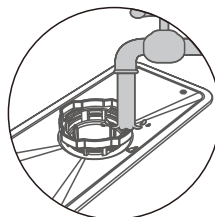


- 2 Use flowing water to flush the filter assembly. Do not use steel wool or iron brush, it will cause the filter to rust.


### 13.2 Cleaning the spray arms

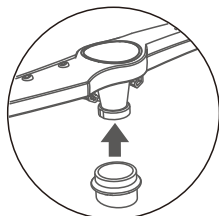

- 1 Pull the main basket out of appliance, and lift the lower spray arm a little bit to loss the clips.

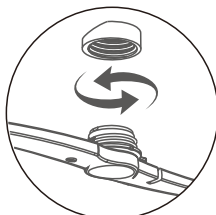

- 2 Turn the upper spray arm out counter clockwise. And put the upper spray arm back in - clockwise.

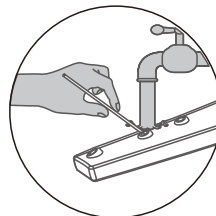

- 3 Check if the spray arms is blocked. If it does, please use a thin wire to pull the blockages out or flush the hole with water.

### 13.3 Cleaning the dishwasher interior

- Use a wet damp cloth to clean leaky seal.
- Clean the dead corner, Inside the dishwasher with citric acid and wet cloth.
- Please use specialized detergent to clean liner of dishwasher and inner pipeline.

## 14. SERVICE INFORMATION

### 14.1 Error code list

Error code	Cause	Remedy
E01	Thermistor short circuit	- Please contact Linarie after-sales service department.
E02	Thermistor open circuit	- Please contact Linarie after-sales service department.
E03	The machine is not heating.	- Please make sure the utensils are placed correctly. - Water wont be enough if it is in the plate/bowl. - Please contact Linarie after-sales service department.
E04	Inlet valve failure	- Please contact Linarie after-sales service department.
E05	Overflow	- Lean the appliance about 30°to 45° tto pour out the water in the bottom plate. - Check if the drainage pipe is placed too high. - Check if the pipe is tied like a knot, blocked or pressed. - Check if the appliance is placed right. - If all of the above wont work, try to restart the appliance again. - Please contact Linarie after-sales service department.
E06	Heating function abnormal	- Please contact Linarie after-sales service department.
E10	Water inflow abnormal	- The tap was not fully opened. - Small inflow and low water pressure. - Start-up multiple times in case of water shortage. - Please contact the after-sales service department.

### 14.2 Common fault approach

Problem	Cause	Remedy
The washing powder and washing tablet have not been cleaned up.	- The holes of spray arm has been blocked and the washing powder can not be flushed out.	- Clean the holes of spary arms and run the quick wash mode again.
	- Too much washing power.	- Run the quick wash mode again and put moderate washing powder.
	- Using of low-quality washing powder.	- Use specialized washing powder and washing tablet with quick wash mode to wash the utensil again.
	- Improper placement of detegent.	- Refer to "Adding detergent page".
Some drops in the inner portionof liner.	- It's normal and it won't affect the utensils.	
Some foam in the liner.	- Did not use specialised washing powder or put too much washing powder in it.	- Open the door and let the foam reduce; - If there's too much foam, you can remove it with tools. Restart any programme for 3 minutes. - Redo this again until the foam is gone.
Utensils is still wet.	- Utensils is piled up and uncleaned. - The washing process is still running. - Programme selected is without drying.	- Refer to utensil's loading rule. - Wait until the process is finished. Select a programme with drying (See overview of programmes.)
Appliance makes noise like blowing something when it is plugged. Display shows'FAN'.	- The air renewal system is ongoing.	- It is normal.


## continue SERVICE INFORMATION

Problem	Cause	Remedy
No reflection after turning on the power.	- If all the lights were off and no reflection when you press the power button, there are possibilities that you didn't plug in the power or there is a blackout.	- Please plug the power in and make sure that there is no power issue.
	- Power or the power was blackout.	- Clean and dry the power plug.
	- All the lights are on, it might on the childproof locking mode.	- Unlock the childproof lock.
	- The time on the power icon is too short.	- Press the power icon for 1 second
Have no reflection when pressing any button except the power button.	- Door is not close.	- Close the door.
	- There are grease or water on the glass and your hand.	- Clean and dry the glass and hand. - Clean and dry the power plug.
	- All the lights are on, it might on the childproof locking mode.	- Unlock the childproof lock.
	- PCB lock of door is broken.	- Please contact Linarie sales service.
The water light in the control panel lights up when water comes out.	- The water supply is having a problem.	- Make sure the water supply has no problem.
	- The flowmeter is broken.	- Please contact Linarie sales service.
	- The filling valve is broken.	- Please contact Linarie sales service.
The water light in control panel lights up when water comes out from the Suction pump.	- There is no water in the container or the suction pipe does not have water.	- Please add water to the container and make sure the suction pipe has water.
	- Dirty clogging of suction pipe filter.	- Clean the filter screen of the suction pipe.
	- The filling valve is broken	- Please contact Linarie sales service.
Water intake time takes longer to come out from the suction pump.	- It's normal and can be free to use.	/
Have crashing noise when it is working.	- Utensil are not placed in proper way, some utensils is obstructing the spray arms; or crashing at each other.	- Unload the dishwasher and re-place the utensils in proper way.
The utensil was not cleaned up.	- Utensils be piled up and uncleaned.	- Refer to loading of utensils.
	- Not choosing the right programme for washing.	- Please choose the right programme for washing.
	- Not using specialised washing powder or put too little washing powder.	- Use specialised washing powder or put enough of it before washing.
	- Filter is not installed in right position and food remnants gets in.	- Re-install the filter in right position.
	- The spray arms were blocked	- Clean the inner part of spray arms.
	- The spray arms are stucked.	- Check if the spray arm is stuck by a utensil.
	- Some leftover are sticking on the utensils.	- Soak the utensil for a while before washing.
	- Black out when the appliance is working.	- Restart the washing programme.
A lot of water were left in appliance when it is not working.	- Some food leftover are too hard to wash.	- Wash utensil with steel wool before putting it in appliance to wash.
	- The position of drainage pipe is too high.	- Refer to drainage pipe installation.
	- The drainage pipe is tied, blocked or pressed by something heavy.	- Untie the pipe or remove the heavy things.
	- Drainage pump is broken.	- Please contact Linarie sales service department.
- The filling valve is broken.		

If the solutions above can not fix the problems, please stop using the appliance immediately and cut off the power and water supply. Please contact Linarie after-sales department.



## 15. CIRCUIT DIAGRAM

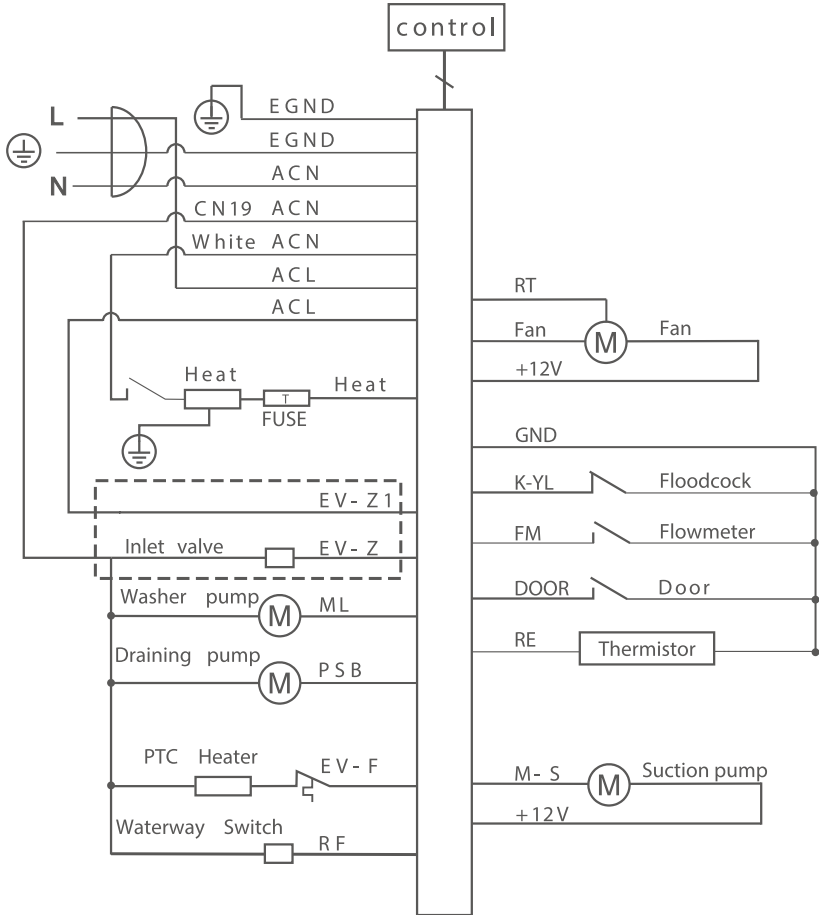

## DISCLAIMER

With the innovation and improvement of product technology, the product specifications of the same model as this product may be changed, and the change part will be notified without further notice.

The pictures of the products in the instruction are all borrowed from the appearance of the dishwasher, and the pictures are only used as an example. The actual appearance should be based on the purchased products.

As a result of product improvement, the execution standards of product manufacturing may be changed, and the revised standards of execution will be changed.

There is no retroactive effect on the sold product.

## 16. ENVIRONMENTAL TIPS

Observe all safety and warning information during operation (see "General Safety Instructions" section).

### Disposal considerations

The transport and protective packaging has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.



### Disposing of your old appliance

Electrical devices marked with this label may not be disposed of in domestic waste at the end of their service life.

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.

Please dispose of those materials by contacting your local authorities and ask for the correct method of disposal. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.

By disposing of this product in accordance with the regulations, you protect the environment and the health of those around you from negative consequences.

## 17. WARRANTY & AFTER SALES SERVICE

Observe all safety and warning information during operation (see the "General Safety Instructions" section).

In the event of a fault which you cannot remedy yourself, please contact Linärie.

### 17.1 Warranty

The manufacturer's warranty for this appliance is 2 years.

### 17.2 After sales service

The contact details for Linärie are given at the beginning and of these instructions.

When contacting Linärie, please quote the model and serial number of your appliance. These can be found on the data plate, after removing the grease filter.

### 17.3 Replacement of spare parts

Incorrect components can lead to personal injury or damage to the appliance. Use only genuine original Linärie spare parts.

Modifications, additions or alterations to the appliance can lead to safety risks. If spare parts or accessories from other manufacturers are used, the warranty will be invalidated, and Linärie cannot accept liability.

### Record model & serial number

Model:.....

Serial Number:.....




Register your product [www.linarie.com.au](http://www.linarie.com.au)

Please check [www.linarie.com.au](http://www.linarie.com.au) for more information.

# LIKE TO KNOW MORE?

For further information on all Linärie appliances,  
or to obtain detailed dimension and installation  
information, phone or email our Customer Care  
team or visit our website:

Australia  
[hello@linarie.com.au](mailto:hello@linarie.com.au)  
[www.linarie.com.au](http://www.linarie.com.au)

Follow Us  
[@Linarie.Appliances](#)  
  

Operating and installation instructions:

Original

✓ Translation

**Mart Online Services Pty Ltd.**  
**ACN 657 824 050**

**Linärie Contact**  
**hello@linarie.com.au**  
**www.linarie.com.au**

The distribution and duplication of this document, as well as the use and disclosure of its contents are prohibited unless expressly authorised.

These operating and installation instructions have been drawn up with the greatest of care. But it cannot be ruled out that subsequent technical modifications have not yet been incorporated or the relevant content has not yet been adapted. Please accept our apologies in this eventuality. An updated version can be requested from our team. Subject to printing errors and mistakes.

© Linärie

All rights reserved.