

flickerSong

Getting Started - WiFi Router connection

Introduction Congratulations on your purchase of a ScottEfx *flickerSong*, you can now play and compose music light shows to the 8 *flickerSong* outputs, which power multiple LED string light sets.

*****For use only with 120V LED String Lights*****

Getting Started is divided into a **Quick Start** section below, followed by more detailed information on how to get your *flickerSong* up and running

Quick Start - Connect the flickerSong to your WiFi Network - (Provisioning)

1. With the *flickerSong* unplugged from the wall socket, connect a LED string light to output number 8 as shown here. All other outlets must be unplugged



2. Plug in the *flickerSong* to the wall socket, you will see the LED string light blink indicating the internal systems are starting up.

*****Note: The flickerSong has no power switch*****

3. With only **output 8** connected, the *flickerSong* senses that a new WiFi server name and password (SSID and Password) are needed to connect to your local WiFi network. The *flickerSong* creates it's own local network to receive that information.

4. On your iPhone, iPad, or Macintosh, connect to the network named **ScottEffxnnnn** where **nnnn** is 4 letters or numbers such as **e54e** as shown here.

This is an Open network, no password needed.



5. Wait briefly, and your device will launch a window as shown here. Enter **your** WiFi network name (1), the Password (2), then press Connect (3). If your WiFi is an open network (no Password), leave the Password text box blank. If you have a dual band router the **flickerSong** uses the 2.4 GHz band, often denoted as “_G” (**not** the “_N”) band in the router name.

*****Must use the 2.4 GHz router band*****


The password is only saved in the **flickerSong** and only used for WiFi connection, it is not divulged online nor to the App.

If all is correct, the **flickerSong** will connect to your WiFi network and be ready for operation.

You will get the page below, whether connection is

successful or not.

If not successful, repeat steps 2 - 5 above.

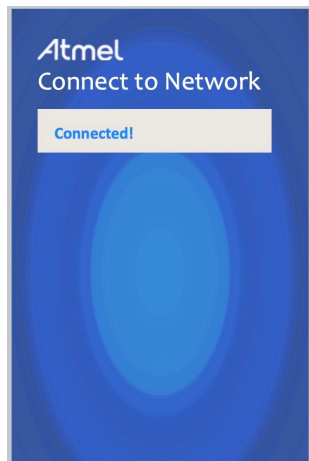

6. Reconnect your device (iPhone, iPad, or Macintosh) to the same WiFi network and open the **ScottEfx** Application. Your device likely will reconnect automatically. The **flickerSong** should show up as a connected device on the MacIntosh main page, or else under the **flickers** tab on your iPhone or iPad.

*****Note: Connect LED string lights to one or more of the outputs besides #8, otherwise your flickerSong will keep re-entering the above provisioning mode*****

7. Reference the QuickStart document for the **ScottEfx** application you are using, iPhone, iPad or Macintosh

8. Enjoy the lightshows!