


corn rush

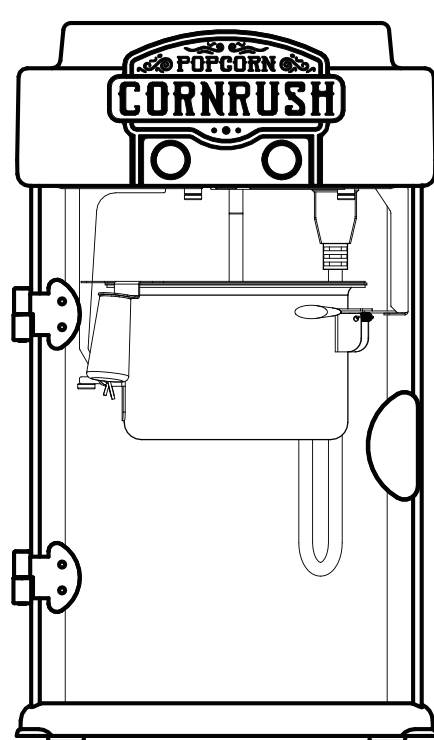

popcorn maker instruction manual

corn rush

cornrush.com

for a complete selection of concession supplies

Congratulations! You have purchased one of our best selling popcorn makers for your home.

We use only the finest grade material and workmanship when manufacturing our products. If for any reason our product doesn't live up to these standards described, please write to us at service@cornrush.com.

cleaning and maintenance

! DANGER! HOT!

- After the popping cycle is complete, the popping pot will be very hot. Please be careful when handling.
- Remember to turn the switch to the OFF position after the popping cycle finishes.
- Unplug unit when the product is not in use. Use caution not to bump the heat lamp bulb or kettle after popping.
- To maintain the taste and popping conditions, we recommend that you thoroughly clean the heat pot after using 3 to 4 times or before prolonged periods of storage.
- Turn all switches to the OFF position and unplug the popper from the power source. Allow the popper to thoroughly cool before cleaning.
- Clean all surfaces with a damp cloth. DO NOT immerse the kettle or any other parts of the popper in water.

CAUTION: Hot kettle! Handle with oven mitts. Keep children at a safe distance from the popper during the procedure. **DO NOT** immerse the kettle in water.

operating procedures

Please note: If you are using your popper for the first time, clean the interior of the glass surfaces and wipe the inside of your popper with a clean damp sponge before turning on. Please follow these procedures for the best operating results and long machine life.

1. Place the popper on a dry, level surface. Protect from rain and other weather elements. Do not install the popper near the pool or water. Plug the unit into a suitable grounded electrical outlet. (Please check the electrical specs. Be sure that your power source matches the rating label specified next to the power cord: (120V AC ~ 60Hz).
2. The unit has 2 function switches: Light and Pop. Light: turns on the light inside the popper housing Pop: controls power of the motor and kettle heater
3. Make sure that the kettle plug inside the housing is plugged into its housing outlet, then plug the power cord into your household electrical outlet.
4. Plug in the power cord to the popcorn maker.
5. Before adding popcorn or oil, please make sure the kettle lid is up. Using the kettle lid tab to open.
6. Turn the Light and Pop switches to the ON position and allow the machine to preheat for 2-3 minutes. **Please Note:** ENGAGING BOTH SWITCHES WILL TURN THE LIGHT, MOTOR AND KETTLE HEATER ON.
7. Once the machine has preheated, turn the Pop switch to the OFF position. Add 1 Tablespoon of oil and 1/3 cup popcorn (use scoop provided). Close the lid immediately.
8. Turn Pop switch to the ON position. The stirrer will engage and the kettle will start heating and popping the popcorn. **CAUTION:** When adding oil and corn during the popping process, or emptying kettle and handling machine after popping, the machine, kettle and kettle lid will be HOT. We recommend using oven mitts. Use extreme caution to avoid burns and keep children away!
9. Corn should begin to pop after approximately 2 minutes. When you no longer hear any popping, turn the Pop switch to the OFF position immediately and use the kettle handle to empty the remaining popcorn and kernels from the kettle into the removable tray (use mitts).
10. Keep the Pop switch on the OFF position if not preheating or popping. Keep unit unplugged when not in use.


important safeguards

When using electrical appliances, basic safety precautions should always be followed including the following:

- **READ ALL INSTRUCTIONS BEFORE USING YOUR POPCORN MACHINE.**
- **DO NOT** touch hot surfaces. Always use handles or knobs to operate.
- To avoid any risk of electrical shock, **DO NOT** immerse cord or plug in water.
- Avoid operating this popper near children or adults with disabilities that might cause injury.
- Unplug the main power cord from the outlet while not in use and before cleaning.
- Allow hot parts to cool down before moving or cleaning.
- **DO NOT** operate the appliance with a damaged cord or plug, or if the machine is malfunctioning or damaged. Contact us at service@cornrush.com for examination and repair (ONLY technicians should open up the unit).
- Using any accessories or attachments not provided or recommended by the manufacturer may result in injury.
- **DO NOT** pop kernels in a fry pot (without oil).
- **DO NOT** immerse the kettle in water.
- Pot surfaces are hot and should not be touched during the popping process or just after use.
- Allow the unit to cool, then unplug, clean and cover the unit and store in a dry, safe place while not in use.
- **DO NOT** leave the power cord hanging over edge of table or counter or touch hot surfaces.
- **DO NOT** place the unit on or near a hot gas or electric burner or in a heated oven.
- Please be extremely careful when moving any appliance containing hot oil or other hot liquids.
- Turn all switches to OFF position before disconnecting the power plug from the outlet.
- **DO NOT** use outdoors.
- **DO NOT** use appliances for anything other than the indicated usage.
- Please be extremely careful when unloading popcorn, always use oven mitts. Be careful not to allow residual hot oil or water to come into contact with your skin, as burns may occur.
- Always place the unit over a countertop so that residual hot oil or water will not cause injury.
- A popcorn maker that is plugged into an outlet should not be left unattended. Misuse of this product may cause burns.
- This product will not shut off automatically. To avoid overheating, add corn and oil before operating.
- **KEEP OUT OF REACH OF CHILDREN.**
- **DO NOT CLEAN THE MACHINE WITH ANY ABRASIVE MATERIAL.**
- **NEVER FORCE ANY PARTS OR BRACKETS INTO POSITION.**
- **NO MACHINE OR KETTLE PARTS ARE INTENDED FOR THE DISHWASHER WITH THE EXCEPTION OF THE REMOVABLE PLASTIC POPCORN TRAY AND MEASURING CUPS OR SPOONS.**
- **DO NOT OPEN THE DOOR DURING THE POPPING PROCESS.**

important safeguards save these instructions

For household use only

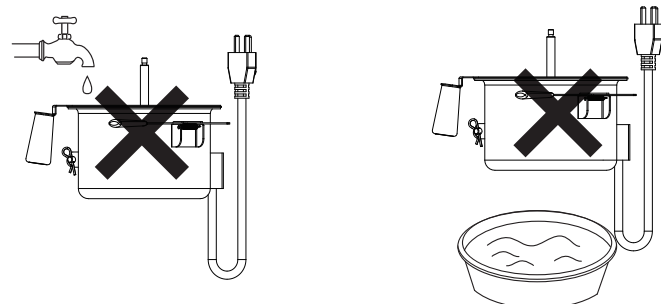


electrical cord

1. A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
 - a) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance, and
 - b) If the appliance is a grounded appliance, the extension cord should be a grounding 3 wire cord; and
 - c) The longer cord should be arranged so that it does not drape over the counter-top or tabletop where it can be pulled on by children or tripped over unintentionally.

specifications & parts

4oz corn rush popcorn maker
Model No:
4OZ-R Popper Red
4OZ-B Popper Black

1. Door
2. Measures
3. Removable dishwasher-safe tray
4. Kettle
5. Housing

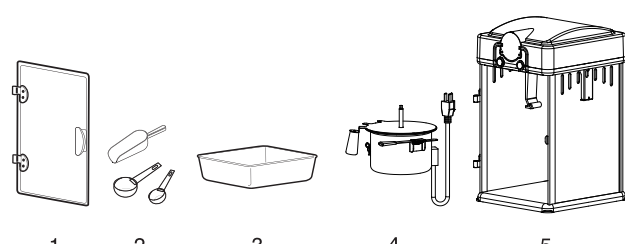

assembly instructions

1. Hook the kettle onto the hanger of the main housing.
2. Insert the inside kettle plug into its socket located on the inside top of the housing.
3. Place the removable tray into the housing.
4. Hang the door onto the hinges.