

# Manual Instruction

 
 
## 8-Zone RGBCCT Remote Controller

Model Number: RC04RF/RC04RFB/RC05RF/RC05RFB

### 1. Features

 
This product adopt world-wide used 2.4GHz frequency,GFSK control method, with the features of low power consumption, long distance transmitting, strong anti-interference and fast communication rate. RC04RF and RC04RFB has 30M distance control distance. RC05RF and RC05RFB has 150M long control distance. They can work on our 2.4GHz and WiFi series products with color change, color temp adjust,color saturation control and brightness dimming.

### 2. Product Size

 
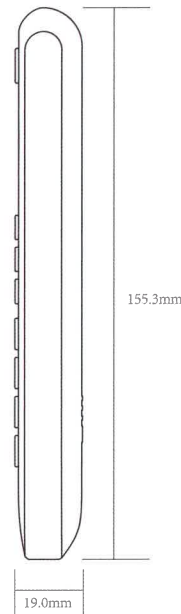 
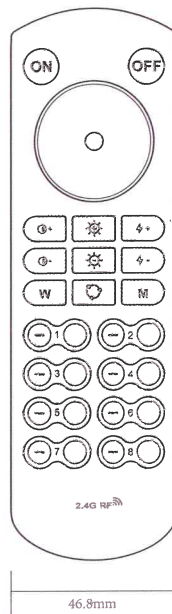 

 




### 3. Button Instruction

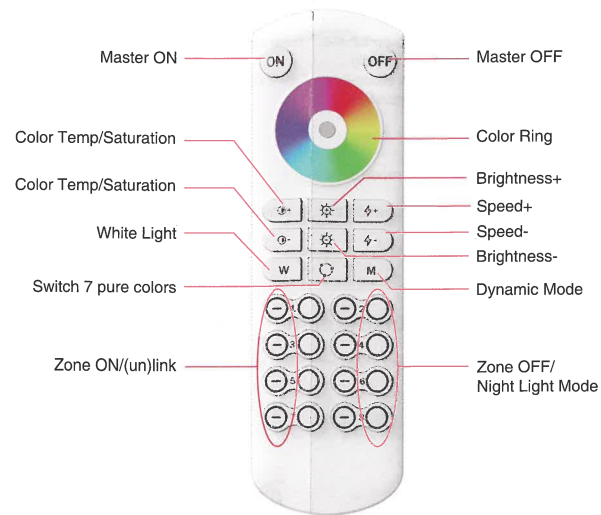**Note: RC04RF and RC04RFB is 30M control distance  
RC05RF and RC05RFB is 150M control distance**



- Press the button to turn on all linked lights.
- Press the button to turn off all linked lights.
- Press the color ring to change the colors you want.
- Under color light mode, press the button to change the saturation.  
Under white light mode, press the button to adjust the color temperature.
- Under color light mode, press the button to change the saturation.  
Under white light mode, press the button to adjust the color temperature.


-  Press the button to get the white light.
-  Press the button to dim the brightness up.
-  Press the button to dim the brightness down.
-  Short press the button to switch the 7 pure colors from orange, yellow, green, cyan, blue, purple and red repeatedly.  
Long press the button to change the 7 pure colors from orange, yellow, green, cyan, blue, purple and red gradually.
-  Lower the dynamic mode speed.
-  Accelerate the dynamic mode speed.
-  Short press the button to switch the dynamic modes repeatedly.

#### 4. Link and Unlink Instruction

**Remark:** The light can be working after linking with the remote.


##### Linking Code Instructions



 Linking failed if light is not blinking slowly, Please follow above steps again.  
(Note: Light that have linked can't link again)

 
##### Unlinking Code Instructions



 Unlinking failed if light is not blinking quickly, Please follow above steps again.  
(Note: Light haven't linked that don't need to unlink)

#### 5. Group Control

You can add an endless numbers of lights to a zone on the 8 channel remote by linking the lights to different zones. This way you are completely flexible in creating different group combinations.  
Below you can see some grouping examples.

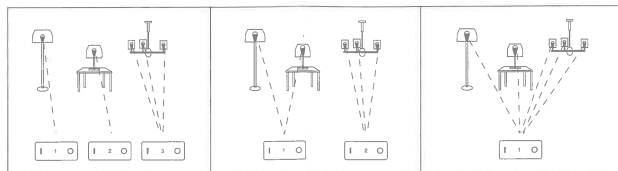

##### Remark:

- The user can re-programme freely as needed. One remote can control countless lamps or controllers, but one lamp or controller can only be controlled by five remotes (Max).
- Please check the battery installation and controller (totally discharge the power), when you programme after switching off and switching on.

#### 6. Attention

- This remote only control our 2.4GHz RF products; cannot control other products not made by us.
- In the using of the remote, if the indicated lamp blinking quickly, Please change the battery in time. Please don't use poor quality battery to avoid the leaking of battery liquid to damage the remote.
- This 2.4GHz remote is precise electronic product; don't use it in humid, high temperature, dust and high voltage environment; Saving it at indoor, dry and no static electricity environment.
- Please don't use the remote on the wide-range metal or strong electromagnetic wave area, otherwise, it will badly affect the controlling distance.