




Duo

Duo is the most versatile bike mount around, with the ability to mount any two bikes on any car in only a few minutes. Duo is a two-bike vacuum cup mount designed and assembled in Oxfordshire, UK.

Six powerful vacuum cups generate a combined vacuum rating of 600kg, more than enough suck for your sub-20kg bikes (40kg combined). The baseplate is manufactured using high quality CNC-machined HDPE polymer which enables Duo to be compact and light. So, it's ideal for travel as well as easy to store.

No matter your discipline; road or MTB, our through-axle fork mount is designed to deliver for everyone. A variety of fork adaptors and a quick release skewer are supplied with every order and the rear wheel cradles are designed with an array of wheel widths in mind.

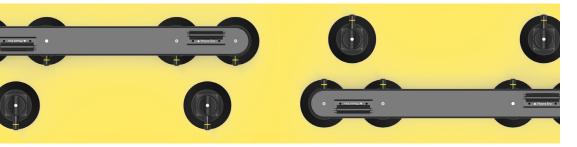

Modular

Like all our mounts, Duo is modular. This means the vacuum cups can be removed from the baseplate and used in conjunction with any of our other mounts. We've done this to significantly reduce the cost for those of you, who like us, not only cycle but ski and surf too. The vacuum cups are attached to each baseplate using a single high-tensile screw. This allows our modular system to be safe and secure while not compromising the ease with which you can change each modular attachment. So, if you cycle and ski, cycle and surf or all three, there is no better solution than our series of modular mounting systems.



Product Contents

 
Baseplate with two through-axle fork mounts 2x Rear wheel cradle with hook & loop fastner 6x Modular vacuum cups 2x Through-axle adaptors (5x100 quick release, 12x100, 15x100 and 15x110 'Boost') 2x Quick release skewer 6x High-tensile screws (4x M6x12mm and 2x M6x8mm) 4mm Hex key 2x Crank strap Vacuum cup lubricant (5g)

Instruction for use

Before installing Duo, ensure the car and



02





Step 3, securing Solo. Now the bike and Solo are fixed together and positioned, you need to repeatedly pump each of the four plungers on the side of the vacuum cup. Once the yellow band on the side of each plunger is no longer visible, the vacuum cup is secure.

04

Step 4, positioning the rear wheel cradle. Lift the rear wheel of the bike and place the rear wheel cradle beneath the rear wheel. Lower the bike wheel onto the cradle. Like the other vacuum cups, secure the cradle by repeatedly pumping the plunger on the side of the vacuum cup until the yellow band is no longer visible. The rear wheel cradle is now secure.



Step 5, securing the rear wheel to the cradle. Feed the straps of the cradle through the spokes of the wheel and fasten the hook and loop strap together tightly. Make sure the wheel is secured ensuring there is no movement between the wheel and the cradle.

Both bikes are now secured. Before setting off double check the yellow band on each vacuum cup is not visible and that both rear wheels are fastened tightly to each cradle. Give the bikes a reassuring rock, providing there is no movement of each bike and Duo you are good to go.

Once on the go we recommend you periodically check that the safety band on each of the vacuum cups isn't visible. Leave a maximum time between checks of 6 hours. If you're using Duo on a long journey use rest stops or services as an opportunity to check the vacuum cup indicators before setting off again.

Removal

To remove or reposition Duo, simply lift the edge of each cup using the raised tabs. This breaks the seal and allows the removal of Duo. Once removed, follow the installation instructions in reverse to remove the attached bicycle. Always remember to re-attach the vacuum cup covers after use.



 






Instruction for modular use

All of our mounts use modular vacuum cups, allowing you to remove and use them in conjunction with any of our other mounts.



Step I, using the supplied hex key to unscrew the single I 2mm long screws (8mm for rear wheel cradle) holding the vacuum cup to the baseplate. This will detach the vacuum cup from the baseplate allowing you to attach it to another mount.



02

Step 2, to attach the vacuum cup to another mount or reattach it to Duo, simply align the hole of the vacuum cup with the baseplate and tighten the 12mm screws (8mm for rear wheel cradle). Tighten the screws using the supplied hex key (Do not over tighten). The vacuum cup is now reattached to the baseplate.





Maintenance

To ensure the longevity of Duo, regular maintenance is recommended. Each time you use Duo, you should clean the surface you're mounting to and the face of the vacuum cup itself, this is to stop any dirt breaking the seal between car and Duo and preventing scratching of the surface. Like the exterior of your car, Duo can get dirty, so to stop unnecessary wear from salt, grit and road debris wash the entire mount regularly, preventing any build-up of dirt around the vacuum pump and mounting system. Washing Duo is very easy; use a sponge and water to wipe off any dirt, should you need anything stronger use warm water or even car shampoo. Please avoid using harsh chemicals as this can damage the rubber of the vacuum cups and cause them to fail prematurely.

Each pump on the side of the vacuum cups will also need cleaning, how often will depend on how heavily Duo is used. On average we recommend every few months, although we suggest you do it more regularly if Duo frequently gets visibly dirty. To clean the vacuum pumps, you need to remove the plunger by pulling it out of the cylinder it sits in. Once removed, using a cloth or paper towel and water, wipe away any dirt that has built up inside the pump cylinder. Dry thoroughly and lubricate the seal with the silicone lube provided before inserting the plunger back into position.

The vacuum cups should be stored with the provided covers attached as this stops the vacuum cups from deforming whilst not in use. Leaving the covers off for prolonged lengths of time can cause the face of the vacuum cups to warp, making it difficult for the vacuum cup to create a seal. Before packing away or setting up on the car you should inspect each vacuum cup. You are checking for stiffness, cracks, rough patches or cuts. Any of these will allow air to escape, stopping the adhesion of the vacuum cup to the car and causing it to fail.

The maintenance of Duo is to ensure the longevity and most importantly the safety of our product. Keeping Duo clean, ensuring it is stored correctly and regularly inspecting it will extend the product's life. Providing the above maintenance is carried out our products come with one year of warranty, allowing you to use them with peace of

Warranty

All of our products come as standard with one year of warranty from the purchase date. If you have any issues or questions, you can contact us by email - info@mountevo.co.uk

Feedback

Your feedback is very important to us. We'd love to know what we're doing well but also what we're not. Your feedback will help us identify our strengths and weaknesses ultimately improving our products and service for you and our community. You can leave a review at mountevo.co.uk



Disclaimer

Never mount either bike backwards, sideways or at an angle, always mount forwards
Never mount either bike using a part of the car that flexes easily or moves whilst driving
Never use Duo if any of the components are not functioning as intended
Never use Duo on a car that has been vinyl wrapped
Never use Duo with a bike that weighs more than 20kg each or 40kg combined
Always ensure the forks are secured safely to the through-axle mount
Always ensure the correct through-axle adapters are used.
Always ensure the vacuum cup and mounting surface are thoroughly cleaned before use
Adhere to the maintenance guide of the product to maintain the warranty of the item
Always ensure the indicator band on each vacuum cup isn't visible before starting each journey
Always periodically check the vacuum cup safety band isn't visible, allow a maximum time between checks
of 6 hours



Contact Us

For any enquiries please don't hesitate to get in contact. Email - info@mountevo.co.uk

▲ Mount Evo

MountEvo.co.uk
@MountEvo

