

24V NON HAZARDOUS AUDIO VISUAL BMS FLOW SENSOR

EAA950 | EAA950-E | EAA950-P

SIGNAL

SENSOR


When the shower and/or eyewash is activated by sensing the flow of water, a signal will be automatically sent to the junction box.

FLOW SENSOR



JUNCTION BOX

A trigger from the sensor will send a signal to the sounder and beacon and BMS.

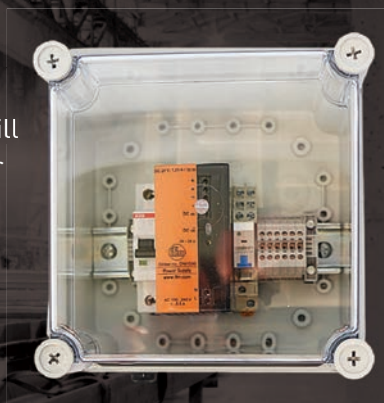

24V OUT

240V IN

24V OUT

SOUNDER & BEACON

SOUNDER

Sounder activated by flow sensor



RED BEACON

Red Beacon activated by flow sensor

BMS

Signal sent to BMS by flow sensor



Call 1300 369 273

www.enware.com.au

Enware Australia Pty Limited

9 Endeavour Rd Caringbah NSW 2229 Australia

 **ENWARE**

Version: June 19