

## 180K BTU Match Lit System with FLKV34 & FLKVFIT180 Installation Manual

- \* Select key valve location on your fire pit
- \*Plumb your existing gas supply into one side of your key valve
- \* Position your preferred support materials for the burner & plate inside of your fire pit (i.e., cinder blocks, elbow brackets, etc.)
- \*Warming Trends recommends a 4" clearance from the finished top of your fire pit to your plate
- \*Warming Trends recommends a minimum 6" clearance below plate for additional connections
- \*Make sure to use thread sealant that is resistant to all gases on all fittings except flared fittings for flex lines
- \* Be sure to tighten every joint securely
- \* Perform leak tests on all fittings

Step 1: Locate the FLKVFIT180 fitting located inside of your Warming Trends box and remove from packaging. – Photos #1 & #2



Photo #1 Photo #2

1/2" x 2" Wrench Bite Pipe Nipple

Step 2: Locate your FLKV34 and remove flex line, key valve, and keys from packaging – Photos #3 & #4



Photo #3 Photo #4

Step 3: Remove the  $\frac{3}{4}$ " flared fittings from each end of your  $\frac{3}{4}$ " flex line – Photo #5

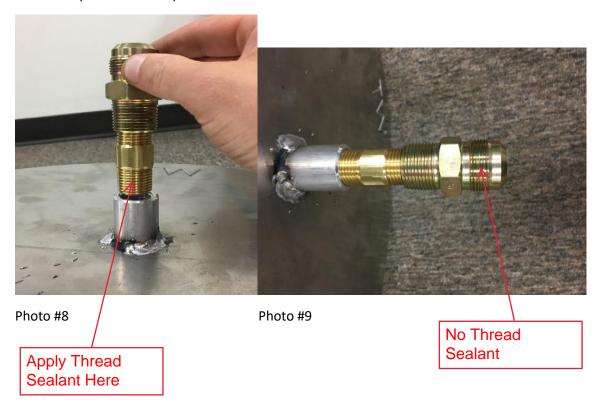


Photo #5

Step 4: Connect your FLKVFIT180 fitting to one of the  $\frac{3}{4}$ " flared fitting removed in step three – Photos #6 & #7



Step 5: Connect the new fitting you created in steps three and four to the %" coupling located on the bottom of your aluminum plate – Photos #8 & #9




Step 6: Connect your %" flex line to the fitting now located on the bottom of your aluminum plate – Photos #10 & #11



Photo #10 Photo #11

Step 7: Locate the other  $\frac{3}{4}$ " flared fitting removed in step three and connect into the  $\frac{3}{4}$ " key valve – Photo #12 & #13

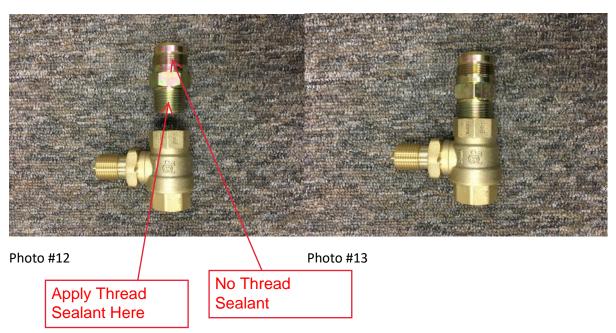

Step 8: Connect ¾" flex line into the fitting connected in step seven – Photos #14 & #15



Photo #14 Photo #15