


## 2.3 Dimensions

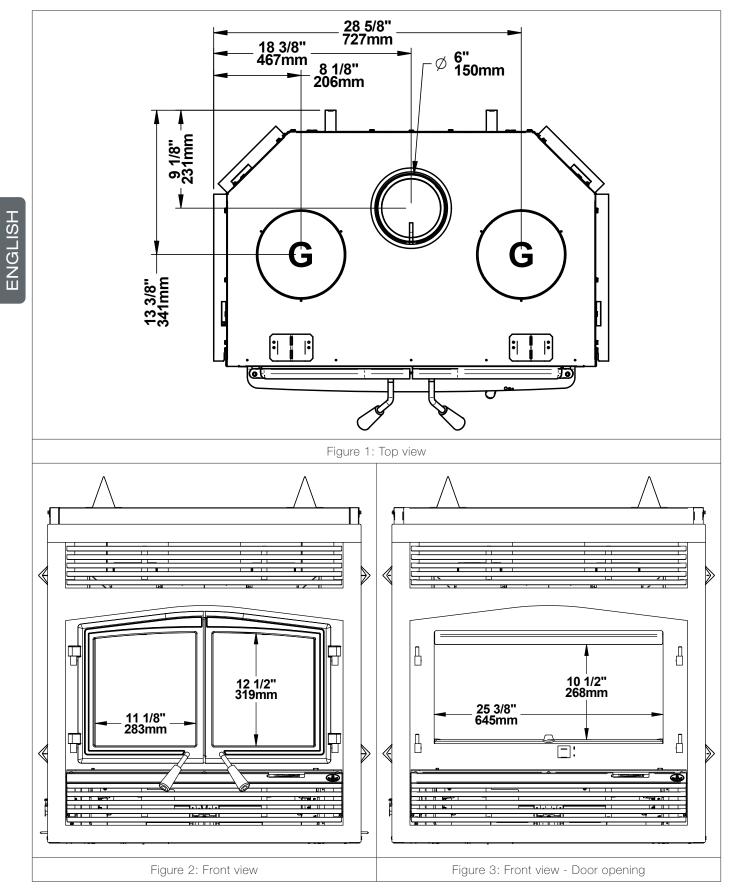

**G** : Opening for gravity hot air distribution kit (Ø 8").

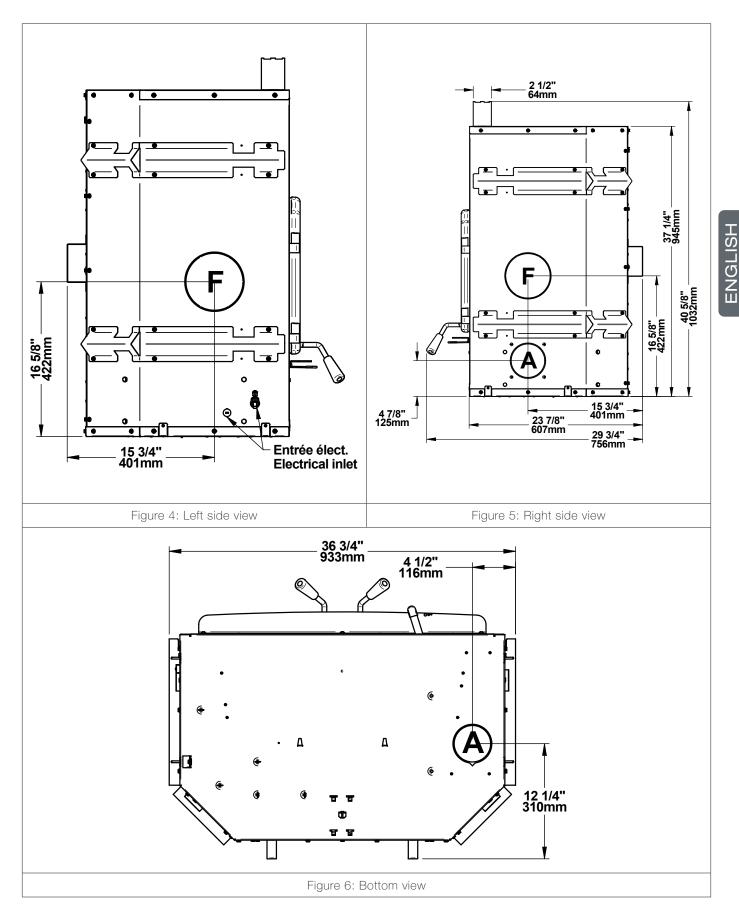

- **F** : Opening for forced air distribution kit (ø 6").
- **A** : Opening for fresh air intake (ø 4").

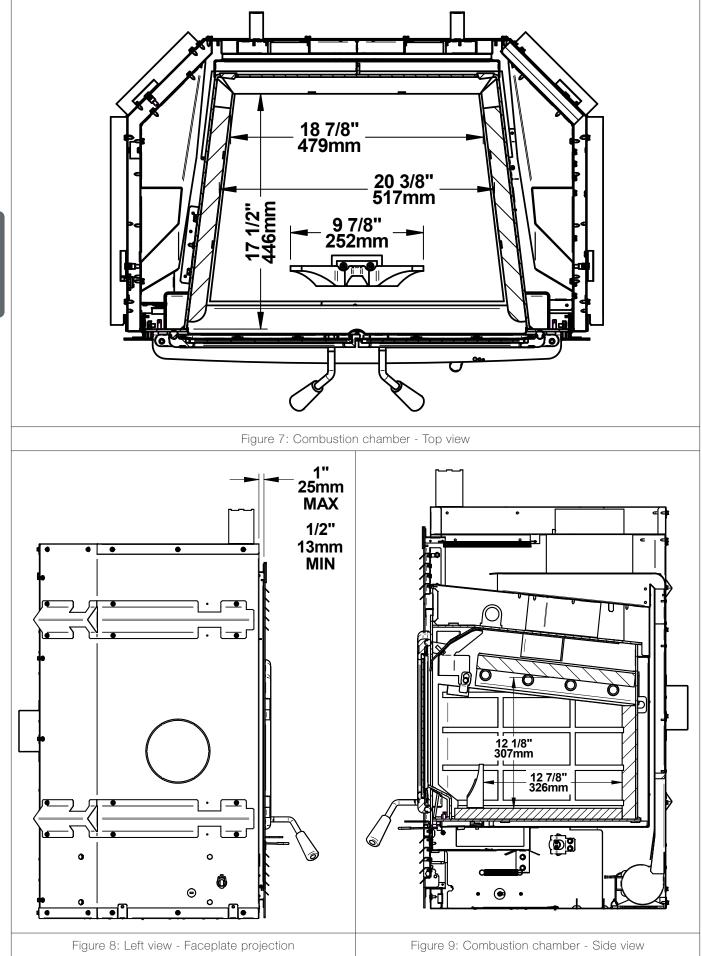

ENGLISH

Installation and Operation Manual - Stratford II