

HOOK 'N' COOK

Disposable Barbecue Railing Stand

Operating Instructions

Congratulations on purchasing your Hook 'N' Cook Disposable Barbecue Railing Stand.

In the box

Unpack the components from the cardboard packaging and you should have:

1. Mounting bracket for railing.
2. Main Barbecue body.
3. Raised tray stand.
4. 2 x Nylon adjuster bolts
5. UPVC spacer bar.



Assembly

Take the railing mounting bracket and screw into the two threaded holes in the front the two-nylon adjuster bolts. Screw them in so about 10 mm is sticking through the plate.



Clip the mounting bracket over the handrail and place the UPVC spacer bar over the two nylon bolts that are protruding from the plate. (The UPVC spacer can be turned through 90 degrees to accommodate different weights of railing)



The two nylon-adjusting bolts may now be adjusted equally so that the mounting plate is sitting on the railing vertically. Note: The bolts are not intended to lock the plate to the railing they are just there to get the unit sitting level.



You should now have the mounting plate in position as in the picture below.



You can now attach the barbecue unit to the mounting plate by clipping it onto the two locating lugs.

Place the raised tray stand into the barbecue unit and you are ready to go.



Barbecue Safety

NEVER USE THE HOOK 'N' COOK BARBECUE STAND WITH CHARCOAL OR WOOD – IT IS ONLY INTENDED FOR USE WITH SINGLE USE DISPOSABLE BARBECUES.

PLEASE REFER TO THE INSTRUCTIONS ON YOUR DISPOSABLE BARBECUE PACK FOR SAFE OPERATION OF YOUR BARBECUE.

DISPOSABLE BARBECUE GENERAL INSTRUCTIONS

1. Always make sure you have a water source available in case of fire.
2. Keep all flammable materials away from the disposable barbecue.
3. DO NOT handle the disposable barbecue during operation they become very hot. DO NOT attempt to move until completely cold.
4. Keep children and pets at a safe distance. Use only with adult supervision.
5. DO NOT use in doors, without adequate ventilation, or in prohibited areas.
6. Disposable barbecues are for single use only! Do not refill or attempt to relight the barbecue by using spirit, petrol or comparable fluids.
7. Immediately after cooking, extinguish completely with water.
8. DO NOT dispose of until completely extinguished and cold.
9. Remember to dispose of your barbecue responsibly and carefully.

DIRECTIONS FOR USE:

1. Remove cardboard tray prior to use and dispose of all packaging carefully and responsibly.
2. Place your picnic barbecue on the hook and cook barbecue stand in the middle of the stand making sure that it does not touch the back or side walls.
3. The picnic barbecue will have a specially impregnated starter treat under the wire grill. CAUTION. DO NOT use spirits, petrol or comparable fluids for lighting or relighting!
4. Light one corner of the starters sheet with a match. Depending on wind conditions, it will take about 15 minutes for the flames to die down.
5. The barbecue is filled with mushroom charcoal. DO NOT start cooking before the flames have died down and charcoal has a coating of ash.
6. DO NOT leave the cooking food unattended as it may burn – turn frequently.
7. DO NOT remove stuck food from the grill without of bungalows and the appropriate barbecue tool.

FOOD SAFETY

1. Always wash hands thoroughly, especially before and after handling raw food, and before eating.
2. Raw meat should be kept separate from cooked meat and ready to eat foods.
3. Barbecue food may look cooked when it isn't.
4. Cook chicken, pork, burgers, sausages and kebabs until they are piping hot all the way through, none of the meat is pink and any juices run clear.
5. See the advice on the food standards agency website at: www.eatwell.gov.uk

Helpline- Call Greg the Chef on 0845 299 6455

www.decksupermarket.co.uk