 


ACEKOOL

Popcorn Maker PA1

—
INSTRUCTION MANUAL

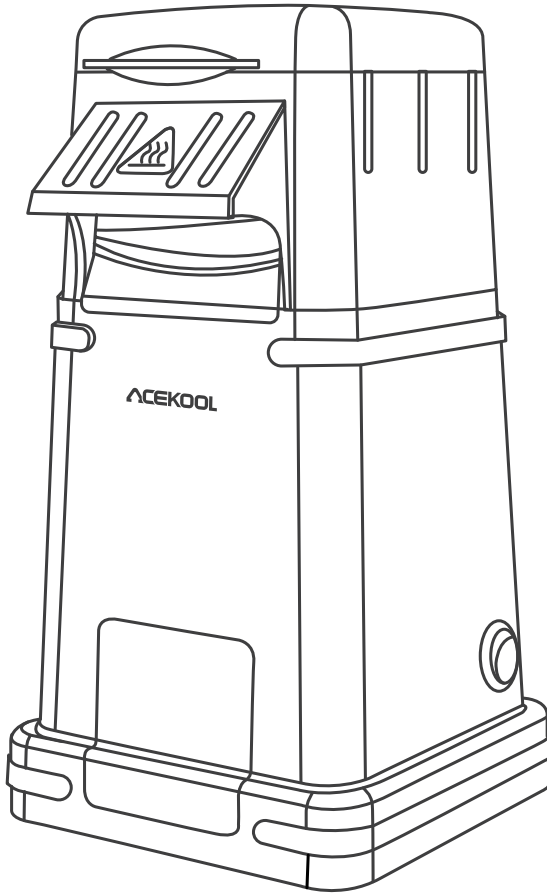


Thanks for your order. Please read the user manual thoroughly before using the product and keep this user manual for your future reference.

CONTENTS

■ Product Structure	01
■ Technical parameter	01
■ Important Safeguards	02
■ Tips & Tricks	03
■ Using The Popcorn Maker	04
■ Cleaning & Maintenance	06

 Product Structure

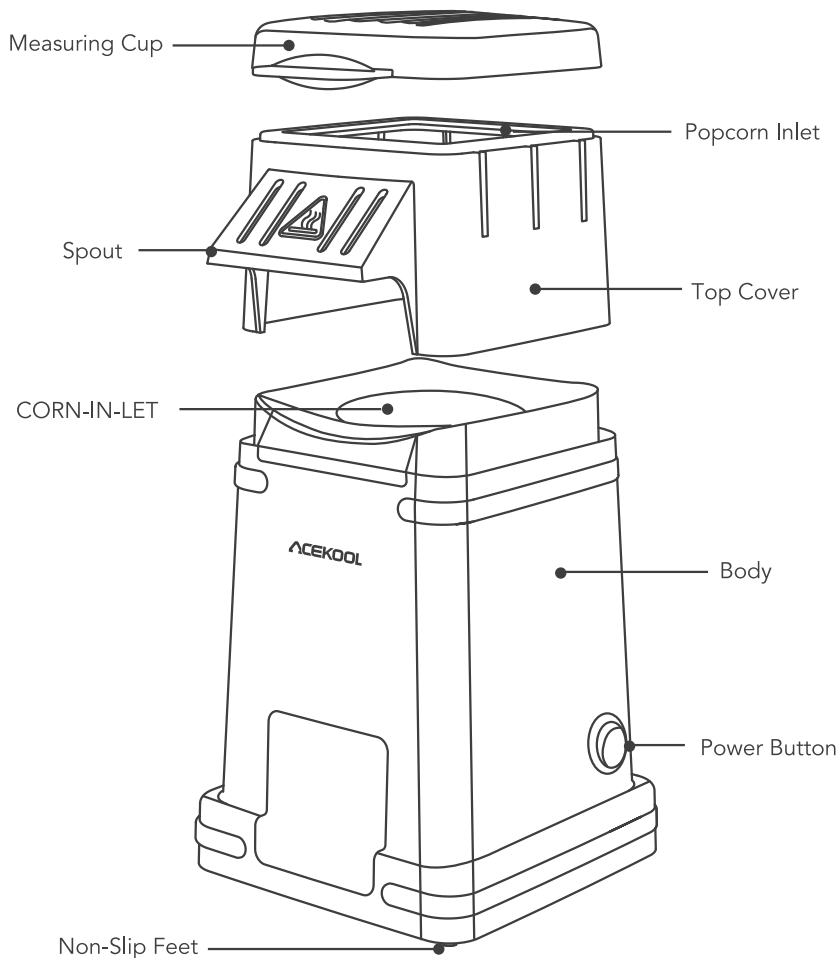

Technical parameter

Voltage: 120V~, 60Hz Power: 1200W

Important Safeguards

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock do not immerse cord, plugs in water or others liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on, taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over the edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other intended use.
- A popper that is plugged into an outlet should not be left unattended.
- Extreme caution must be used when unloading popcorn. Always turn the unit over a counter-top so that residual hot oil or water running out will not cause burns.
- A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- **If a long detachable power-supply cord or extension cord is used:**
 - 1) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding 3-pin cord.
- All requested breaks must be followed.

- Please refer to the rating label for the maximum continuous usage time (KB 5 mins is the maximum usage time).
- This appliances are not intended to be operated by means of an external timer or separate remote-control system.
- For safety reasons a damaged or defective supply cord should only be replaced by service center.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- **This appliance is intended to be used in household and similar applications such as:**
 - 1) Staff kitchen areas in shops, offices and other working environments;
 - 2) Farm houses;
 - 3) By clients in hotels, motels and other residential type environments;
 - 4) Bed and breakfast type environments.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.

■ ■ Tips & Tricks

- After the first popping cycle, wait for approximately 10 to 12 minutes before using the Popcorn Maker again.
- Never put the butter in the Aluminum Heat Chamber.
- Do not exceed one Measuring Cup of kernels in one cycle as this will overfill the machine.

Kernels	Popped Corn
1 Measuring Cup	16 Cups
½ Measuring Cup	8 Cups

 
Using The Popcorn Maker

NOTE: Wash the Popcorn Maker and parts with a damp cloth prior to use. Dry before using.

WARNING: DO NOT put butter into the Aluminum Heat Chamber.

CAUTION: Aluminum Heat Chamber will get very hot. NEVER insert fingers into the chamber while operating or after use.

- 1 Assemble the Popcorn Maker by placing the Top Cover onto the Body until it clicks into place, then set the Popcorn Maker on a flat and stable surface.

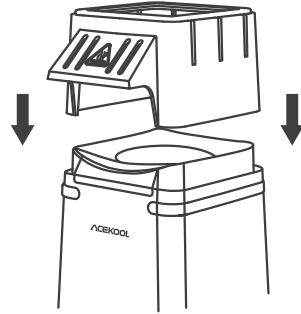


- 2 Using the Measuring Cup, add one Measuring Cup of kernels into the Aluminum Heat Chamber through the Popcorn Inlet.

NOTE: One cup is enough, any more will overflow the Popcorn Maker and will keep the appliance from malfunctioning.



 - 3 Put the Measuring Cup back on the Top Cover after each use.

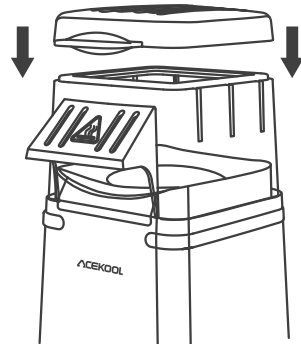

4 Place a large bowl under the Spout so that the edge of the bowl is touching the Body of the Popcorn Maker. Be sure that there is nothing blocking the Spout so the popcorn can eject properly.

 
 
 
5 Switch the Unit on by pressing the Power Button to "On."

6 After a few minutes the Popcorn Maker will start making popcorn. It will continue to operate until all the kernels are popped. The popping cycle will last about 3 minutes.

CAUTION: The Popcorn Maker will heat up, refrain from touching the Top Cover or Measuring Cup as they will be very hot.

7 Once popping is complete, turn off the unit by pressing the Power Button to "Off," then unplug the unit.

8 It is suggested to use other utensils to melt butter (NOTE: Please do not put butter on the Measuring Cup when making popcorn).

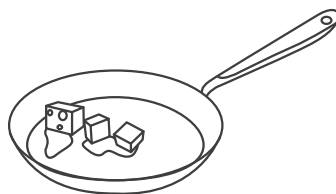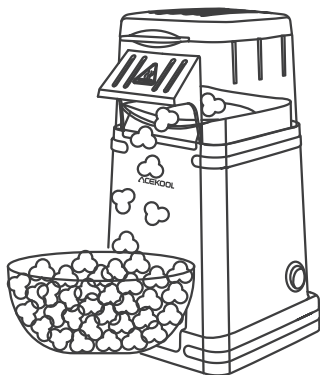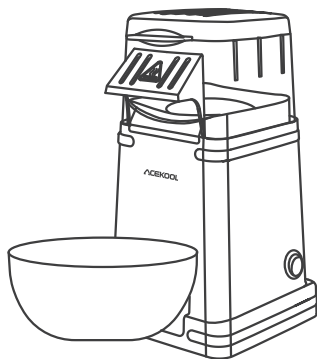

■ ■ Cleaning & Maintenance

- Unplug the unit before cleaning and/or disassembling.
- Make sure the Popcorn Maker has cooled down completely before disassembling and cleaning.
- Clean the Body of the Popcorn Maker with a damp cloth. Never use abrasive products as they could damage the Popcorn Maker.
- The Top Cover and the Measuring Cup can be cleaned in warm soapy water.
- Store unplugged Popcorn Maker in a safe, dry place, where out of reach from children.

ACEKOOL

— Make Life Easier —

Model: GPM-860

Email: support@acekool.vip

Website: <https://www.acekool.vip>

Made in China



