

HIGH SPEED HAIR DRYER

Please read this manual carefully before starting to use the product store it properly for future reference



Scan the QR code for manuals
in multiple languages

ROIDMI

Safety Precautions

In order to avoid accidental injuries such as electric shock or fire caused by improper use, please read the instruction manual carefully before use and keep it properly for future reference.

WARNING

1. Do not use this appliance near bathtubs showers, basins or other vessels containing water.
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge only if they have been given supervision or Instruction by a responsible person concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
3. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable. The use of an extension cable is not recommended.

4. If the supply cable is damaged it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Keep away from pacemakers defibrillators, credit cards and electronic storage media.
6. This appliance has a non-self resetting thermal cut-out safety device to prevent overheating. If your appliance cuts out, unplug it from the mains supply socket and leave to cool.
7. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off. For additional protection when the appliance is used in a bathroom, it is recommended that a Residual Current Device (RCD), with a residual operating current not exceeding 30 mA is installed in the electrical circuit supplying the bathroom. Contact a qualified electrical installer for advice.
8. Do not handle any part of the plug or appliance with wet hands.

9 . Do not use the appliance for any other purpose than drying hair.

10. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the appliance.

11 . Do not stretch the cable or place the cable under strain. Keep the cable away from heated surfaces and do not wrap the cable around the appliance.

12 . Do not use any lubricants , cleaning agents , polishes or air fresheners on any part of the appliance.

13 . Contact the Helpline when a service or repair is required .Do not disassemble the appliance as incorrect reassembly may result in an electric shock or fire.

14 . If the appliance is not working as it should , if it has received a sharp blow , if it has been dropped , damaged, left , outdoors , or dropped into water, do not use and contact the Helpline.

15. In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility company, or plugged into any socket where the electrical supply is unstable or likely to be turned off.





WARNING: Do not use this appliance near water

CAUTION

1. Do not use and store this product under extreme adverse conditions, such as extreme temperatures. It is recommended to use it indoors at an ambient temperature of 0-35°C, please store it in a cool and dry place.
2. Do not wave around the hairdryer or let children play with the hairdryer. etc. (so as not to cause injury or damage to it).
3. Do not drop this product, collide with other objects or apply pressure to this product (so as to avoid fire or electric shock accidents due to failure).
4. The parameters in the manual are only measured in a laboratory environment, and the parameters will be slightly different due to individual product differences.
5. The illustrations of products, accessories, and user interfaces in the manual are all schematic diagrams and are for reference only. Due to product updates and upgrades, the actual product and the schematic diagram may be slightly different, please refer to the actual product.

Product Introduction

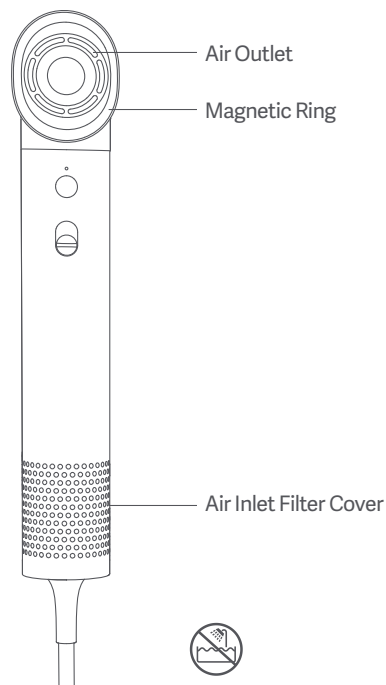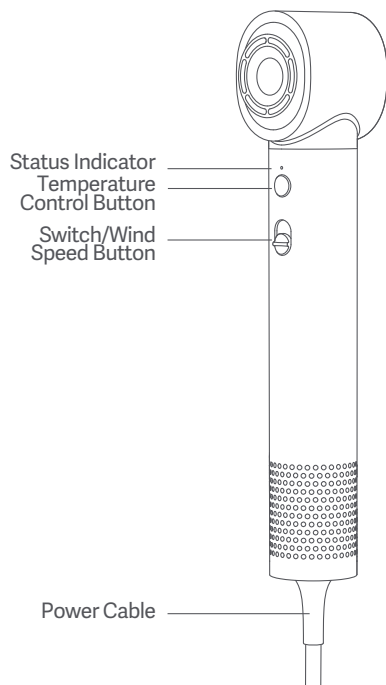

This symbol on the fuselage indicates
"WARNING : Do not use this appliance near water"

Annex

 
Gentle Air Nozzle



Modeling Nozzle



Wall-mounted Storage Rack



Storage Bag



 
Product installation

Installation of accessories


To facilitate convenient use of this product, it is equipped with special nozzle attachments. When using the hairdryer, the nozzle attachments can be directly attached to the hairdryer.

The two types of magnetic attachment nozzles can be easily attached by aligning the nozzles with the magnetic ring.


1. Gentle Air Nozzle

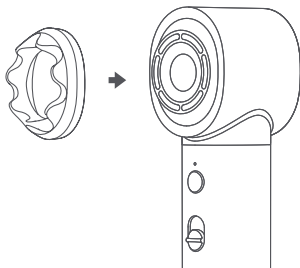

 
2. Modeling nozzle

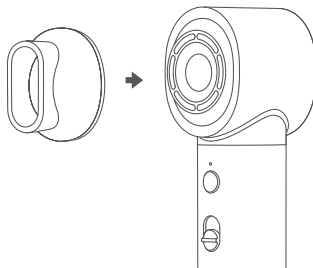

 3. Wall by

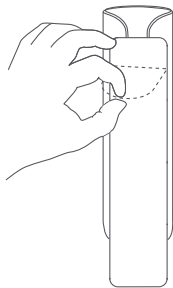

 STEP ONE:Uncover the sticker behind the wall-mounted storage rack;




STEP TWO:Paste on the wall at a suitable position;



Note

 When installing accessories, please turn off the blower and cool to normal temperature to avoid burns.

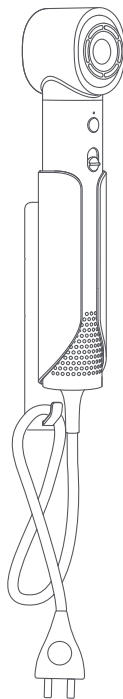


STEP THREE:The wall-mounted hair dryer vertically into the storage rack, the hook hung on the power line;

Product use


Switch/wind speed adjustment

 Switch is pushed up to open the blower speed in the standard default file, continue to push up the switch Winds potent gear, pushed down to the bottom of the switch, close the hair dryer.

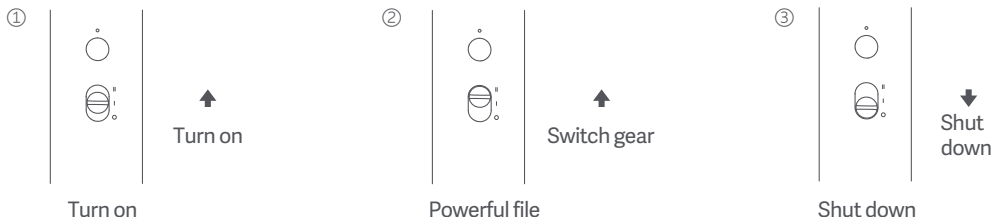

Temperature control button

 In the running state, click the temperature control button to switch between the three modes of cold air/warm air/hot air.

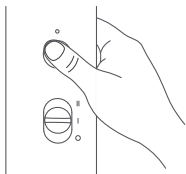


Indicator status	Wind temperature state
Blue light	Cold wind
Yellow light	Warm air
Red light	Hot air


Product Cleaning

Before cleaning the product, please make sure to unplug the product from the main power socket and clean it after turning it off and cooling.

 1.Wipe the air outlet with a paper towel or towel,deal with attachments such as dust or hair.

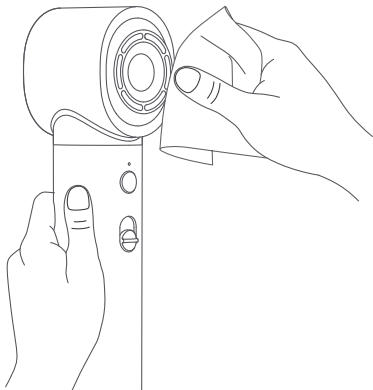

 2.Use dry lint-free cloth, soft brush, toothbrush and other tools;Remove the attachments on the surface of the stainless steel filter screen at the air inlet.

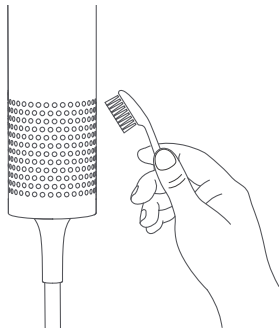

CAUTION

1. After use, please be sure to turn off the power and unplug the socket.
2. It is recommended to clean it regularly, and if there is dust and other foreign objects attached or blocked, please clean it in time.
3. Do not clean the filter with water.

Basic Parameters

Product name	High Speed Hair Dryer	Product model	CFJ01RM/CFJ01RMB/CFJ01RM*
Rated working voltage	220V-240V~	Rated power	1000W
Rated frequency	50Hz-60Hz	Dimensions	243×38×49.7mm

Warranty Description

This product is guaranteed for a period of 12 months(defined by local law)from the date of purchase against any failure resulting from manufacturing or material defects.

This warranty does not cover damage caused by improper installation, improper use, or normal wear and tear of the product.

More specifically, the warranty does not cover:

Damage or problems caused by improper use , accident , alteration or electrical connection of improper intensity or voltage.

Modified products , those whose warranty sel or serial number have been damaged , altered , removed or oxidized.

Failure of the battery due to overcharging or failure to observe the safety instructions explained in the instruction manual.

Cosmetic damage , including scratches , dents , or any other element .

Damage caused by any intervention carried out by an unauthorised person.

Defects caused by normal wear and tear or due to normal ageing of the product .

Software updates due to a change in network setting.

Product failures due to the use of third party software to modify , change or adapt the existing software.

Product failures caused by use without accessories approved by the manufacturer.

Oxidised products .

Product performance failure table

Name	Performance failure
High Speed Hair Dryer	Cannot turn on/off under normal use
	The temperature control button does not work under normal use

Terms and conditions of implementation:

To obtain a warranty service, you are requested to return your product to the customer service desk of your retail outlet with your proof of purchase(receipt, invoice,...),the product and its supplied accessories, with its original packaging.

It is important to have the date of purchase ,the model and the serial or IMEI number on hand as information(this information usually appears on the product, the packaging or your proof of purchase).

Failing this, you must return the product with the accessories necessary for its proper operation(power supply, adaptor, etc.).

In the event that your claim is covered by the warranty, the after-sales service may, within the limits of local law, either:

Repair or replace defective parts.

Exchange the returned product with a product that has at least the same functionality and that is equivalent in terms of performance.

Refund the product at the purchase price of the product mentioned on the proof of purchase.

If one of these 3 solutions is used, this does not give rise to the extension or renewal of the warranty period.

Product warranty card

Username		Product name and model	
Mailing address		Product host serial number	
Contact details		Product purchase date	

This warranty card contains consumer personal information, please keep it properly by yourself

Product maintenance record

Repair centre	Fault description	Replacement parts	Maintenance engineer	Repair date



RoHS



CLASS II EQUIPMENT

Manufacturer:ROIDMI INFORMATION TECHNOLOGY CO., LTD.

Address: 4F,C8 BUILDING,NO.1699 HUIZHAN ROAD,LIFE SCIENCE AND TECHNOLOGY PARK,HUIZHAN DISTRICT, WUXI,JIANGSU,PRC

Executive Standard:(EC) 1275/2008: 2008-12-17;Amended by (EC) 278/2009:2009-04-06, (EC) 642/2009:2009-07-22, (EU) 617/2013:2013-06-26; (EU) 801/2013:2013-08-22 ; EN 50564:2011;EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A14:2019+A2:2019; EN 60335-2-23:2003+A1:2008+A11:2010+A2:2015;EN 62233:2008;EN 55014-1:2017/A11:2020;EN 55014-2:2015;EN 61000-3-2:2014; EN IEC 61000-3-2:2019;EN 61000-3-3:2013;EN 61000-3-3:2013/A1:2019;2011/65/EU

Service Email : wxrm@roidmi.com

Enterprise Website: www.roidmi.com/en

No.09.2021

Made in China



