



LightSYS Plus Wiring Diagram

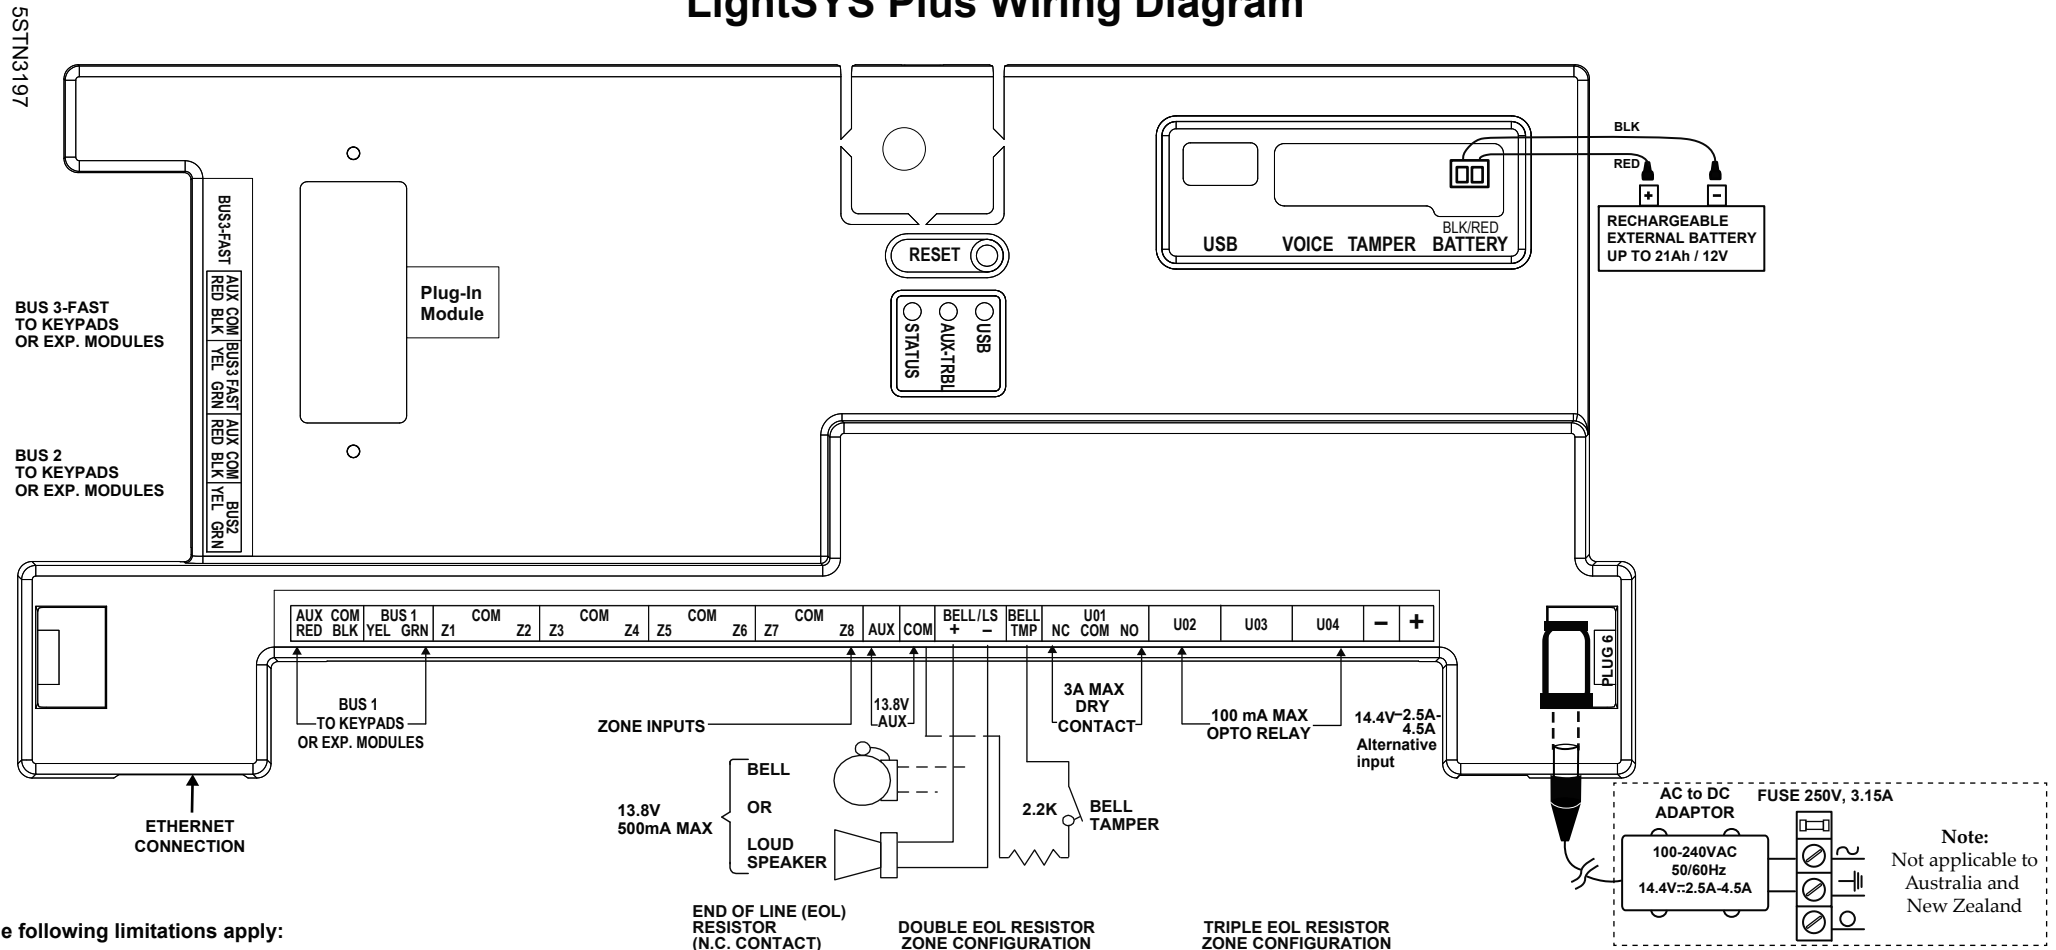

The following limitations apply:

1. Maximum current draw from each bus ("AUX RED" terminals) is **500mA**
2. Maximum current draw from the Bell/LS terminal is **500mA**
3. Maximum current draw from the AUX terminal is **1A**
4. Maximum total current draw from Aux, bus and bell is **2A** when using **2.5A** Power supply
5. Maximum total current draw from Aux, bus and bell is **3A** when using **4.5A** Power supply

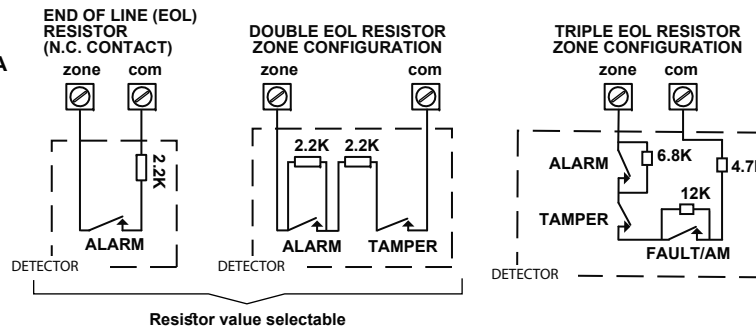

WARNINGS

- To prevent risk of electric shock, disconnect AC, battery and phone cord **BEFORE** servicing.
- Risk of explosion if battery is replaced by an incorrect type. Battery should be inspected at least once a year. Used batteries must be disposed according to battery manufacturer's Instructions.
- Refer to User's and Installer's Manual for detailed information on system operation and installation.