



## Add or Delete RF Repeater

### Add RF Repeater

Notice! Solution 2000 does not support RF repeaters. For Solution 3000, set RF receiver as RADION Receiver B810

# 1

- Enter the Installer Code, followed by [0] and the [#] key (for example, [12340#]).

# 2

- Enter the point ID of RADION Repeater (822 to 829) you want to add (822 = 1, 823 = 2, etc.), followed by the [#] key. Repeater number (1 to 8) displays on the ICON codepad

# 3

- Use manual mode or auto mode to configure Repeater RFID.
  - In manual mode, enter the 9-digit RF Repeater ID number, followed by the [#] key.
  - Or press [#] key to switch into auto mode. When icon numbers (1 to 16) flash, tamper the RF Repeater. The panel learns the RF Repeater ID number and the last digit of RFID number displays on the codepad. Press [#] key to confirm.

# 4

- Enter the Installer Code, followed by [0] and the [#] key (for example, [12340#]).

### Delete RF Repeater

# 1

- Enter the Installer Code, followed by [0] and the [#] key.

# 2

- Enter the point ID of RADION Repeater (822 to 829) you want to delete, followed by the [#] key.

# 3

- Press the [\*] key to delete the RF Repeater.