



www.china-topoint.com



NINGBO TOPOINT PRECISION MACHINERY CO.,LTD

ADD: No.66,Longtanshan Road 2,Daqi Town, Beilun District,

 
Ningbo 315806,Zhejiang,China

Tel: +86-574-86881809 Fax: +86-574-86109225

Compound Bow Owner's Manual

Please Read This Owners Manual Thoroughly For Usage Instructions And Safety Guidelines

Tiller of Upper Limb

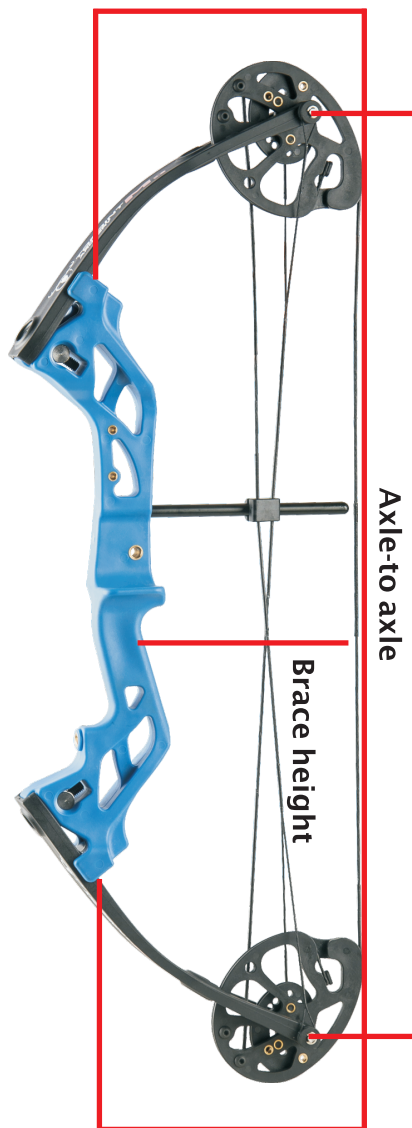

Tiller of Lower Limb

BOW BASICS

Axle to Axle is the length of the bow measured from the center of one cam axle to the other.

Brace height is the distance between the string and the pivot point of the bow grip (dee pest position of the bow grip).

 
Tiller is a measurement of the vertical distance between the limb pocket and string.

To ensure your personal safety and the safety of the people around you, please read through this instructions carefully before using your bow.

Please Comply with the following safety guidelines and warning while using the bow. You can also consult a dealer which is authorized by Topoint Outdoor company for any confusions.

Warning

1. The bow is used for archery competition only, practicing archery will help to strengthen your body.
2. Before using this bow, pls be sure to finish the checking of all parts carefully to avoid any damage or improper installation.
Pls ensure that the main string and cable strings are not scarred or broken, including D rope on the bow string and copper buckle. Check the limbs, cams and riser to ensure they can work properly. Any damage of these or other parts will break the structure of the bow and will seriously hurt yourself or the people around you while shooting.
3. Beware of the person and animals which is approaching you or your target. It's forbidden to aim at people. Don't aim the targets like ground, public buildings or other adamant substances.
4. TOPOINT ARCHERY WILL NOT RESPONSIBLE FOR any damage caused by abnormal or unreasonable use of the bow. Like using too light or too short arrows, damaged arrows or DIY the bow.
5. It is strictly prohibited to use this bow after drinking, taking drugs or during other mental unconsciousness occasions.
6. Arrows used on the bow must not be less than the weight recommended by manufactures or authorized dealers. It is strictly prohibited to use arrows 5 grain/pound less than the arrows recommended. For example, if you use a bow of 70 pounds, be sure to use the arrows above 350 grain. Because if the arrow is not heavy enough, it will cause damage to the bow, even probably hurt yourself and the people around you. And will void the warranty provided by TOPOINT ARCHERY and Dealers.
7. Before shooting every time, be sure to check the arrow tail, feather and arrowhead. Make sure there is no damage on any parts of the arrows. Using damaged arrows will seriously hurt yourself or the people around.
8. Draw length should not exceed the marked draw length on the bow. It will cause damage to the bow and probably hurt you or people around while shooting.
9. MOST IMPORTANT! DO NOT DRY FIRE THE BOW. It's forbidden to pull the bow without an arrow, which will cause damage to the bow and may seriously hurt yourself and the people around you.
TOPOINT ARCHERY will not offer warranty for any dry fired bows.

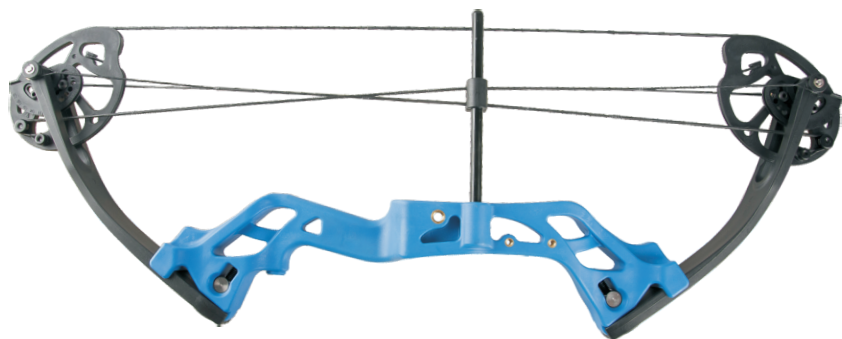

TOPOINT M3			
IBO Rate	Up to 260 fps	IBO 箭速	Up to 260 fps
Physical Weight	2.54 lbs.	净 重	2.54 lbs.
Axle to Axle	26"	轮 距	26"
Brace Height	6.5"	弓档高度	6.5"
Let-off	75%	省力比	75%
Draw Weight	10-30 lbs, adjustable	拉 力	10-30 lbs,连续可调
Finish	Material base color/ Camo	表面处理	磨砂/迷彩水转印
Bow Limbs	PA + 30%GF	弓 片	增强尼龙+30%玻璃纤维
Riser	PA + 30%GF	弓 把	增强尼龙+30%玻璃纤维
Draw Length	17 - 27", without Bow press	拉 距	17 - 27", 免开弓器
Cam	Dual/Adjustable	凸 轮	双凸轮
String Length	48.6"	主弦长度	48.6"
Cable Length	28.74" X 2	副弦长度	28.74" X 2

DRAW WEIGHT ADJUSTABILITY

Using a 3/16" Allen Key to rotate the screws on the limbs can adjust the draw weight, make sure that the turns of the two screws is the same for each rotating.

 
Clockwise turning will increase the draw weight, counterclockwise turning will decrease the draw weight. Each full turn equals increasing or decreasing 3 pounds. You can rotate up to 7 turns at most.




Dual cam

The TOPOINT M3 is assembled with dual cam system with a large adjustment range. The draw length adjustability range is from 17"-27" without a bow press.

To adjust draw length, you can remove the screw from the module. Then rotate the draw module. Reinsert the draw length screws, snug the screw into right position and retighten (do not over tighten) it. Repeat the procedure on the second cam. Pls make sure both modules are set in the same draw length position.

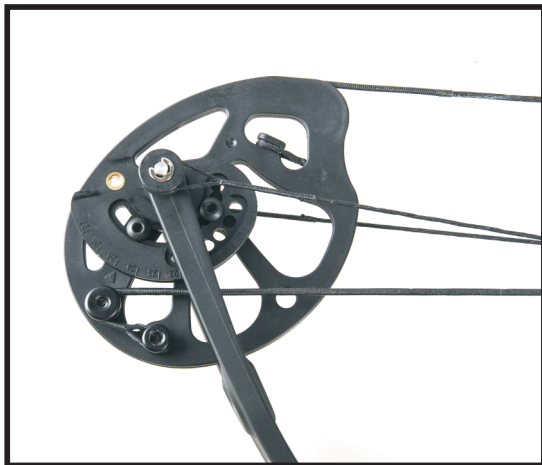


Upper Cam :

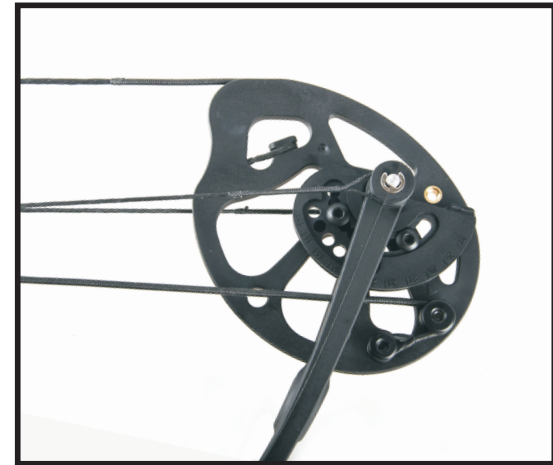 


Lower Cam :



 How to fix the accessories?

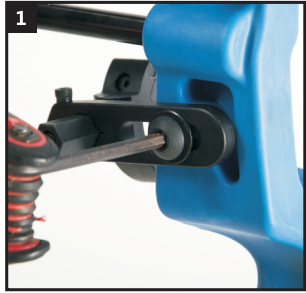

 Use the wrench install the screw like picture 1 fix the arrow rest on the riser

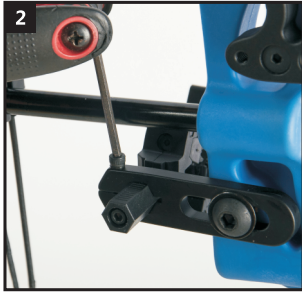


Like picture 2 screw off can adjust the arrow rest to left /right




Reminder : The screws should be fix in the middle line holes like picture 3



 Use the wrench install the bow sight on the riser like picture 4

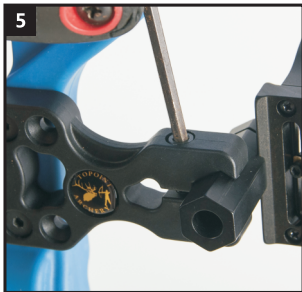

 Like picture 5 screw off can adjust the bow sight to left / right

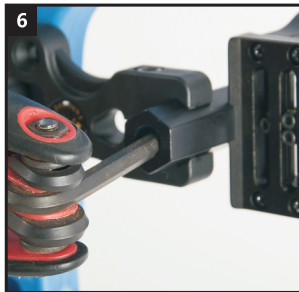

Like picture 6 screw off can adjust the bow sight up/down



Like picture 7 screw off can adjust the pins up/down



Install the stabilizer together with sling on the bow like picture 8&9



Storing And Maintaining Your Bow

Your Topoint Archery Bow Is A Precision Instrument That Requires Professional Tools and Expertise in Archery. So All Maintenance And Repair Should Be Performed By An Authorized Topoint Archery Retailer to avoid any damage to the bow or Serious self Injury. DIY your bow will Void Your Warranty by Topoint Archery.

NOTE: Always Keep Your Bow String And Cables Waxed.

NOTE: Never Expose Your Bow To Extreme Heat Or Prolonged Moisture. Such As The Trunk Of A Vehicle Or In A Garage. It will Damage To Your Limbs, Strings and Other Parts Of The Bow. All damage caused by these situations void The Manufacturer's Lifetime Warranty.

NOTE: If Your Bow Becomes Exposed To Moisture, Be Sure it is Completely Dry Before Storing It. Do Not Use Solvents, Sprays Or other Chemical Cleaners to clean Your Bow as They May hurt The Finish due to chemical reaction. You can Use A Damp Cloth To Clean.

Free Charged Maintenance

1. Defects In Materials And Workmanship Includes All Bow Parts Except The String And Cosmetic Appearance caused By Normal Use.

2. **WARRANTY** against to Riser and Cams, but not damage caused by wrong performance. Charged Maintenance

1. Lack of accessories caused by abnormal use.

2. Damage on the bow caused by abnormal use.

3. Damage of the accessories on the bow caused by abnormal use.

All Warranty Claims should be Processed Through An Authorized Topoint Retailer. Your Authorized Topoint Archery Retailer Will Contact Topoint Archery Warranty Technician for Any And All Warranties, Written Or Implied, Are Void With Any Alterations To The Bow Including Cosmetic Refinishing.

NOTE: Topoint Archery Reserves The Right To Make Substitutions On Warranty Coverage For Any Reason, Including But Not Limited To Available Parts And/Or Camo Patten Authorized.

请仔细阅读操作手册上的使用说明和安全防范措施

在使用弓之前，请遵守以下安全指导方针和警告，有任何疑问，请咨询顶点授权经销商。为了确保您个人的安全还有您周围的人的人身安全，请仔细阅读并理解和遵守所有的警告和安全防护措施，然后您才可以安全的使用您的弓。

警告：

1. 此弓的使用场合，限制在射箭馆，射箭体育比赛场上，强身健体为目标；
2. 使用弓前，一定要仔细检查所有零件，是否有破损，是否安装到位，保证主弦和副弦没有伤痕或者断裂，仔细检查弓弦上的D绳，铜扣，保证没有损坏，仔细检查弓片，凸轮和弓把，保证没有损坏，受损的零件会导致箭支射出的瞬间，可能严重伤害到自己 and 周围的人；
3. 严禁瞄准人和你不想瞄准的目标，确保没有人，动物，建筑物，道路或者其它正在接近你的目标的物体，确保目标有足够的厚度，不会被射穿；
4. 由于非正常使用，弓，箭配合不合理，过轻或者过短的箭支，受伤的弓，破损的箭支，或者改装弓，造成的损失，顶点一概不负责；
5. 严禁在吃过药物，喝酒，吸食毒品等神志不清的情况下使用此弓，因判断力和反应下降，造成本人或周围人的伤害，顶点一概不责任；
6. 射箭中使用的箭必须不低于授权经销商推荐的箭支重量，严禁使用低于5格林/磅重量的箭支，比方说，你使用的弓的拉力为70磅，请使用不低于350格林的箭支，如果箭支重量不足，会造成弓的损坏，严重的情况下，可能严重伤害到自己 and 周围的人，也不符合弓的保修政策；
7. 每次射箭之前，必须检查你使用的箭支，箭尾，箭羽，箭头，是否有破损或裂开，严禁使用破损，裂开的箭支，严重的情况下，可能严重伤害到自己 and 周围的人；
8. 拉弓的距离严禁超过弓的标注拉距，严重的情况下，会造成弓的损坏，可能严重伤害到自己 and 周围的人；
9. 严禁空放，严禁在没有搭箭的情况下拉弓发射，会造成弓的损坏，严重的情况下可能严重伤害到自己 and 周围的人；

拉力调节

拉力调节范围10-30lbs，使用3/16"六角扳手转动锁紧弓片的螺丝，必须保证两头螺丝转动的圈数一致，顺时针转动，增大拉力，逆时针转动，减小拉力，每转动一圈，相当于增加或减小大约3磅拉力，最多能调松7圈。

减少磅数



 
增加磅数

拉距调节

顶点M3复合弓凸轮系统拥有良好的性能和可调性。拉距调节范围为17" - 27"。调节拉距时,请使用对边距1/8"的内六角扳手,拧出凸轮上固定拉距模块的螺丝,转动拉距模块,选择适合自己的拉距值,使凸轮上的三角标对齐模块上相应的刻线,最后找到对应的孔位将螺丝拧到凸轮上把模块锁紧,不要过度拧紧螺丝。另一端的模块也调至相同拉距。




上凸轮:

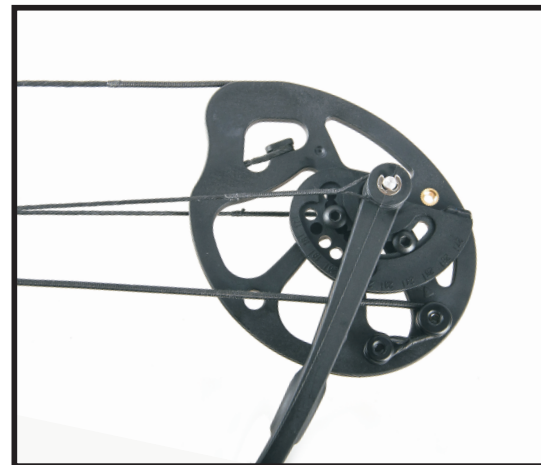


下凸轮:



 配件安装

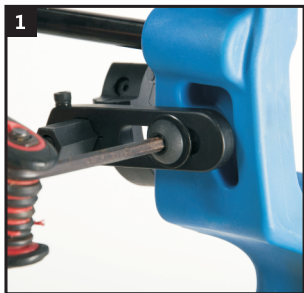

将箭台按照如图1所示, 利用箭台固定螺丝, 安装到弓把上。

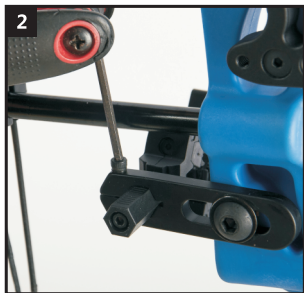 


如图2所示, 螺丝拧松后可调节箭台的位置。




如图3所示接下来开始安装瞄准镜, 首先将瞄准镜上面两个螺丝取下。



 
用瞄准镜固定螺丝将瞄固定到弓把上(注意: 螺丝是拧在瞄准镜中间那排螺丝孔, 如图4所示)

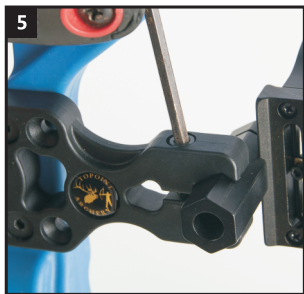

如图5所示, 螺丝拧松后可调节瞄准镜的左右位置。

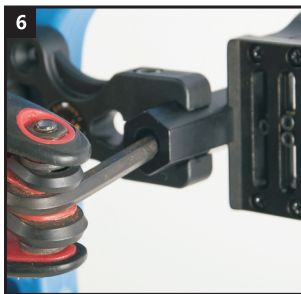 

如图6所示, 螺丝拧松后可调节瞄准镜的上下位置。

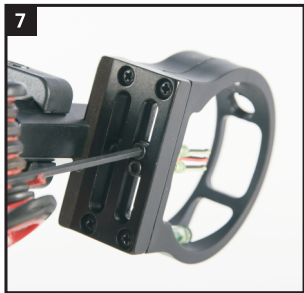 

如图7所示, 螺丝拧松后可调节对应瞄点的上下位置。



如图8所示将腕绳上面的孔与弓把上安装孔重叠。



减震安装到弓把上旋紧, 以防脱落。

弓的维护和保养

顶点精工生产的复合弓结构复杂, 维修和拆装都需要专业的工具, 因此建议所有的维修都通过你购买的授权经销商, 如果私自拆卸或者改装造成弓的损坏和人身的伤害, 顶点公司概不负责。

注意:

1. 经常为主弦和副弦上蜡;
2. 不要把弓长期保存在极端高温或者潮湿的地方, 如车辆的后备箱或者车库, 这样会造成复合弓弓片, 各种减震和其它零件的损坏, 会影响弓的使用寿命;
3. 如果弓用湿布清洁后, 请保证弓在晾干后再保存, 禁止使用各种清洁剂, 会跟弓的表面发生化学反应, 造成表面的破坏。

顶点保修条款

保修条款适用于顶点官方授权经销商出售的一手弓(须提供交易订单)。

一、免费保修:

- 1、因产品零配件不合格引起的不能正常使用的产品, 免费保修;
- 2、弓把, 凸轮终身免费保修;
- 3、产品外观, 易损件及包装不在保修范围;
- 4、人为损坏的部件不在保修范围之内。

二、收费维修:

- 1、因客户非正常使用引起的配件缺少;
- 2、因客户非正常使用引起的外观磨损;
- 3、因客户非正常使用引起的配件损坏(含易耗件);
- 4、因以上原因导致的包装物的更换;
- 5、因以上原因产生的往来运输费用。

售后热线: 0574-86881809

售后地址: 宁波北仑大碇街道龙潭山二路66号