

请仔细阅读操作手册上的使用说明和安全防范措施

在使用弓之前,请遵守以下安全指导方针和警告,有任何疑问,请咨询顶点户外授权经销商。

为了确保您个人的安全还有您周围的人的人身安全,请仔细阅读并理解和 遵守所有的警告和安全防护措施、然后您才可以安全的使用您的弓。

警告: 此弓的使用场合, 限制在射箭馆, 射箭体育比赛场上, 强身健体为目标;

警告: 使用此弓前,一定要仔细检查所有零件,是否有破损,是否安装到位, 受损的零件会导致箭支射出的瞬间,可能严重伤害到自己和周围的人;

警告: 严禁瞄准人和你不想瞄准的目标,确保没有人,动物,建筑物,道路或者其它正在接近你的目标的物体,确保目标有足够的厚度,不会被射穿;

警告:由于非正常使用,弓,箭配合不合理,过轻或者过短的箭支,受伤的弓,破损的箭支,或者改装弓,造成的损失,顶点户外一概不负责;

警告: 严禁在吃过药物,喝酒,吸食毒品等神志不清的情况下使用此弓,因判断力和反应下降,造成本人或周围人的伤害,顶点户外一概不负责任;

Please Read This Owners Manual Thoroughly For Usage Instructions And Safety Guidelines

Before Using This Equipment, please Abide By All Of The Following Safety Guidelines And Warnings, consult Your Authorized Topoint Archery Retailer With Questions.

To Insure Your Personal Safety And The Safety Of Those Around You, It Is Necessary That You Read, understand And follow All Warnings And Safety Precautions Prior To Using Or Working On Your Bow Or Any Archery Equipment Used With The Bow.

Warning: This Bow Is Intended Strictly for Recreational Use Only, The Warnings That Follow Are Specifically Directed To The Use Of The Bow;

Warning: Always Inspect All Accessories and Components Before USe The Bow, Any Damaged Or not Installed in place May Inflict Serious Injury To Yourself And Those Around You;

Warning: Make Sure That There Are No People, Livestock, Buildings, Roads Or Other
Objects Behind Or Near Your Target, Be Sure That Your Backstop Is Large
Enough To Catch A Stray Arrow And Athat Is Thick Enough That The Arrow
Can not Completely Penetrate Through It;

Warning: Topoint Archery Incorporated Shall Not Be Liable For Injuries Suffered Or Caused By Misuse, Unsafe Or Improper Arrow And Bow Combinations Or For Injuries Sustained When Using An Altered Or Modified Bow Or By Un-conventional Use;

Warning: Never Work On, Or Attempt To Shoot Your Topoint Archery Bow While On Medication Or Under The Influence Or While Consuming Drugs Or Alcohol, That May Impair Your Judgment, Physical Abilities, Or Reflexes, Doing So Can Result In Damage To The Bow, Inflict Serious Injury Or Even Death.



R2

竞技反曲弓R2说明书 Recurve bow R2 manual

1、R2参数表 Parameter table

净重	1.35kg
总长	172.5cm
弓把长度	63.5cm
弓弦长度	163.8cm
弓档高度	22.5cm
磅数	18,20,24,28,30,32,36,38lbs
弓把材质	铝合金
左右手	右手
颜色	粉红色,黄色,蓝色,绿色,紫色,黑色,白色

Net Weight	2.97lbs
Overall Length	68"
Riser Length	25"
Bowstring Length	64.5"
Brace Height	8.8"
Draw Weight	18,20,24,28,30,32,36,38lbs
Riser Material	Aluminum
Right/Left Hand	Right hand
Colour	Pink, Yellow, Blue, Green,, Purple, Black, White

2、安装弓片 Install limbs



3、安装弓弦 Install bowstring

弓弦小端 Bowstring little endian

上弓绳大头 Bow stringer big endian



①、弓弦大端套入上弓片

Bowstring big endian set into upper limb; ②、弓弦小端卡入下弓片卡槽

Bowstring little endian set into the string groove of the lower limb;

③、上弓绳大头套住下弓片

Bow stringer big endian entangle lower limb;



弓弦大端 Bowstring big endian

上弓绳小头 Bow stringer little endian



4、安装稳定器 Install bow stabilizer

稳定器固定座,美制5/16-24螺纹 Bow stabilizer permanent seat, 5/16-24unc thread



5、安装箭台 Install bow rest





箭台自带背胶,撕开箭台反面的背胶, 箭台孔与弓身上的孔对齐,按图示方向粘牢 The bow rest has glue on the rear,you can tear and glue it on the riser as shown,hole alignment。

6、安装瞄准器 Install bow sight





R3

美猎反曲弓R3说明书 Recurve bow R3 manual

1、R3参数表 Parameter table

净重	1.37kg
总长	147.3cm
弓把长度	45.7cm
弓弦长度	138.5cm
弓档高度	17.8cm
磅数	30,35,40,45,50lbs
弓把材质	铝合金
左右手	右手
颜色	粉色迷彩,森林迷彩,黑色迷彩,雪地迷彩,黑色

Net Weight	3.02lbs
Overall Length	58"
Riser Length	18"
Bowstring Length	54.5"
Brace Height	7"
Draw Weight	30,35,40,45,50lbs
Riser Material	Aluminum
Right/Left Hand	Right hand
Colour	Pink camouflage, Forest camouflage, Black camouflage, Snow camouflage, black

2、安装弓片 Install limbs



3、安装弓弦 Install bowstring

弓弦小端 Bowstring little endian

上弓绳大头 Bow stringer big endian



①、弓弦大端套入上弓片

Bowstring big endian set into upper limb;

②、弓弦小端卡入下弓片卡槽

Bowstring little endian set into the string groove of the lower limb;


③、上弓绳大头套住下弓片

Bow stringer big endian entangle lower limb;



弓弦大端 Bowstring big endian

上弓绳小头 Bow stringer little endian

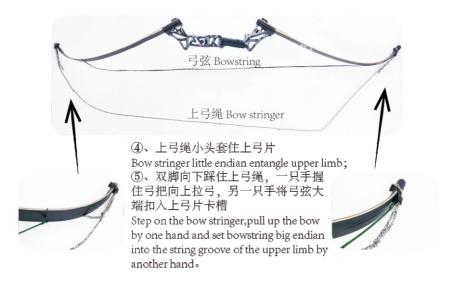

4、安装稳定器 Install bow stabilizer



5、安装箭台 Install bow rest



6、安装瞄准器 Install bow sight



顶点户外保修条款

保修条款适用于顶点户外授权经销商出售的一手弓。

- 一、免费保修:
- 1、因产品零配件不合格引起的不能正常使用的产品,免费保修;
- 2、弓把终身免费保修;
- 3、产品外观及包装不在保修范围;
- 4、弓弦免费保修一年;
- 5、人为损坏的部件不在保修范围之内。
- 二、收费维修:
- 1、因客户非正常使用引起的配件缺少;
- 2、因客户非正常使用引起的外观磨损;
- 3、因客户非正常使用引起的配件损坏;
- 4、因以上原因导致的包装物的更换;
- 5、因以上原因产生的往来运输费用。

Topoint Archery Lifetime Warranty

LIMITED LIFETIME WARRANTY:

Your Topoint Archery Bow Is Warranty Against Defects In Materials And Workmanship To The Original Registered Owner When Purchased At An Authorized Retailer, For The Life Of The Original Owner. This Includes All Bow Parts Except The String And Cosmetic Appearance (chips, dings, scratches) caused By Normal Use And Wear. All Warranty Claims Are Processed Through An Authorized Topoint Retailer. Your Authorized Topoint Archery Retailer Will Contact A Topoint Archery Warranty Technician On Your Behalf, Any And All Warranties, Written Or Implied, Are Void With Any Alterations To The Bow Including Cosmetic Refinishing.

LIMITATION OF LIABILITY:

Topoint Archery, shall Not Be Liable for Any Special Or Consequential Damages That Result From The Performance And Use Of The Products, Even If Topoint Manufacturing, Inc., Has Been Advised Of The Possibility Of Such Damages, Applicable Law May Not Allow The Limitations, Of Exclusion Of Liability Or Incidental Or Consequential Damages, So The Above Limitation Or Exclusion May Not Apply To You.

NOTE:

Topoint Archery Reserves The Right To Make Substitutions On Warranty Coverage ForAny Reason, Including But Not Limited To Available Parts And/Or Camo Pattem Authorized Topoint Archery Retailers May Charge For Warranty Work Perfomed. Limited Lifetime Warranty To The Original Owner



宁波北仑顶点户外体育用品有限公司

NINGBO BEILUN TOPOINT OUTDOOR SPORTS CO.,LTD

地址: 宁波北仑大矸街道龙潭山2路66号

ADD: No.66, Longtanshan Road2, Daqi Town, Beilun District,

Ningbo 315806, Zhejiang, China

Tel: +86-574-86881809 Fax:+86-574-86109225