

注意 /Note

1. 为了保证不空放，请确保拇指握住拇指手柄并用食指和拇指拉弓

To draw safely without misfire, lock thumb around thumb pin and draw bow with 1st finger and thumb.

2. 拉弓的时候必须确保小指部分保持向前旋转

Pinky side of handle must be kept rotated forward when you load and draw bow.

使用说明 Instructions

1. 首先确保撒放钩已经复位，用食指拨动撒放钩组件至极限位置保持撒放钩朝下然后快速释放

Make sure release hook is reset, push release hook components with index finger to limited position and keep release hook down and release quickly

2. 将撒放钩连接到 D 绳上

Attach release hook to D-Loop

3. 开弓时保持手柄的小指部分向前转动

Keep pinky portion of handle rotated forward when drawing

4. 准备撒放时，将手柄的小指部分向后旋转，直到听到滴答声

Get ready to release , turn pinky portion of handle rotated backward until hear the ticking sound

5. 用背部张力激发撒放

Use back tension to activate the release

NINGBO TOPOINT PRECISION MACHINERY CO.,LTD

ADD: No.66,Longtanshan Road 2,Daqi Town,Beilun District,

Ningbo 315806,Zhejiang,China

Tel: +86-574-86881809 Fax: +86-574-86109225



www.china-topoint.com




**TOPOINT
ARCHERY**



背加力撒放 TP462 说明书

Bow Release's TP462 Manual

产品详解 Product Details

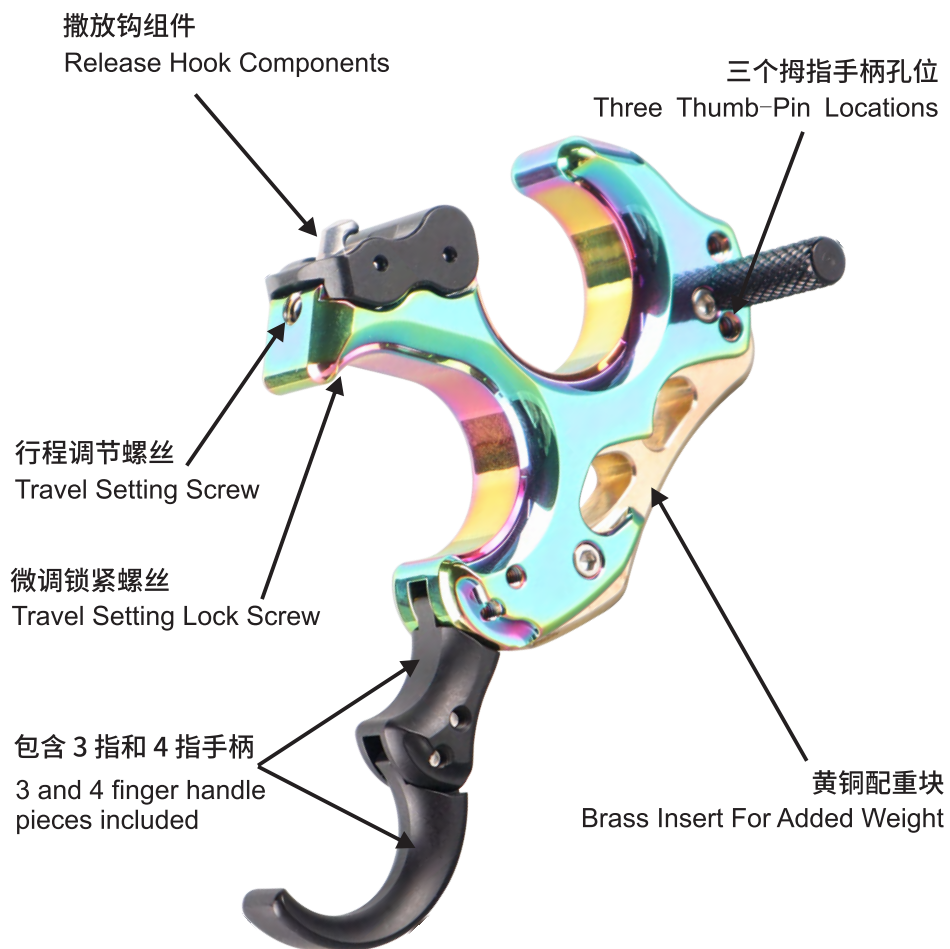

行程调节 Travel Setting



1. 调节撒放行程之前请松开锁紧螺丝
Loosen Lock Screw Before Adjustment
2. 顺时针转动螺丝可缩短撒放行程，逆时针转动螺丝可增加撒放行程。
Turn Travel Setting Screw Clockwise For Less Travel Turn Travel Setting Screw Counter-Clockwise For More Travel

握把适配调节 Finger Handle Piece Fit Adjustment



用一个 5/64" 的扳手松开螺丝，然后调节手柄到合适的位置，最后拧紧螺丝，注意不要过度拧紧。你可以选择安装 3 指或者 4 指手柄。

Use a 5/64" wrench to loosen the screws and adjust handle to desired position and retighten, do not overtighten. You can install desired finger handle piece/pieces.