

PORTABLE GAS OVEN STOVES

Instruction For Installation And Use



Model: GCO02SS

 
IMPORTANT: Please read this instruction carefully before using the appliance. Always keep this manual in a place where could be seen at any moment.



Contents


Spare Parts Name	1
Instructions	2
Trouble Shooting	3
Emergency Treatment and Product Specification	4
Cleaning and Maintenance	4
Safety Caution	5
Specification Information	8

Spare Parts Name

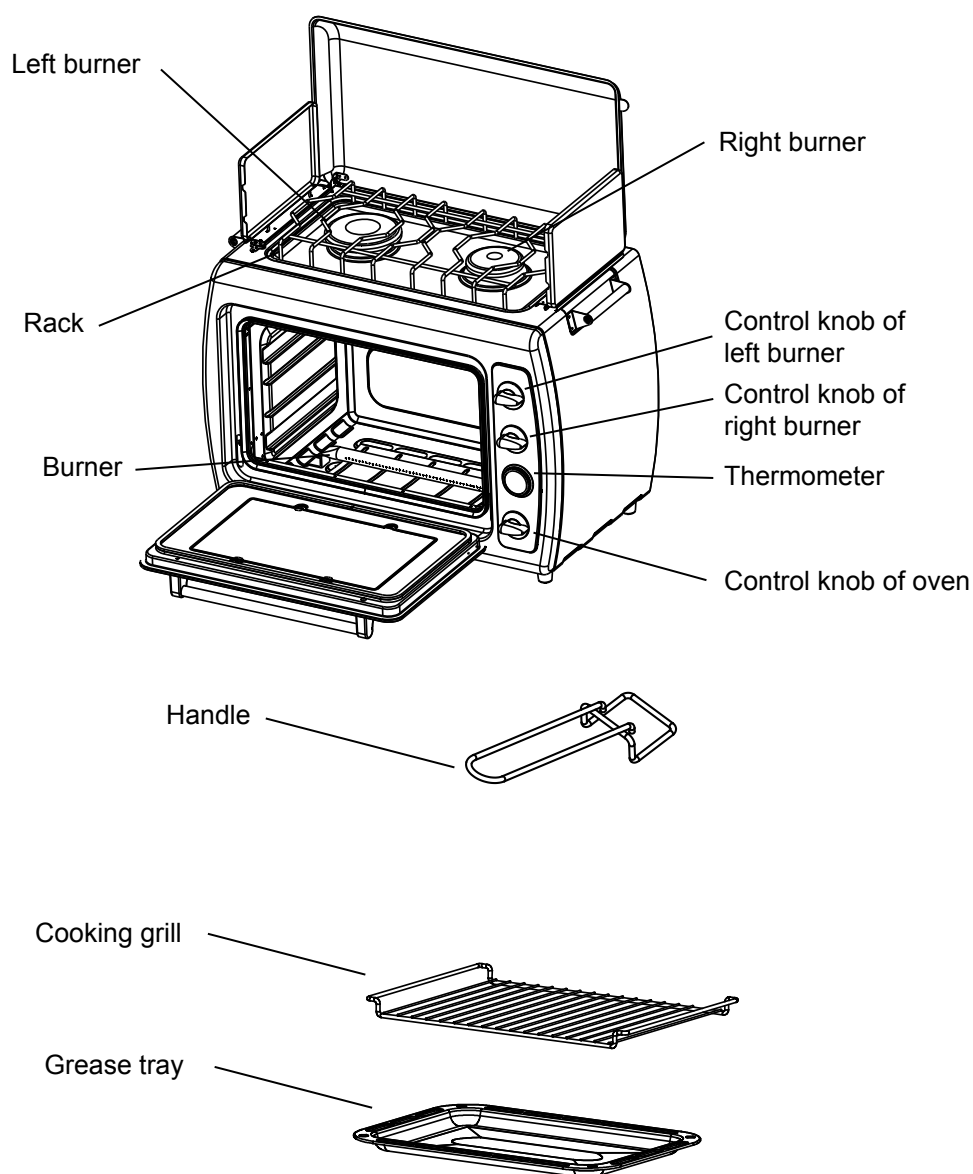

Terms and conditions

 - Put the food on the mid-layer, it takes more time but makes the goods more delicious!
- Use the salt or another marinade to cover the meat after a certain time, it tastes better.
- This device only can use low-pressure butane, propane, or LPG, with a suitable qualified regulator and hose, the hose should be connected with the device and regulator by hose nut carefully.

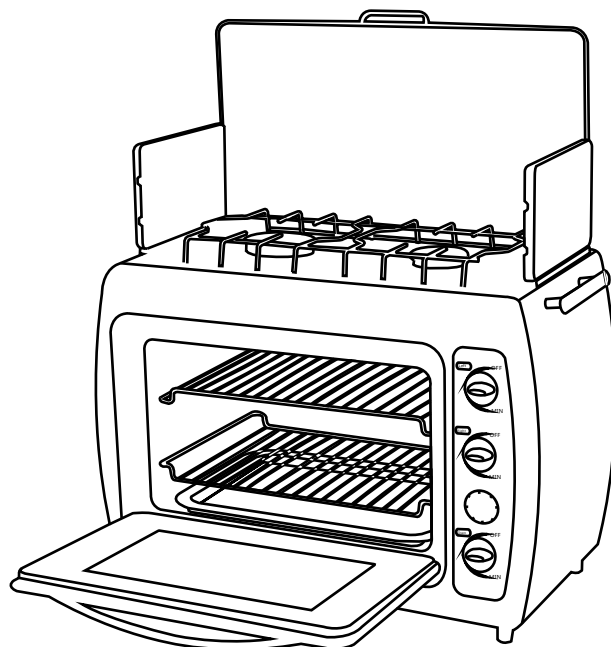

Time for cooking and power of fire (below details is for reference only)

Food	Toast	Hot dog	Pizza	Roast shrimp	Roast fish	Roast duck	Egg-plant	Chicken wing	Spare ribs	Sweet potato
Temperature	Low	High	Medium-high	High	High	High	High	High	High	High
Time	3-5 mins	10-12 mins	20-25 mins	10-15 mins	13-15 mins	30-35 mins	25-30 mins	18-20 mins	18-20 mins	30-35 mins

You can adjust the time, fire, cooking grill's layer as personal interest according to different food.

Instructions

Operation step and functions

- After connecting the cylinder, need double confirm there is no leakage, then put the grease tray and cooking grill in the right place.
- First time use the appliance, should close the door without any food inside, use high fire to cook 5 mins, for high-temperature disinfection and smell remover.



- First time use the grease tray, also should use high fire to cook 1 min for high-temperature disinfection and smell remover.
- Cooking grill with tinfoil covering is used for cooking spare ribs, chicken wing, chicken, shrimp, and vegetables, etc.
- Upper burner is used for making soup, rice, noodles and boil water, etc.

Use tips

- * As always use the appliance outdoor which needs to remove the hose, there is lots of air inside the hose, it lowers the ignition success rate. So suggest that pressing the valve of the burner for 3~5 seconds to let out the air.

Lighting instruction

- * Open the glass door and remove the grease tray, push down the control knob for 3 seconds, then turn it anticlockwise to the 90° position, when you saw it is lighting, still keep pushing the knob for 5 seconds then leave it. If the burner has not lit, turn the knob 'OFF', and repeat the step above until it is lighting.
- * If the burner has not lit after 3 attempts, wait 3 minutes and repeat the above steps.
- * After the burner is lighting, you can adjust the flame by turning the control knob between high and low, this no need to push down the knob.
- * After using the appliance, turn off the valve of the gas cylinder, then turn off all the control knob after the fire gone.

Trouble Shooting

- If you find any problem with the appliance, contact the after-sale department by email, inform serial no., and detail phenomenon.
- You have to pay the material cost if due to the expiration of guarantee time.

The below state might not be a failure, to save your time, please check it carefully before email customer service.

Exception	Cause analysis	Solution
Failure of ignition ①	The hose contains much air or cold weather.	Light the upper burner first then light the oven, or use the ignition gun.
Failure of ignition ②	Use a non-standard, adjustable regulator.	Must use the fixed regulator with 2.74 kPa.
Failure of ignition ③	The gas is impure or with high impurity.	To judge the gas pure or not, you can see the fire. Fire in blue means pure, fire in red means impure.
Temperature rises slowly	In outdoor environments humidity, the temperature is not constant.	Warm up the oven to 392°F before putting the food inside, also try to put the oven in a sheltered corner.



Emergency Treatment and Product Specification

Emergency treatment

- When using the appliance, if always with smoke or catch fire, please turn it off as soon as possible, also turn off the gas valve, contact with the after-sale department soon!
- If the hose of the appliance is damaged, please contact the after-sale department directly. Never modify the device by yourself or other people to avoid any danger.

Specification

Item \ Type	GCO02SS
Left burner power output	8500 BTU
Right burner power output	5100 BTU
Oven burner power output	5100 BTU
Power source	1 lb. propane bottle (use over 39.4 inches length hose, product package include the hose)
	20 lb. propane tank (use over 59.1 inches length hose, product package not include the hose)
Dimension (LxWxH)	24.80"x14.37"x19.69"
Weight	33.07 lbs
Capacity	1.41 Cu.ft / 40L

Cleaning and Maintenance

- Please cleaning the oven only after the appliance is totally cool.
- Never clean the surface with crocus (detergent), volatile oil, acid-base solvent, these will damage the surface treatment.
- Please use the soft towel to clean the outer body, to avoid scratch (as photo).
- About the greasy dirt, please use the soft towel with dish detergent to scrub, and must pat dry with a dry towel, avoid rust.
- If there is greasy dirt inside the glass window, is difficult to be cleaned after is dry, you can use the scouring pad to clean it, in appropriate intensity, don't too overexert to scratch the glass.



Safety Caution (Must Following)


Please be sure to the following items to prevent any harm and property damage accidents for the user and others.


- For strengthening emphasize the below details, here will explain more about the below marks:

⚠ WARNING It means "It might cause death or serious injury"!

⚠ Caution It means "It might cause injury or property damage"!

 
- For more details, please check the below mark and instruction for reference:

 This symbol means "PROHIBIT"!


 This symbol means "ENFORCE".

Warning


- It will reduce the appliance's service life if used for commercial use!

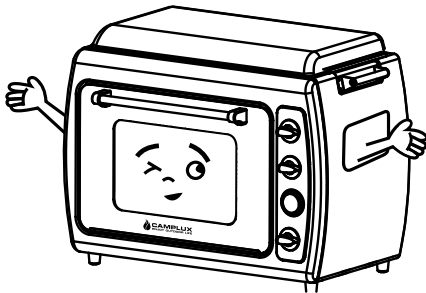

 
- Never allow children to use this appliance alone!

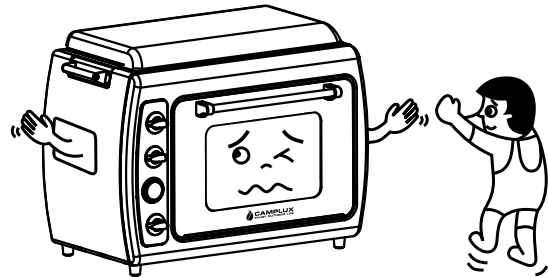

 - Gas type: butane, propane LPG, natural gas. The hose's length must more than 39.4 inches, and the gas cylinder should be put at least 39.4 inches away!

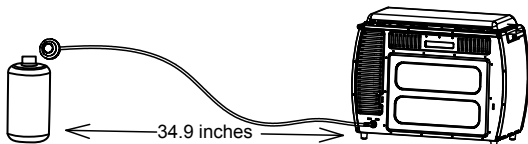

 - Never clean the device with chemical liquid solvents!

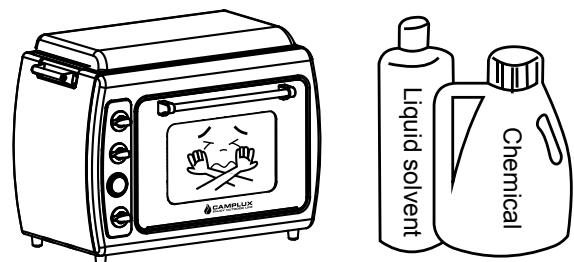


Warning


- Never store gasoline or other flammable gases or liquids around the appliance.



 
- Outdoor use only or use in well-ventilated places, such as balconies.

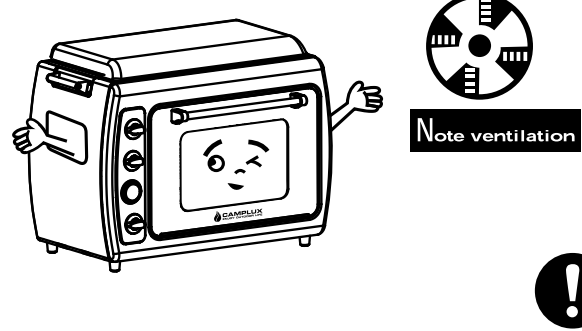

 
- Never place the appliance on a soft, uneven floor or grass, to prevent dumping, it might burn the grass and tree then cause danger.

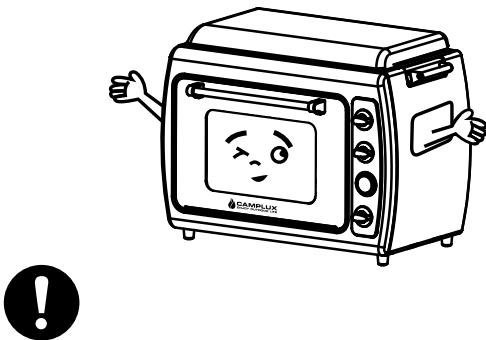

 
- When not use the appliance for a long time, please dean it can if any cause carefully and check if any cause mouldy or rust, then put it into carton. Put the carton in a less moisture place. Ensure the appliance far away from the gas cylinder.

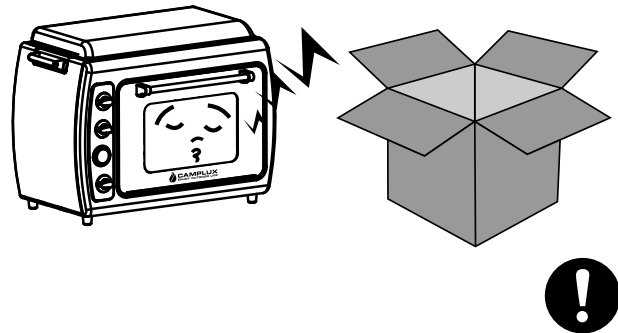

 - When using the appliance outdoor, avoid sun exposure, and avoid the place might have something fall off at any time.

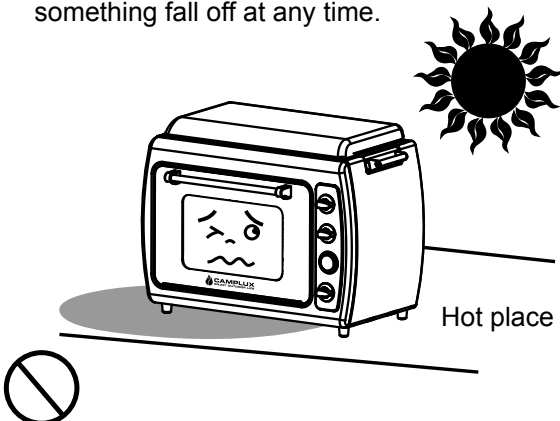


 - Be careful when lighting the burner and notice the fire, must turn off the control knob after cooking, and double confirm the fire gone or not at the same time.

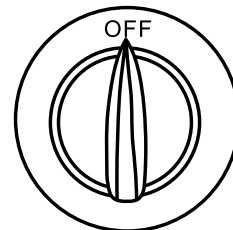


Warning

 
- Except for the door handle and 2 sides handle, do not touch another place of the appliance when using or just turn off the fire, to avoid any scald.

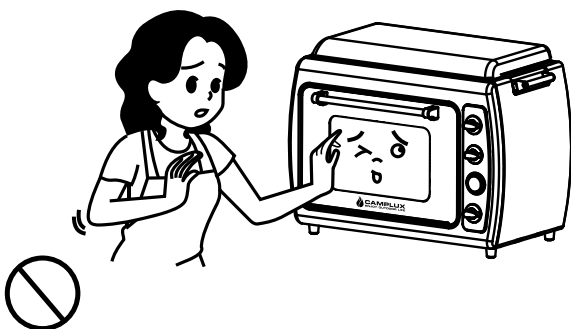

 
- Fix the appliance in a safe place when transportation and do not let it throw, remember far away from the gas cylinder.

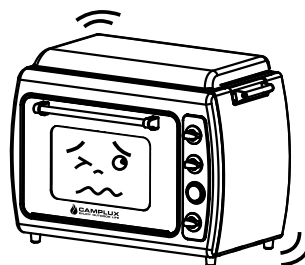

 - If there is the strong smell when using the appliance, please turn off the gas supply and put off the fire at once, also open the glass window!

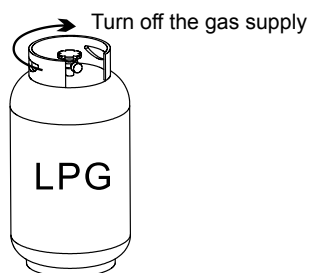

 - Must use the appliance with country pressure standard and safety standard's qualified regulator and hose, is very dangerous for using the unqualified regulator and hose!

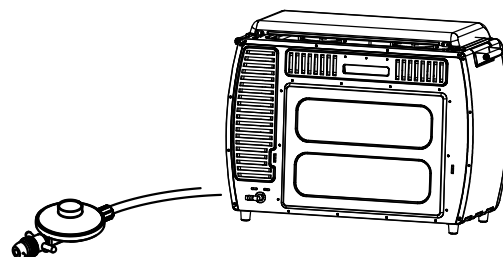

- The first time use the appliance, it might have smoke from the inside oven, this is normal and please keep using it!
- Do not use the damaged hose!
- Never place the appliance on a plastic cloth or soft pad material to avoid the fire risk!

Particular Caution:

When cooking break, do not use high fire for more than 5 minutes, also when cooking meats which has too much fat do not cook a too long time, this foods might catch fire!

- Never go away when using the appliance!

All maintenance services are according to the original parts, if use non -original parts on the product and cause any damage, the company is not bear any responsibility for a 1-year guarantee!



Specification Information

Model no.		GCO02SS
Description		Portable gas oven stoves
Total power output		18,700 BTU
Capacity		1.41Cu.ft / 40L
Gas type		Propane
Power source		1 lb. propane bottle (use over 39.4 inches length hose, product package include the hose)
		20 lb. propane tank (use over 59.1 inches length hose, product package not include the hose)
Inlet gas pressure		2.74 kPa
Injector size	Left hotplate burner	0.77 mm
	Right hotplate burner	0.63 mm
	Oven burner	0.59 mm
USE OUTDOORS ONLY.		
<p>READ THE INSTRUCTIONS BEFORE USING THE APPLIANCE.</p> <p>WARNING: ACCESSIBLE PARTS MAY BE VERY HOT. KEEP YOUNG CHILDREN AWAY.</p> <p>THIS APPLIANCE MUST BE KEPT AWAY FROM FLAMMABLE MATERIALS DURING USE.</p> <p>DO NOT MOVE THE APPLIANCE DURING USE.</p> <p>TURN OFF THE GAS SUPPLY TO THE GAS CYLINDER AFTER USE.</p> <p>DO NOT MODIFY THE APPLIANCE.</p>		





📍 3330-A Marathon Ct Charleston, SC 29418

🔥 Visit Us: [Camplux.com](https://www.camplux.com)

CAMPLUX

✉ support@camplux.com

