



Extreme Ultra

Ultimate Leak Stop for HVAC&R and Automotive

EXTREME ULTRA is a leak stop which represents the evolution of Extreme, with a higher effectiveness that has allowed the reduction of the dosage to be used within the plant. Specifically designed to permanently repair micro leaks both in rubber and metal parts of a system, EXTREME ULTRA guarantees the total reparation of leaks up to 0.3 mm. Its mechanical action works in affinity with the plant materials without giving place to any kind of chemical reaction. EXTREME ULTRA is polymer free: this means it is not reactive to oxygen and moisture. It is suitable for any type of lubricant and refrigerant gas. While designing it, a particular attention was paid to the new ecological refrigerant gases R1234yf, R1234ze.

EXTREME ULTRA has been widely tested on many models of compressors to ensure the normal operation and the absence of damage risk. Furthermore it has been shown that there is a reduction of the compressor noise. Similar evidence were found in the interaction with the recovery station that is neither clogged nor damaged.

The nature of the EXTREME ULTRA particles, was thought to be similar to the lubricant and refrigerant gases. EXTREME ULTRA does not stop inside the drier filter and does not accumulate in the expansion valve. Its action is completed when the system runs again. The required time for definitely solving the loss depends on its size and shape.

INSTRUCTIONS FOR THE USE OF EXTREME ULTRA IN VEHICLE A/C SYSTEMS

1. Start the engine of the vehicle.
2. Turn the air conditioning on and set the lowest temperature.
3. Locate the low-pressure charging port of the A/C system.
4. Connect the cartridge of EXTREME ULTRA through the specific adapter.
5. Introduce EXTREME ULTRA in the system.
6. Run the A/C System in this condition for at least 30 minutes.

INSTRUCTIONS FOR THE USE OF EXTREME ULTRA IN A/C SYSTEMS

1. Turn the air conditioning on and set the lowest temperature.
2. Locate the charging port of the A/C system and connect the cartridge.
3. Pump down the refrigerant in the external unit.
4. Introduce EXTREME ULTRA in the system.
5. Re-open the valve.
6. Disconnect the cartridge from the external unit.
7. Run the A/C System in this condition for at least 30 minutes.



What's Included

- Extreme Ultra 6ml or 12ml
- Charging adapter 1/4" and 5/16" SAE
- Instruction Manual

Doses:

	EXTREME ULTRA	KW	TONS
UP TO	6 ML / 0.25 FL. OZ.	21	6
	9 ML / 0.3 FL. OZ.	32	9
	12 ML / 0.4 FL. OZ.	45	12

DILUTION IN LUBRICANT = 1:125

B P Refcool
 134 Sector 6,
 IMT Manesar,
 Gurgaon 122050 HR.
Tel: +91 124-4365520
+91 9818537520
www.bprefcool.com