

How to fix all the buttons are flashing (water shortage alarm)?

Some customers may meet the situation that all the buttons are flashing when brewing coffee or making hot water.



This situation means the machine is under water shortage protection because there is no water in the water tank.

Please proceed with the below steps to fix it.

01. Fill the water tank with room temperature water.



02. Turn the Steam Knob to ☁️/💧 position to make hot water.



03. Let hot water come out of the Steam Wand to cool down the machine.



04. Once the temperature is cooled down, all buttons are fully illuminated.



05. Return the knob to the "OFF" position, and the coffee machine is ready for brewing.

