

How to fix the Espresso, Cappuccino, and Latte buttons flash in green(water shortage alarm)?

Some customers may meet the situation where the Espresso, Cappuccino, and Latte buttons are flashing in green.



This situation means the machine is under water shortage protection because that the water ran out.

Please proceed with the below steps to fix it.

01. Fill the water tank with room temperature water.



02. Place an empty cup beneath the brew head, and aim the milk dispensing tube into the empty cup.



03. Press any one button of the Espresso, Cappuccino, and Latte buttons. The machine will start to pump water and make hot water.



04. Once the hot water comes out of the milk dispensing tube, all the buttons will fully illuminate.



Now the machine is ready to use again.



CASABREWS