

EDGE THEORY LABS

Electric Air Pump Quick Start Instructions

Thank you for your purchase of the Edge Theory Labs Electric Air Pump! In order to make your setup a breeze, below is some important information to help with use of this product. The full User Manual can be found on our website by scanning the QR Code or entering the link at the bottom of the page.

Inflation:

1. Unbox the Air Pump and charge if necessary
2. Attach Air Nozzle #1 (shorter of the two in fig 1) to the narrow hose end by screwing on clockwise until hand tight, ensuring the orange washer is in place
3. Attach the wide hose end to the "Inflation" side of the Air Pump by screwing on clockwise until hand tight
4. Ensure that the Inflation Valve Pin on the Edge Tub is in the depressed (out) position (fig 2)
5. Attach the narrow hose end to the Inflation Valve by pressing in until firmly seated and rotating about a quarter turn clockwise.
6. Power on Air Pump by pressing Power Button until screen lights up
7. Set desired air pressure – 10 PSI maximum for Edge Tub – by pressing "+" or "-" keys
8. Turn on Air Pump by pressing the Power Button twice. The Air Pump will start inflating and automatically stop when the pre-selected PSI is achieved. The Air Pump can also be turned off by pressing the power button.
9. When inflation is completed, remove the Inflation Hose with a quarter turn counter clockwise

Deflating:

- To deflate the tub, follow the same steps as above, but with the Inflation Hose connected to the "Deflation" side of the Air Pump, and first releasing air from the tub by pressing the Inflation Valve Pin. The air will come out aggressively so do not be startled! Air Pump must be turned off manually when all air is out of the Edge Tub. Damage will occur if the Air Pump is allowed to run without air.

Pro Tips:

- If you find air rushing out of the hose end after attaching the Inflation Hose, please check that the orange washer is in place on the Air Nozzle, and that the wide hose end is tightened to the Air Pump
- If the nozzle is too tight or won't go on, please ensure proper Air Nozzle is being used, or switch the orange washer to the clear washer
- For any additional needs, please refer to the User Manual, or contact support@edgetheorylabs.com



Fig 1



Fig 2



edgetheorylabs.com/pages/edgetub-setup