



POWER ON/OFF

To power the headset on, press and release ① after 1 second, or connect the headset to a USB power source.

To power the headset off, disconnect any USB connection and hold ① for 2 seconds.

BATTERY STATUS

While the headset is turned on, single press (1) to get a voice prompt of the headset battery level.



CONNECTION

USB 2 - MAIN GAMING USE, and CHARGING For the best gaming performance and charging, connect using the USB Type-C cable.

AUX (3) - CONSOLE USE For consoles where a USB connection is not possible, connect using the AUX cable.

BLUETOOTH - CASUAL USE While the headset is off, press and hold 1 until the headset prompts "Power, On" to enter pairing mode.



Single press ④ to switch between the following 3 headset modes:

- Pro Gaming Gaming and Music
- Gaming and Music, ANC off

Press and release ④ after 1 second to get a voice prompt indicating the current headset mode.



CHARGING LED SLEEP MODE

To turn off the LED while the headset is charging, hold ① for 2 seconds.

BLUETOOTH CLEARING Press and hold ④ for 10 seconds to clear the bluetooth pairing list.

MUSIC CONTROL

PLAY/PAUSE MUSIC ► Single press 5.

ADJUST VOLUME 🖘/🖘 Single press 6 for volume up, and single press 7 for volume down.

> PREVIOUS/NEXT TRACK Press and hold ⁽⁶⁾ for next track, or press and hold ⁽⁷⁾ for previous track.






PHONE CONTROL

ANSWER/HANG UP 🍤 Single press (5) to answer an incoming call. Single press (5) to hang up an ongoing call.

> DECLINE INCOMING CALL 🔀 Press and hold (5).



LED INDICATION

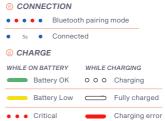

BOOM ARM

Rotate the boom arm to a vertical or horizontal position to respectively mute or unmute the boom arm microphone.

Ensure that the embedded microphone symbol on the boomarm microphone faces your mouth, and that the foam tip is securely in place.



HEADBAND ADJUSTMENT

Adjust the headband slider to either lengthen or shorten the headband. The headband slider is designed to be firm, so as to avoid unintentional slider movement.



For optimal noise isolation and audio quality, adjust the headband until the ear pads sit centered around the ears not touching the top or the bottom of the ears



 
REMOVEABLE EAR PADS

If needed, the ear pads can be removed for cleaning or replacing. The ear pads are mounted to the headset with magnets, and can therefore be removed simply by pulling them off the headset.

When reattaching the ear pads, make sure both the ear pads and the headset are clean of dust and debris, to ensure a tight seal between the two.

REGULATORY





AceZone ApS hereby declares that this product is in compliance with the essential requirements per Radio Equipment Regulations 2017 and all other applicable UK regulations. The complete declaration of conformity can be found at: www.acezone.io/compliance

Important Safety Instructions Do not use this app

Clean only with a dry cloth.

Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rian or moisture, does not operate normally, or has been dropped.

Federal Communication Commission Interference Statem ent



UK

Connact the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.
 (c) For systems incorporating several digital devices, the statement shown in paragraph (a) or (b) of this section needs to be contained only in the instruction manual for the main control unit.
 (e) In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form
 CAUTION (§15.2), extract):
 Changes or modifications not expressly approved by AceZone ApS could void the user's authority to operate this equipment according to part 15 of the FCC rules.
 Contains FCC ID:2AWWO – FSCBTI026





WARNINGS/CAUTIONS

Do NOT use the headset at a high volume for any extended period.
 To avoid hearing damage, use your headset at a comfortable, moderate volume level.
 Turn the volume down on your device before placing the headset infon your ears, then turn the volume up gradually until you reach a comfortable listening level.
 Do NOT use your headset while driving for phone calls or any other purpose.
 Do NOT use the headset while driving for phone calls or any other purpose.
 Do NOT use the headset while driving for phone calls or any other purpose.
 Do NOT use the headset while driving for phone calls or any other purpose.
 Do NOT use driving a driving for chers, e.g., while riding a bicycle or walking in or near traffic, a construction site or railcoat, etc., and follow applicable laws regarding headset use.
 Turn the headset while noise cancelling off and adjust your volume, to ensure you can hear surrounding sounds, including alarms and warning signals.
 Be aware of how sounds that you rely on as reminders or warnings may vary in character when using the headset, even with transparency mode.

- Be aware of how sounds that you rely on as reminutes or warmings may vary in clauses and the sound state of the sound stat

WARNINGS/CAUTIONS CONT.

ers to connect headset to airplane seat jacks, as this could result in injury or 1g.

- Do NOT use mobile phone adapters to connect headset to airplane seat jacks, as this could result in injury or property damage due to overheating.
 To reduce the risk of fire or electrical shock, do NOT expose this product to rain, liquids or moisture.
 Do NOT expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the product.
 Yeep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
 Use this product not way from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
 Use this product not with an agency approved LPS power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).
 Do NOT make unauthorized alterations to this product.
 If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.
 Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like).
 Do NOT wave while charging



This symbol means the produ uct must not be discarded as ho usehold waste, and sh ould be d rms symuol means the product must not be discarded as household waste, and should be deliver to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natura resources, human health and the environment. For more information on disposal and recycling product, product, contact your local municipality, disposal service, or the shop where you bought this product.