

QUICK START

REV . 1.1, 12.20.2020

Thank you for choosing



Follow our journey at storytelleroverland.com.

Let's go!!

These quick tips and tricks will get you and your crew prepped for adventure MODE out on the open road... and beyond. Refer to the MODE 4x4 User Guide and

Power up the electrical system



PUSH IN THE SYSTEM ON/ OFF BUTTON on the M-Power Control Center for the cabin electrical system to operate.



CHECK THE STATE OF CHARGE. Do not leave the M-Power System completely depleted for over 24 hours. Follow recovery instructions in the User Guide if the system gets fully depleted.

Switch the inverter on or off



PRESS THE INVERTER
ON/OFF BUTTON to toggle
the inverter on or off. To save
power, keep the inverter off when
the 110V system is not needed.
The inverter must be on to operate
the air conditioner, microwave,
coo ktop, and 110V wall outlets.
Displays the manual altimeter
setting as either Normal (under
5000 ft/1500 m) or over 5000
ft/1500 m

Charge the M-Power System.



OPTION 1

Plug RV into shore power.



OPTION 2

Drive with the M-Power System on. Engine must be over 1500 RPM to charge efficiently. The solar panels automatically add energy to the system but will not supply enough power to operate the larger

Turn on the lights.



CABIN OVERHEAD

LIGHTS Press the Cabin Lights button on the galley. Dim by holding button gently.

UNDER-CABINET LIGHTS

Press in on the individual lights.

AWNING LIGHTS

Press the Awning Lights button on the galley. Dim by holding button gently.

CARGO AREA LIGHTS

Press the Cargo Lights button on the back of the power enclosure.

Using the fresh water system.



FILL FRESH WATER TANK

or connect water supply directly through City Water Connection.

Always use a pressure regulator and water filter (not supplied with the RV). Sanitize fresh water system before use.



TURN ON THE WATER

PUMP to use water from the fresh water tank. Keep the water pump switch off when not using the water.

Empty the gray water tank.



CONNECT WASTE WATER HOSE. Place other end into RV

dump station or connect to campground sewer system.



OPEN WASTE VALVE TO

EMPTY. Keep gray tank waste valve closed until the tank needs to be emptied (around 75% full). See tank monitor for water levels. Waste water hose is not included with the RV. Keep waste valve closed until you empty the tank.

Use the GrooveLounge



ALWAYS USE SEAT BELTS

while vehicle is moving. To use child restraint systems, a locking clip must be used.



PULL HANDLES TO TILT

panels and transform seat into lounge or bed. Be careful not to let the seat cushion impact driver's seat. When the vehicle is in motion, the GrooveLounge must be in its fully upright position.

Dreamweaver bed and table set up



down the driver's side panel and secure its folding legs into the leg catches in the floor. Next, lower the passenger side.

SET UP THE WORK
SURFACE by setting up the
driver's side bed panel and support
legs. Remove the cushion to use the
easy clean work surface.

Never leave bed panels unsupported by the legs. This will damage the RV.

Cool the cabin



TO RUN THE AIR
CONDITIONER, M-Power ESS
and inverter must be on. Use the flat
thermostat button to toggle through
Cool High, Cool Low, Cool Low
Auto, or Cool High Auto. The Auto
settings keep the air conditioner fan
running when the compressor shuts
off.




SET THE THERMOSTAT
TEMPERATURE by using the
UP/DOWN arrows.

Cool the cabin without A/C




CREATE CROSS
VENTILATION when using the exhaust fan by opening a window. This makes the ceiling exhaust fan more effective.

Heat the cabin

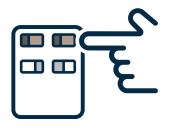

 SWITCH "SYSTEM" AND "FURNACE" TO ON. If the vehicle engine is running, you may turn the furnace switch to Off. The vehicle engine will provide heat to the system. Open the heater vent on the GrooveLounge base.



SET FAN SPEED. "O" is off. The heating system takes a few minutes to reach operating temperature.

Heat the cabin (continued).




TOGGLE THERMOSTAT TO HEAT in the mode settings.



SET THE DESIRED CABIN AIR TEMPERATURE by using the UP/DOWN arrows.

Make hot water

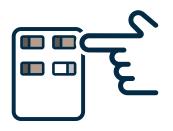

SWITCH SYSTEM, FURNACE, AND HOT WATER TO ON. If the Sprinter is running, turn the furnace switch off. The engine will help provide heat.



WAIT SEVERAL MINUTES FOR HOT WATER.


Set up your Halo Shower



SET UP THE INSIDE

SHOWER. Open the front and bottom of the cabinet. Unstrap the curtain and pull outward. Ensure curtain is inside the FlexSpace shower pan. The shower curtain is made from an antimicrobial fabric, but should not be stored wet.

Keep gray tank from freezing

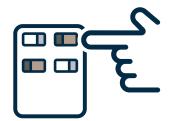

SWITCH SYSTEM AND HOT WATER TO ON and the furnace to off.



DRIVE LIKE NORMAL. The engine heat will circulate through the heater system and help keep the gray tank from freezing.

Using the sink drain pump



PRESS THE SINK DRAIN
PUMP BUTTON to empty the sink into the gray water tank.



LISTEN TO THE SINK
DRAIN PUMP. Stop pressing
the sink drain pump when the noise
changes. Running the pump longer
than needed, or without water
in the drain line, will damage the
pump.

Open the awning.



SET PARKING BRAKE. If the vehicle engine is running, make sure the parking brake is on.



OPEN THE AWNING using controls on the galley. If equipped, you can dim the awning lights by gently holding the Awning Lights button down. Be aware of trees or other objects that could damage the awning.

Storing extra gear.



CAUTION ON THE


LADDER. The ladder and roof rack may be slippery. The roof rack should only be used for storing



DO NOT OVERLOAD

ROOF RACK. The roof rack has a 100 lb. weight rating. Use caution while loading vehicle and be sure items are properly secured.



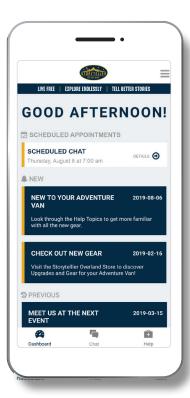



Register your MODE 4x4™

Find answers with Help Topics.

Get Alerts about your vehicle.

Chat with customer support.

Powered by RIGHTRV™

LIVE FREE. EXPLORE ENDLESSLY. TELL BETTER STORIES.

STORYTELLEROVERLAND.COM
COPYRIGHT © 2020
STORYTELLEROVERLAND, LLC.
ALL RIGHTS RESERVED.
S1X-000001-00022

