

MIKIT

SAY HELLO TO CL80

User Guide

Three Ways of Connecting Devices



Short Press:
Hold **FN** first, then the **corresponding key**, and release both keys.

 
Long Press:
Hold **FN** first, then the **corresponding key**. Hold for 5 seconds until the indicator starts blinking.

Bluetooth Mode

1 Toggle the keyboard Mode Switch to the wireless side.



2 Short Press FN+1 to make the indicator blink in blue, then Long Press FN+1 to make the indicator flash in blue.

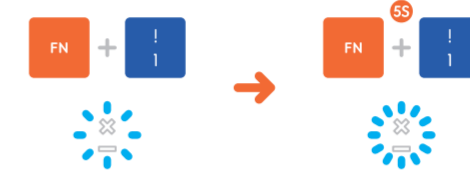

3 Select the pairing device [MIKIT CL80 BT].



4 The indicator turns off when the keyboard is paired successfully.



*In order to complete the pairing of the keyboard with a second or third new Bluetooth device, repeat the instructions from Step 2 and replace the "FN+1" with "FN+2" or "FN+3".

2.4GHz Mode

1 Toggle the keyboard Mode Switch to the wireless side.



2 Plug the 2.4GHz receiver into your computer.



3 Press FN+4 to enter 2.4GHz connecting mode.



4 The indicator turns off when the keyboard is connected successfully.



 
*Please find the 2.4GHz receiver at the bottom of the keyboard.

Wired Mode

1 Toggle the keyboard Mode Switch to the wired side.



2 Plug the USB cable into your device.

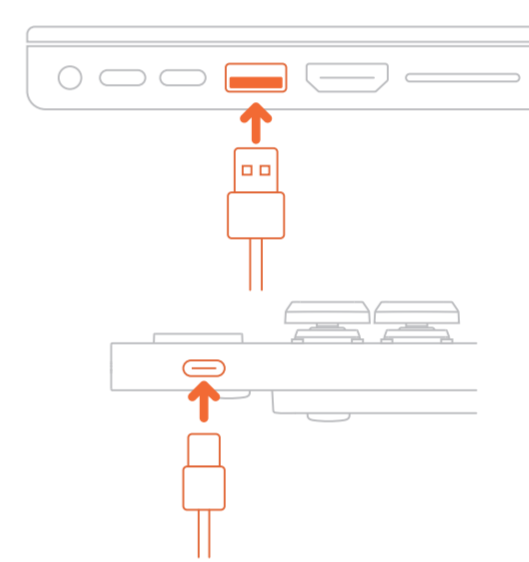


*When being plugged into the computer, the keyboard will start to charge automatically.

*Caution: The rated power for the charger must not exceed 5V-1A. Connection to a higher power output will damage the keyboard.

LED Indicator Status Description



 The indicator is located between ESC and F1.

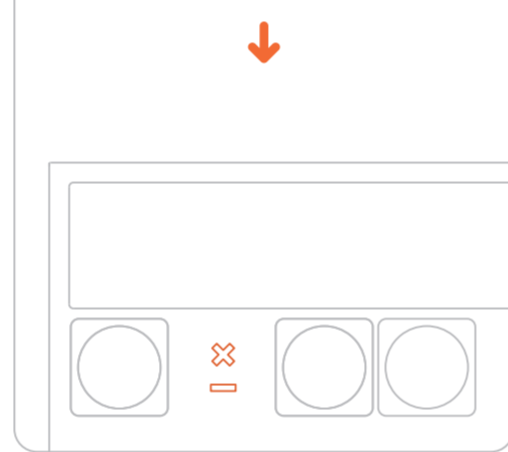

Bluetooth



Blue Light Blinking
Bluetooth Device #1
Re-Connecting



Blue Light Flashing
Bluetooth Device #1
Pairing On



Turquoise Light Blinking
Bluetooth Device #2
Re-Connecting



Turquoise Light Flashing
Bluetooth Device #2
Pairing On



Yellow Light Blinking
Bluetooth Device #3
Re-Connecting



Yellow Light Flashing
Bluetooth Device #3
Pairing On

2.4GHz



Pink Light Blinking
2.4GHz Device
Re-Connecting



Pink Light Flashing
2.4GHz Device
Pairing On

Others



White Light On
CapsLock On



White Light Blinking
Special Keys Combination Enabled



 
Red Light Blinking
Low Battery Level

Keys Combinations




Keys Combinations:
Hold **FN** first, then corresponding keys to enable special **keys combination**.


Function Keys Combinations

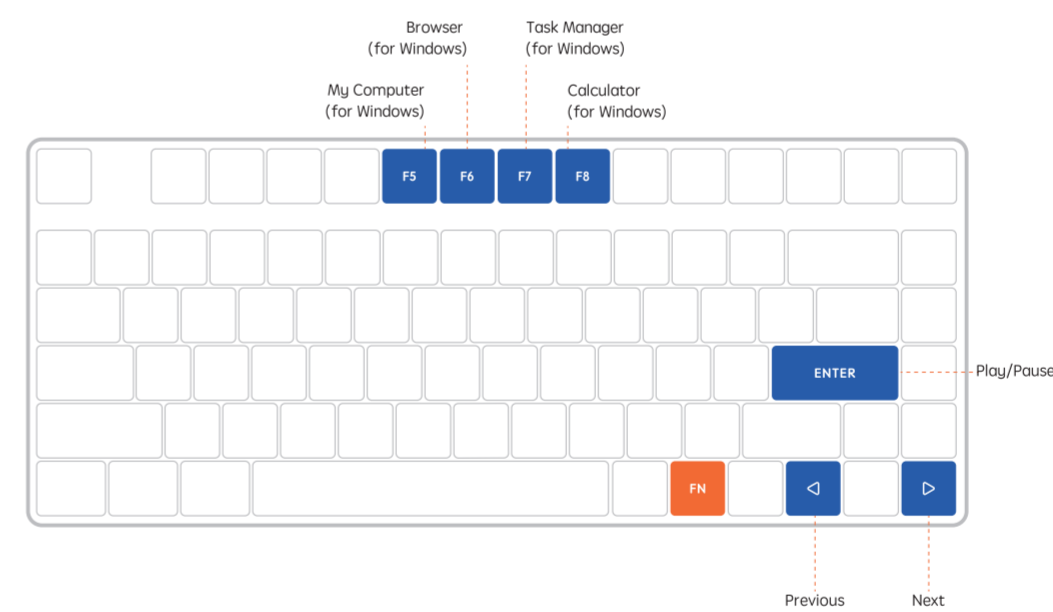

 Backlight Keys Combinations (Short Press)

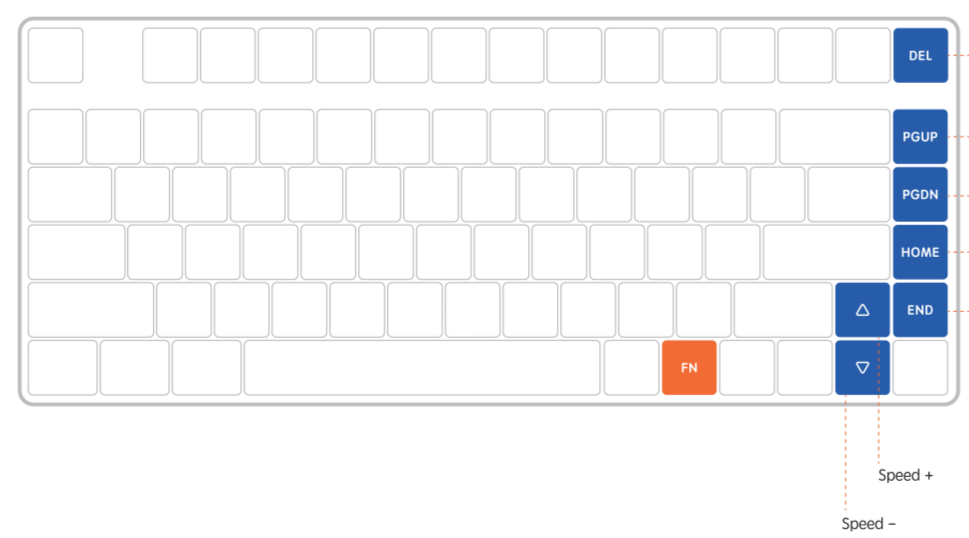

Special Keys Combinations

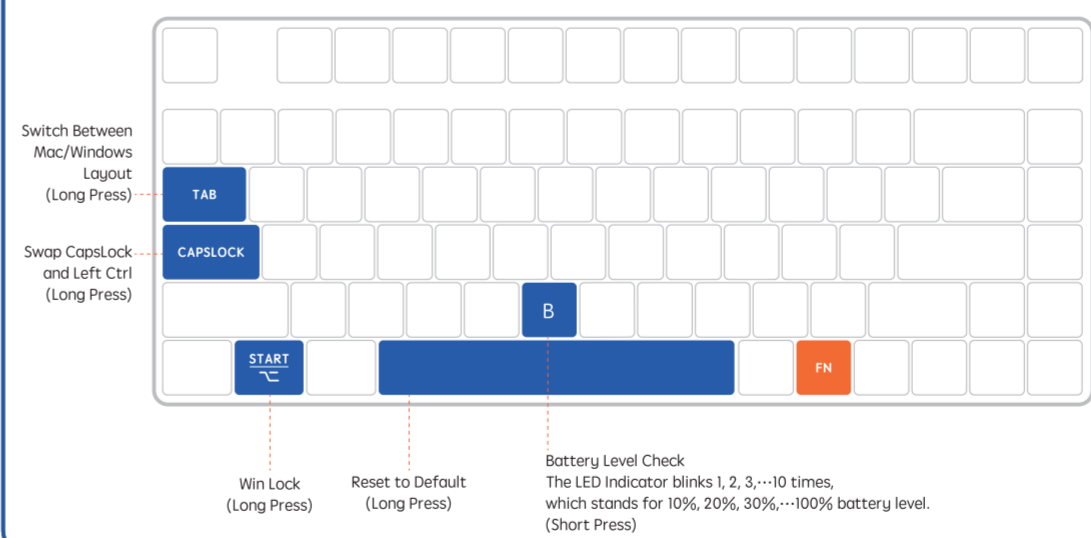 

Volume Controls

