

第1面



INSTRUCTION MANUAL



Feel the difference

第2面

CONTENTS

Safety Precautions	1
Product Description	2
Operating Panel	2
Remote Control Preparation	3-4
Operating Instructions	5
Cleaning & Maintenance	6-7
Product Specifications	8
Trouble Shooting	9
Environment-friendly Disposal	9

 
第3面

SAFETY PRECAUTIONS

Read the operating instructions carefully before using the fan & keep it for future reference.

- This fan is for household use only. Please use suitable power source (220-240V~50Hz).
- Do not turn the fan on before its assembly is complete. Cut off power before moving the fan.
- Please turn off the appliance when not in use otherwise it may result in danger.
- Do not pull out power cord with a wet hand. This may cause an electric shock accident.
- When the fan is working, do not put your finger or any sharp object into the fan net.
- Keep the fan away from high temperature, high acidity, high humidity, curtain, which can be easily inhaled into the fan.
- Do not use strong wind for a long time, especially on children and the elderly.
- Do not place the fan on a slope. It will easily turn over.
- Unplug the product immediately if it emits strange noises, odours or smoke.
- With any indication of malfunction (including power cords), please stop using the appliance immediately to avoid hazard. Take it to the authorized service center for repair. Do not attempt to repair or change any parts by yourself.
- Check the power cord and plug for damage before use. If the cord is found damaged, please have it repaired or replaced, it should be replaced by a qualified technician. Do not try to repair it by yourself.
- In case of fire accident or circuit fault, cut off the power when the fan stops working.
- Please put the power cord in the right place in order to avoid tripping the appliance over.
- Do not cover the fan with cloth when the fan is working.
- Forbid to put flammable and explosive objects around the appliance, and do not use the appliance in an environment full of flammable gas and powder. Keep away from any fire and heat sources.
- When the appliance is not in use for a prolonged period, please turn it off, unplug it, pack it well, and store it in dry cool place.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


第4面

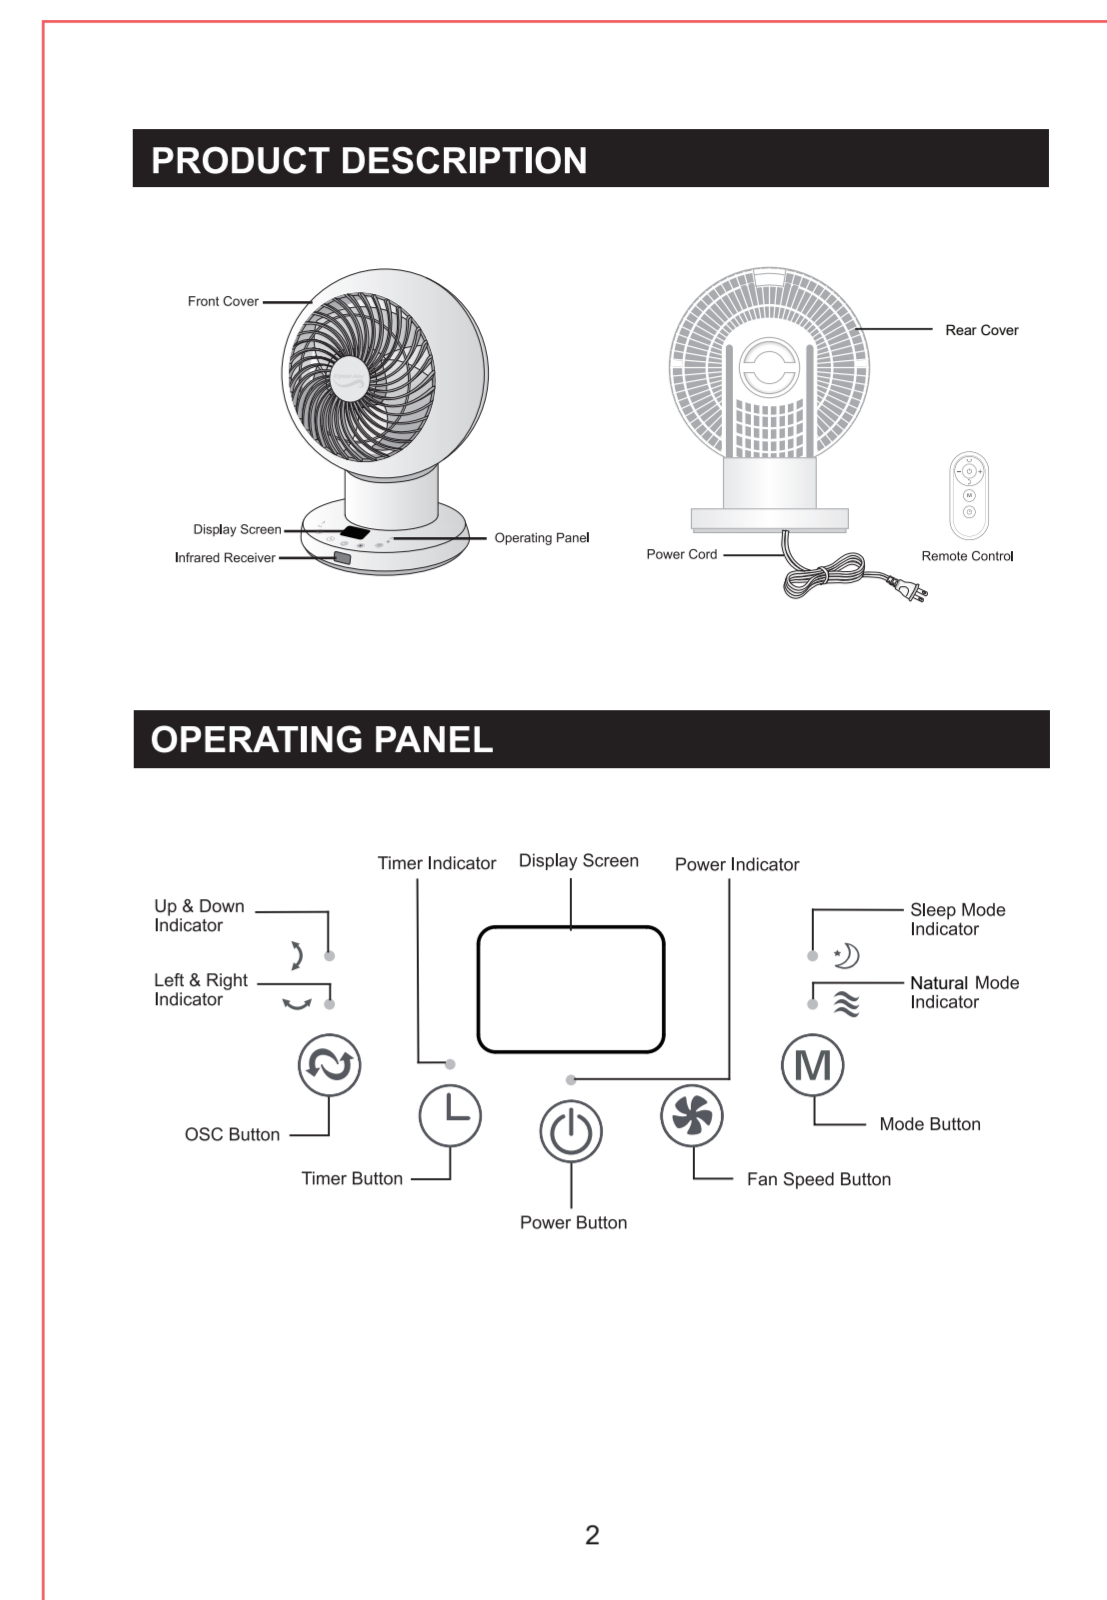

第5面


REMOTE CONTROL PREPARATION

 ※ Please pull out the protective film of the battery.

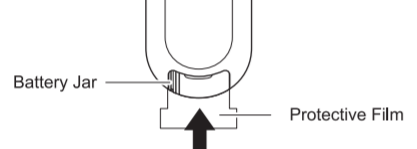

Note: The batteries included with this product were initially used for testing, and have a shorter lifespan than new batteries. If the remote control is difficult to operate, please replace with new batteries.

 How to install (replace) the battery.

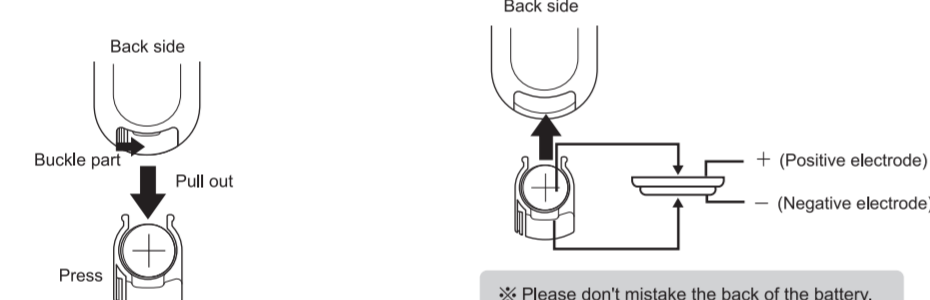

※ Please don't mistake the back of the battery.

- Pull out the battery slot while pressing in the direction of the arrow on the buckle.
- Insert the new battery into the battery slot correctly and insert it into the remote control.

About replacing the battery.
After the battery is dead, please buy and use a button battery with the model CR2025 on the market.

If the following situations occur, the main unit cannot be operated with the remote control.

- There is an obstacle between the signal receiving part of the main body and the remote control.
- Places where variable frequency lighting equipment or electronic instant lighting equipment is used.
- The signal receiving part of the main body is directly exposed to the sun or strong light.

第6面

REMOTE CONTROL PREPARATION

Attention!

- The battery power is insufficient, the operating range of the remote control becomes smaller, please replace the battery in time.
- Do not use the remote control when the signal transmission part is damaged.
- When not using the remote control for a long time, to prevent battery leakage, please remove the batteries from the remote control.
- Please do not place the remote control in a place where children can reach it, as this may cause the battery to be swallowed by mistake.

OPERATING INSTRUCTIONS

Caution!

- Switch off the unit before adjusting the tilting angle.
- Do not cover the protective grille with anything which in use.
- Never put your finger, pencil or other objects into the protective grille during operation.

Power Button

- Connect the mains lead to socket, all indicators light on for approx. 1 second and then go off to stand by mode.
- Press Power button to switch on the fan, it will work in low speed by default. Press Power button again to switch off the fan.

Fan Speed Button

 
- Press the Fan Speed button to select your preferred fan speed setting of low, mid and high to meet the different usage requirements.
- On the Fan, you can select the fan speed from 1-2-3-4-5-cancel.

第7面

OPERATING INSTRUCTIONS

OSC Button

- Press the OSC button once to shake the head left and right.
- Press the OSC button twice to shake the head up and down.
- Press the OSC button three times to shake the head up and down, left and right.
- Press the OSC button four times to cancel shaking the head.

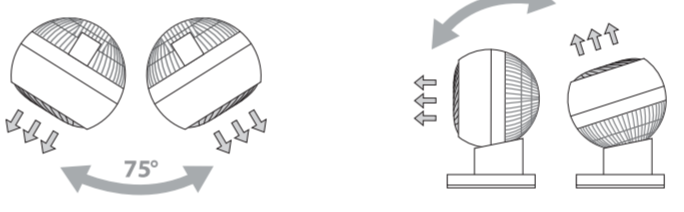

Note: When the fan is turned on, the head is not shaken by default. If use the remote control to operate, press OSC buttons to set.

Note: When shake the fan head, the sound made by the body will become louder. This is a sound unique to the head swing motor and is not abnormal. Please be aware.

Timer Button

- On the Fan model, you can set the timer duration from 1h-2h-3h-4h-5h-6h-7h-8h-cancel. Timer on and Timer off setting both workable for the Fan.

Mode Button

- On the Fan model, you can press the Mode button to select the Natural mode or Sleep mode. The fan will work in different fan speed on its default program automatically.

Memory Function

- The fan speed setting, OSC setting with memory, the program will keep your last setting when you switch off the fan by pressing the Power button.

Note: If unplugged directly, the fan will not keep the setting prior to the shutdown.

第8面

CLEANING & MAINTENANCE

 
Please wipe it clean with a soft cloth. When stain is hard to remove stain from the fan, soak into the neutral detergent, wring it out and gently wipe them away, finally clean it easy.

Attention:

- Please do not use thinner, alcohol, volatile oil, etc. Easy to cause deterioration, discoloration, deterioration and so on.
- When using chemical rags, please follow their precautions, please do not spray (pesticides, fragrances, etc.).
- Easy to cause Pde eferoration, discoloration, deterioration etc.

- Please use the vacuum cleaner to carefully absorb the dust and other clean, when the dust pile up, it will cause the motor overheating or unnormal noise.
- If the strain and dust is serious, please remove the front and rear cover and fan blade as shown in the figure and maintain them.
- After removal, it can be washed all. After wash, please dry complete before assembling.

Disassembling way:

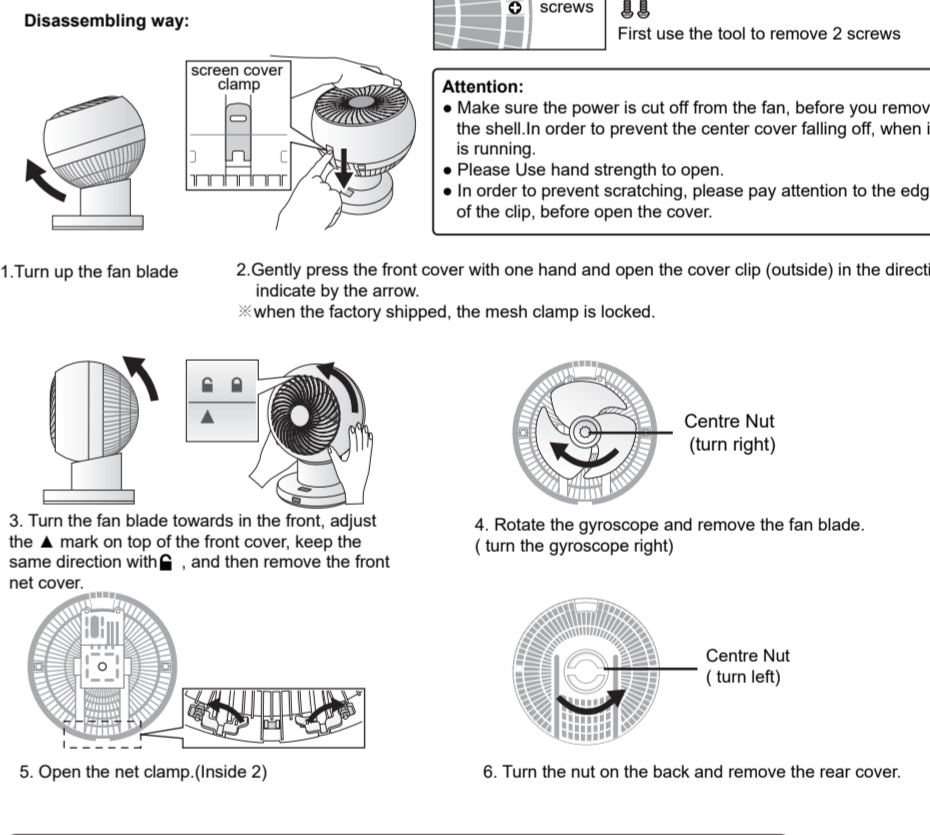

Attention:

- Make sure the power is cut off from the fan, before you remove the shell in order to prevent the center cover falling off, when it is running.
- Please Use hand strength to open.
- In order to prevent scratching, please pay attention to the edge of the clip, before open the cover.

 
- Turn up the fan blade
- Gently press the front cover with one hand and open the cover clip (outside) in the direction indicated by the arrow. When the factory shipped, the mesh clamp is locked.
- Turn the fan blade towards in the front, adjust the ▲ mark on top of the front cover, keep the same direction with ▲, and then remove the front net cover.
- Rotate the gyroscope and remove the fan blade. (turn the gyroscope right)
- Open the net clamp (inside 2)
- Turn the nut on the back and remove the rear cover.

Attention: Do not operate with the front cover off if it run, maybe cause injury.

第9面

CLEANING & MAINTENANCE

< Installation way >

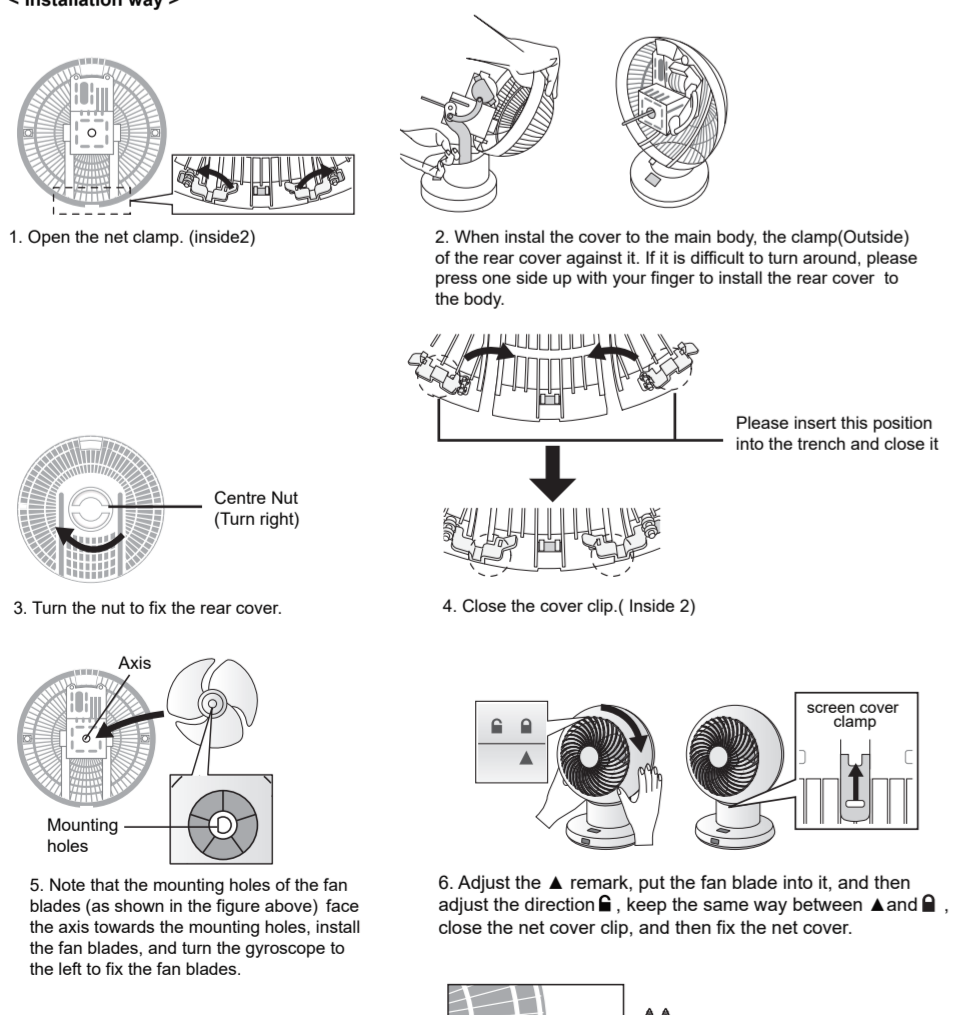

- Open the net clamp. (inside 2)
- When install the cover to the main body, the clamp(Outside) of the rear cover against it. If it is difficult to turn around, please press one side up with your finger to install the rear cover to the body.
- Turn the nut to fix the rear cover.
- Close the cover clip. (Inside 2)
- Note that the mounting holes of the fan blades (as shown in the figure above) face the axis towards the mounting holes, install the fan blades, and turn the gyroscope to the left to fix the fan blades.
- Adjust the ▲ remark, put the fan blade into it, and then adjust the direction ▲, keep the same way between ▲ and ▲, close the net cover clip, and then fix the net cover.

< Put away >
If you no need to use the fan for long time, put it away. Use a plastic bag to cover the main body and put it in a place without facing strength sunlight and low humidity place.

第10面

PRODUCT SPECIFICATIONS

Model	FS-20B-DC
Voltage	220V-240V~ 50/60Hz
Power Consumption	17W
Net Weight	1.76kg
Product Dimension(W×D×H)	226×211×315mm

第11面

TROUBLE SHOOTING

Problem	Possible Cause	Solution
The fan does not work	Check whether the power plug has come out of the socket?	Plug in securely.
	Check whether only connect the plug but didn't press the power button to switch on the fan?	Press the power button to switch on the fan.
The remote control cannot be operated	Is the battery dead?	Please replace the battery.
	Is the signal-transmitting part aligned with the main body, and is there any obstacle blocking it?	Remove obstacles and operate within 3M distance.
	Did you remove the battery protective film?	A protective film is inserted to avoid battery consumption. Please remove the protective film before use.
The wind sound is too loud	Is there dust accumulation on the grille?	Please clean the fan.
Unusual noise	Is the net cover fixed during maintenance, and is the net cover loose?	Please install the net cover securely and tighten the screws

ENVIRONMENT-FRIENDLY DISPOSAL

You can help protect the environment! Please remember to respect the local regulations: Hand in the non-working electrical equipment to an appropriate waste disposal center.

