

Thank you for your purchase of the BANSHEE Personal Safety Alarm. Our vision is to help bring safer communities to women and children. Because of people like you, we're one step closer!

WHEN TO USE IT. This device is intended for emergency situations where you feel unsafe and wish to alert people around you that you are in need of assistance, or to scare off attackers.

SOME EXAMPLES INCLUDE:

- **1.** Suspicion that you're being followed when you're out walking alone.
- **2.** You observe a potentially unsafe situation nearby—a suspicious person approaching children—for example, and want to attract attention to scare away the attacker.
- **3.** You require immediate assistance and can't reach help with your voice.

WHAT IT DOES. When the device is activated, it will emit a very loud alarm (130 dB) continuously until it's deactivated. In addition, the built-in light will flash, helping you draw even more attention to yourself.

HOW TO USE IT. To activate the alarm, pull out the pin. To stop the alarm, simply insert the pin back into the device.

BATTERY REPLACEMENT.

- **1.** Remove the cover.
- **2.** Remove the internal screws. Remove old batteries.
- **3.** Install two new CR2032 batteries (not included).

4. Replace the screws. Put the cover back on.



