

Important Safety Instructions

Operating Fan


1. Plug the fan into any standard 120V AC household outlet.
2. Use the remote control to turn the fan on/off and adjust the fan speed.

Assembly

1. Unpack the box packaging and pull the fan out.
2. Slide the two feet provided onto the bottom of the fan.



 3. Attach the cord to the fan and a power outlet.

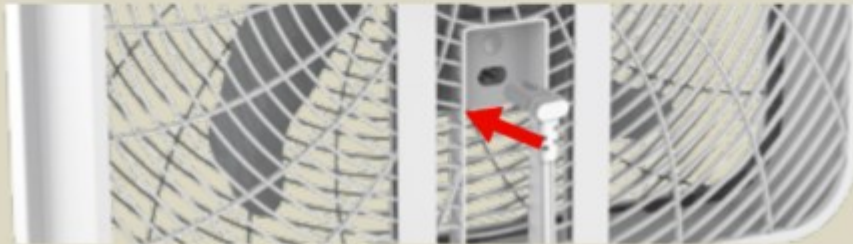


Warning


1. **DO NOT** use the fan in areas with flammable vapors such as gasoline, solvents, oil-based paint or flammable chemicals, liquids or sprays are used, stored, or being applied.
2. **DO NOT** run power cord under the throw rug, runner, or similar coverings or allow furniture or heavy objects to rest on the cord.
3. **DO NOT** use the fan if the power cord is damaged. Request a specialist to handle.
4. **DO NOT** insert any body parts or objects through the fan housing when the fan is running.
5. **DO NOT** use this fan outdoors, near water, bathtubs, swimming pools, hot tubs or other wet areas.
6. **DO NOT** leave children unattended while the Fan is in use or plugged in.
7. Arrange cord away from traffic areas to avoid any injuries.
8. Disconnect the fan before cleaning or when moving it from one location to another

Maintenance

 
1. To clean your Fan, unplug your fan from the power outlet.

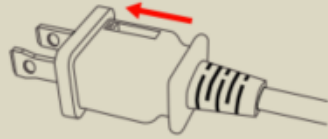

 
2. Use a cloth with mild soap solution to wipe the exterior.

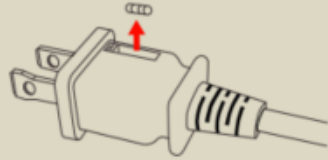

 3. To wash the fan blade, remove the front housing case and remove the screws. Use a soft cloth with mild soap solution to wipe down the blades.

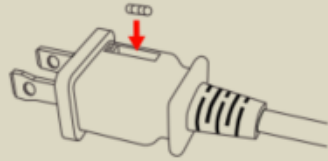

 4. If you need to replace the Fuse, first remove the plug from the wall outlet. Slide open the fuse access cover and carefully push the fuse out.

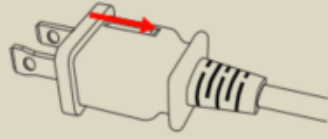

Replace the fuse (only use 5 AMP, 125 Volt fuse to avoid risk of fire) and slide the fuse cover back

5. How to turn on the fan if I lost my remote?

Please use the "emergency button" located on the back above the power cord socket. The button only controls the fan speeds. First press = level 3, second press = level 2, third press = level 1, fourth press = Off.

1 Year Limited Warranty

Remote Control Battery Type: **CR2032 (DC3V), Battery Included.**

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



ASPEN APPLIANCE, INC.

Anaheim Hills, CA 92808

theaspen.com

[877] 365-3464

service@theaspen.com

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communica-

tions. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Warning Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conditions without restriction.