


# Element

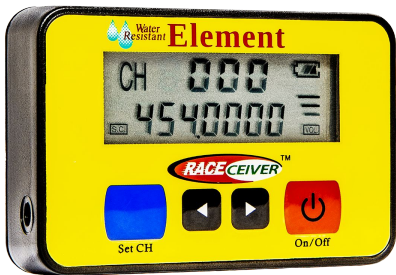

## *Element - Rechargeable Water & Dust Resistant*

Race officials & Coaches broadcast directly to drivers and athletes

- Faster line-ups and restarts
- Instant notification of track conditions
- Instant feedback motivating to improve skills & overall performance



187428008772

# Basic Instructions

Advanced instructions online

- 1. Power On** - Press **Red** button for 3 seconds  
**Off** - Press **Red** button for 5 seconds
- 2. Set Channel** - Press **Blue** button until display blinks  
Press **Red** button to advance 100 channels at a time  
Press **Arrow buttons** < > to scroll up/down to channel  
Press **Blue** button to lock on channel, blinking stops
- 3. Set Volume** - Press **Arrow buttons** < > up/down to adjust audio level
- 4. Change Default Channel** - (Set Channel See above)  
Hold both **Arrow buttons** < > down for 2 seconds
- 5. Button Lock**  
To prevent accidental change of channels or audio level  
**Lock** - Press the **Red & Right Arrow** > buttons together for 5 sec "LOC" will blink on the display  
**Unlock** - Press the **Red & Right Arrow** > buttons together 2 sec
- 6. Squelch** A static filter. Default in ON. Indicator (SC) shows on the display. To test earpieces, turn squelch off by pressing **Left Arrow** < & **Blue** button at the same time, you should hear static. After 3 seconds, the static should go away when the squelch goes back to default ON
- 7. Charge Battery** Plug 3.5mm side of USB charging cable into the port on the left of the Element and the USB side into a power source. Battery indicator blinks while charging. Battery is fully charged when blinking stops (approx 4 hours)



Do Not Overcharge - this can damage the internal battery  
**Battery must be charged every 6 months**



866-301-7223  
[www.raceceiver.com](http://www.raceceiver.com)



SCAN ME