



EVER ADVANCED

INSTRUCTIONS | Directors Chair(DC-9017)

### Set Up the Fishing Chair



① Unfasten the strap on the back leg tubes.



② Stand the chair up, push down on the side seat bar while pushing them away from the center.




③ Pull the cooler out and fix the button at the circle to the position as shown.

### Adjust the height




Place your foot on the foot pad and pull the leg up to adjust to your desired height. Press down on the button and push the leg down to shorten it.

### Install the rod holder

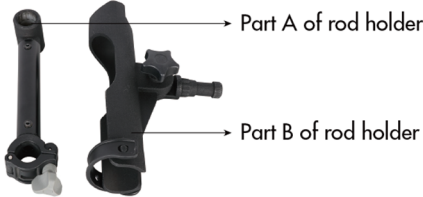

① Turn the grey handle counterclockwise to loosen the clamp. Attach Part A onto the front leg tube as shown.

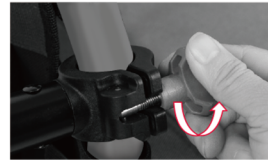

② Turn the handle clockwise to close the clamp.



③ Put Part B into Part A as shown.



### Fold the Fishing Chair



① Put your feet on the side leg tube while pulling the seat up to fold.



② Fasten the strap on the back leg tubes.



③ Use the backpack strap to carry the chair.

### Warranty

The EA Directors Chair is covered by 12-month quality warranty.

### Contact Us

Website: [www.everadvanced.com](http://www.everadvanced.com)

Email: [info@everadvanced.com](mailto:info@everadvanced.com)

@everadvanced

@everadvanced

### Safety Tips

- This folding chair holds a maximum weight of 350lbs. Do not exceed.
- No leaning on/over the chair's armrest.
- Care should be taken to avoid tipping chair while in the act of sitting or while seated.
- Use folding chair only on level ground.
- To avoid injuries to fingers, use care when folding the chair.

EVER ADVANCED,  
EVER FEARLESS