

**EVER ADVANCED
INSTRUCTION MANUAL**

Screen House Tent

(KC-80192-8)

TABLE OF CONTENTS

| | |
|----------------------|-----|
| Getting Started | 1 |
| Parts List | 2 |
| Set UP | 3-6 |
| Take Down | 7-9 |
| Warranty Information | 10 |

PLEASE READ CAREFULLY

NOTE

Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

GETTING & STARTED

Getting Started

Ensure all parts are in good state and match with the parts list. Remove all protective materials and place parts on a non-abrasive surface to avoid scratching.

Care & Maintenance

- Wash screen house with a mild solution of soap and water; rinse thoroughly. Dry completely under the sun.
- When not in use, take down and store away to avoid damage and fading from exposure to the elements.
- This screen house came with 12 month quality warranty. Fading due to regular use is not covered.
- Always put the tent away in dry status. Never store it still wet or damp, as mildew and other problems might occur.

Caution

Read all instructions before set-up. Failure to comply with instructions may result in faulty assembly and potential injury. During periods of excessive wind, do not assemble or disassemble the product if already in use to prevent damage.

Storage



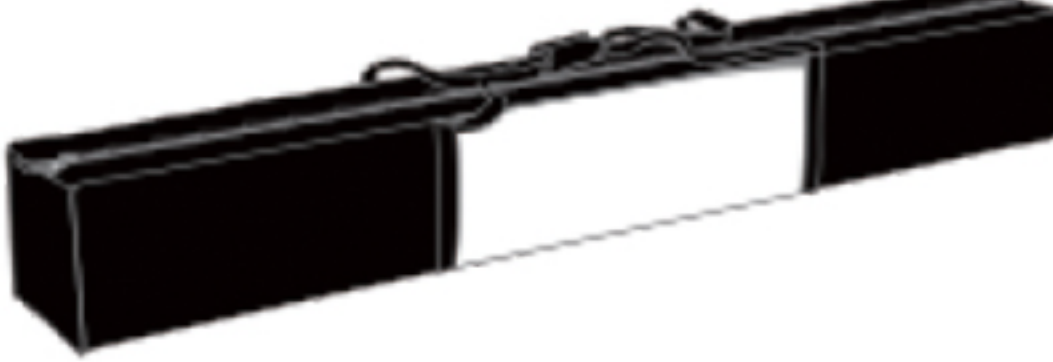


When storing for long periods of time, always make sure the tent is completely dry and free of any caked-on dirt or debris. Be sure to store it in a cool, dry place away from rodents and other pests.

WARNING :

KEEP AWAY ALL FLAME AND HEAT SOURCES FROM THIS SCREEN HOUSE. This tent meets the flammability requirements of CPAI-84. But may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

PARTS LIST

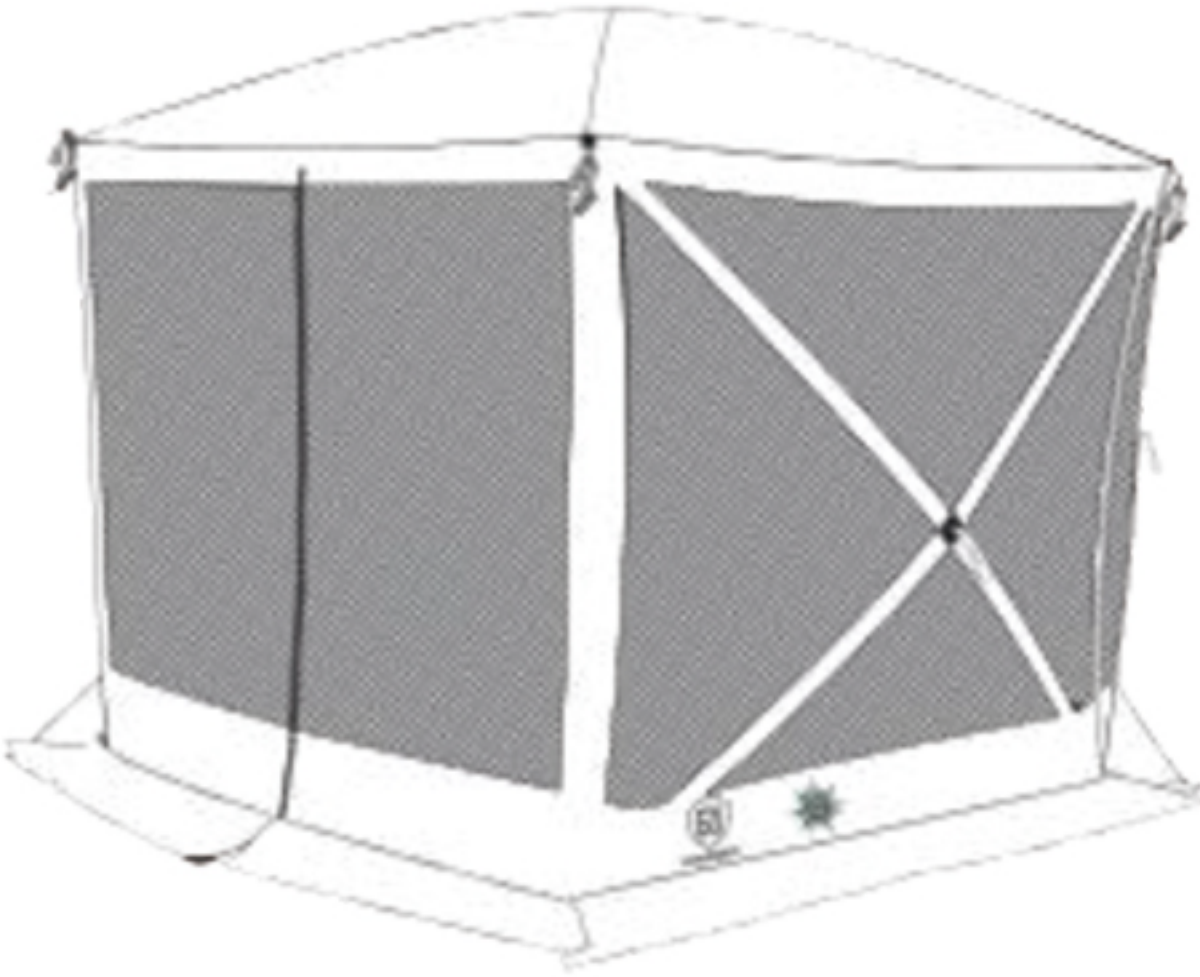
Parts List

| No. | Picture | Description | Qty |
|-----|---|---------------------------------------|-----|
| A |  | Screen House | 1 |
| B |  | Fiberglass Poles | 2 |
| C |  | Carry Bag | 1 |
| D |  | Tie-down Ropes with adjustment glider | 6 |
| E |  | Stakes | 19 |

SET UP

BEFORE YOU BEGIN

- Locate a level location to set up your tent and clear away any debris and sharp objects.
- In extremely windy conditions, find wind block for easier setup.
- Avoid setting up the tent under any overhead obstructions for safety reasons, such as falling objects or lightning strikes in the case of inclement weather.

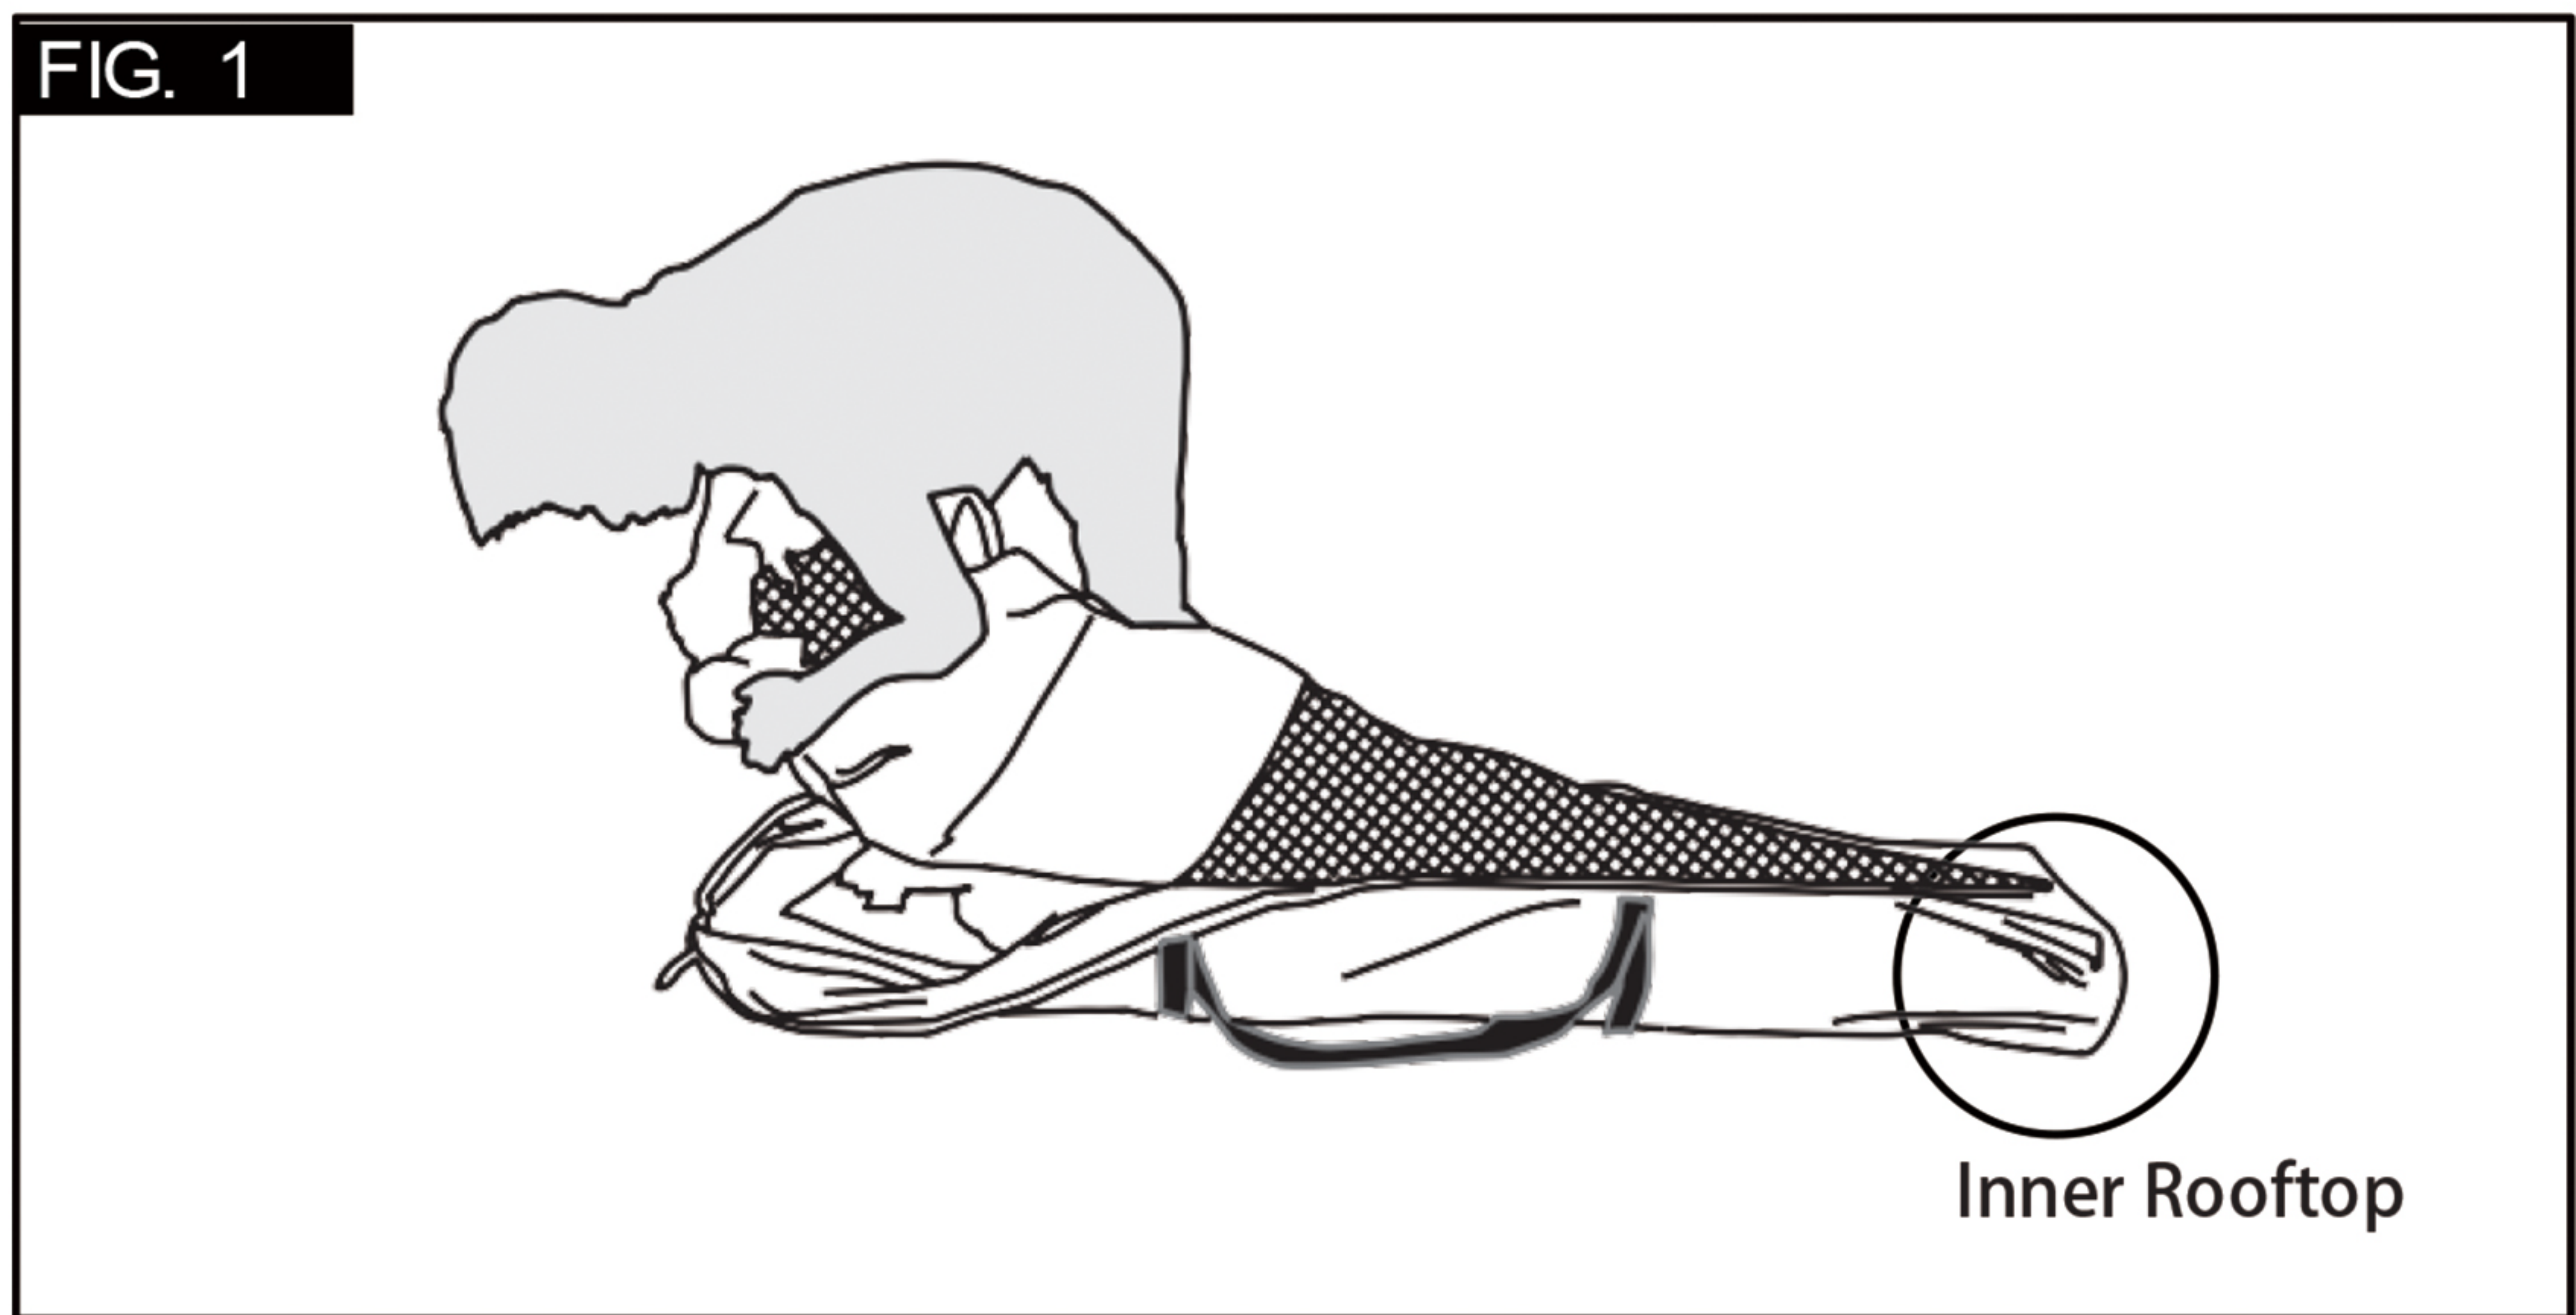

STEP 1:

Remove screen house (A) out of the Carry Bag (C). Unfasten the tie strap around it. **See Fig. 1.**


STEP 2:

Lay the screen house flat on the ground and check to make sure the poles don't have any material twisted or overlapping at the end. Flip open the wall fabric, while keeping inner rooftop downward pointing.

NOTE: While setting up in windy conditions, use the Stakes (E) and Tie-down Ropes (D) to secure the side walls to the ground before popping open the tent. Doing so will help keep the product from blowing away by the wind.

SET UP

FIG. 2

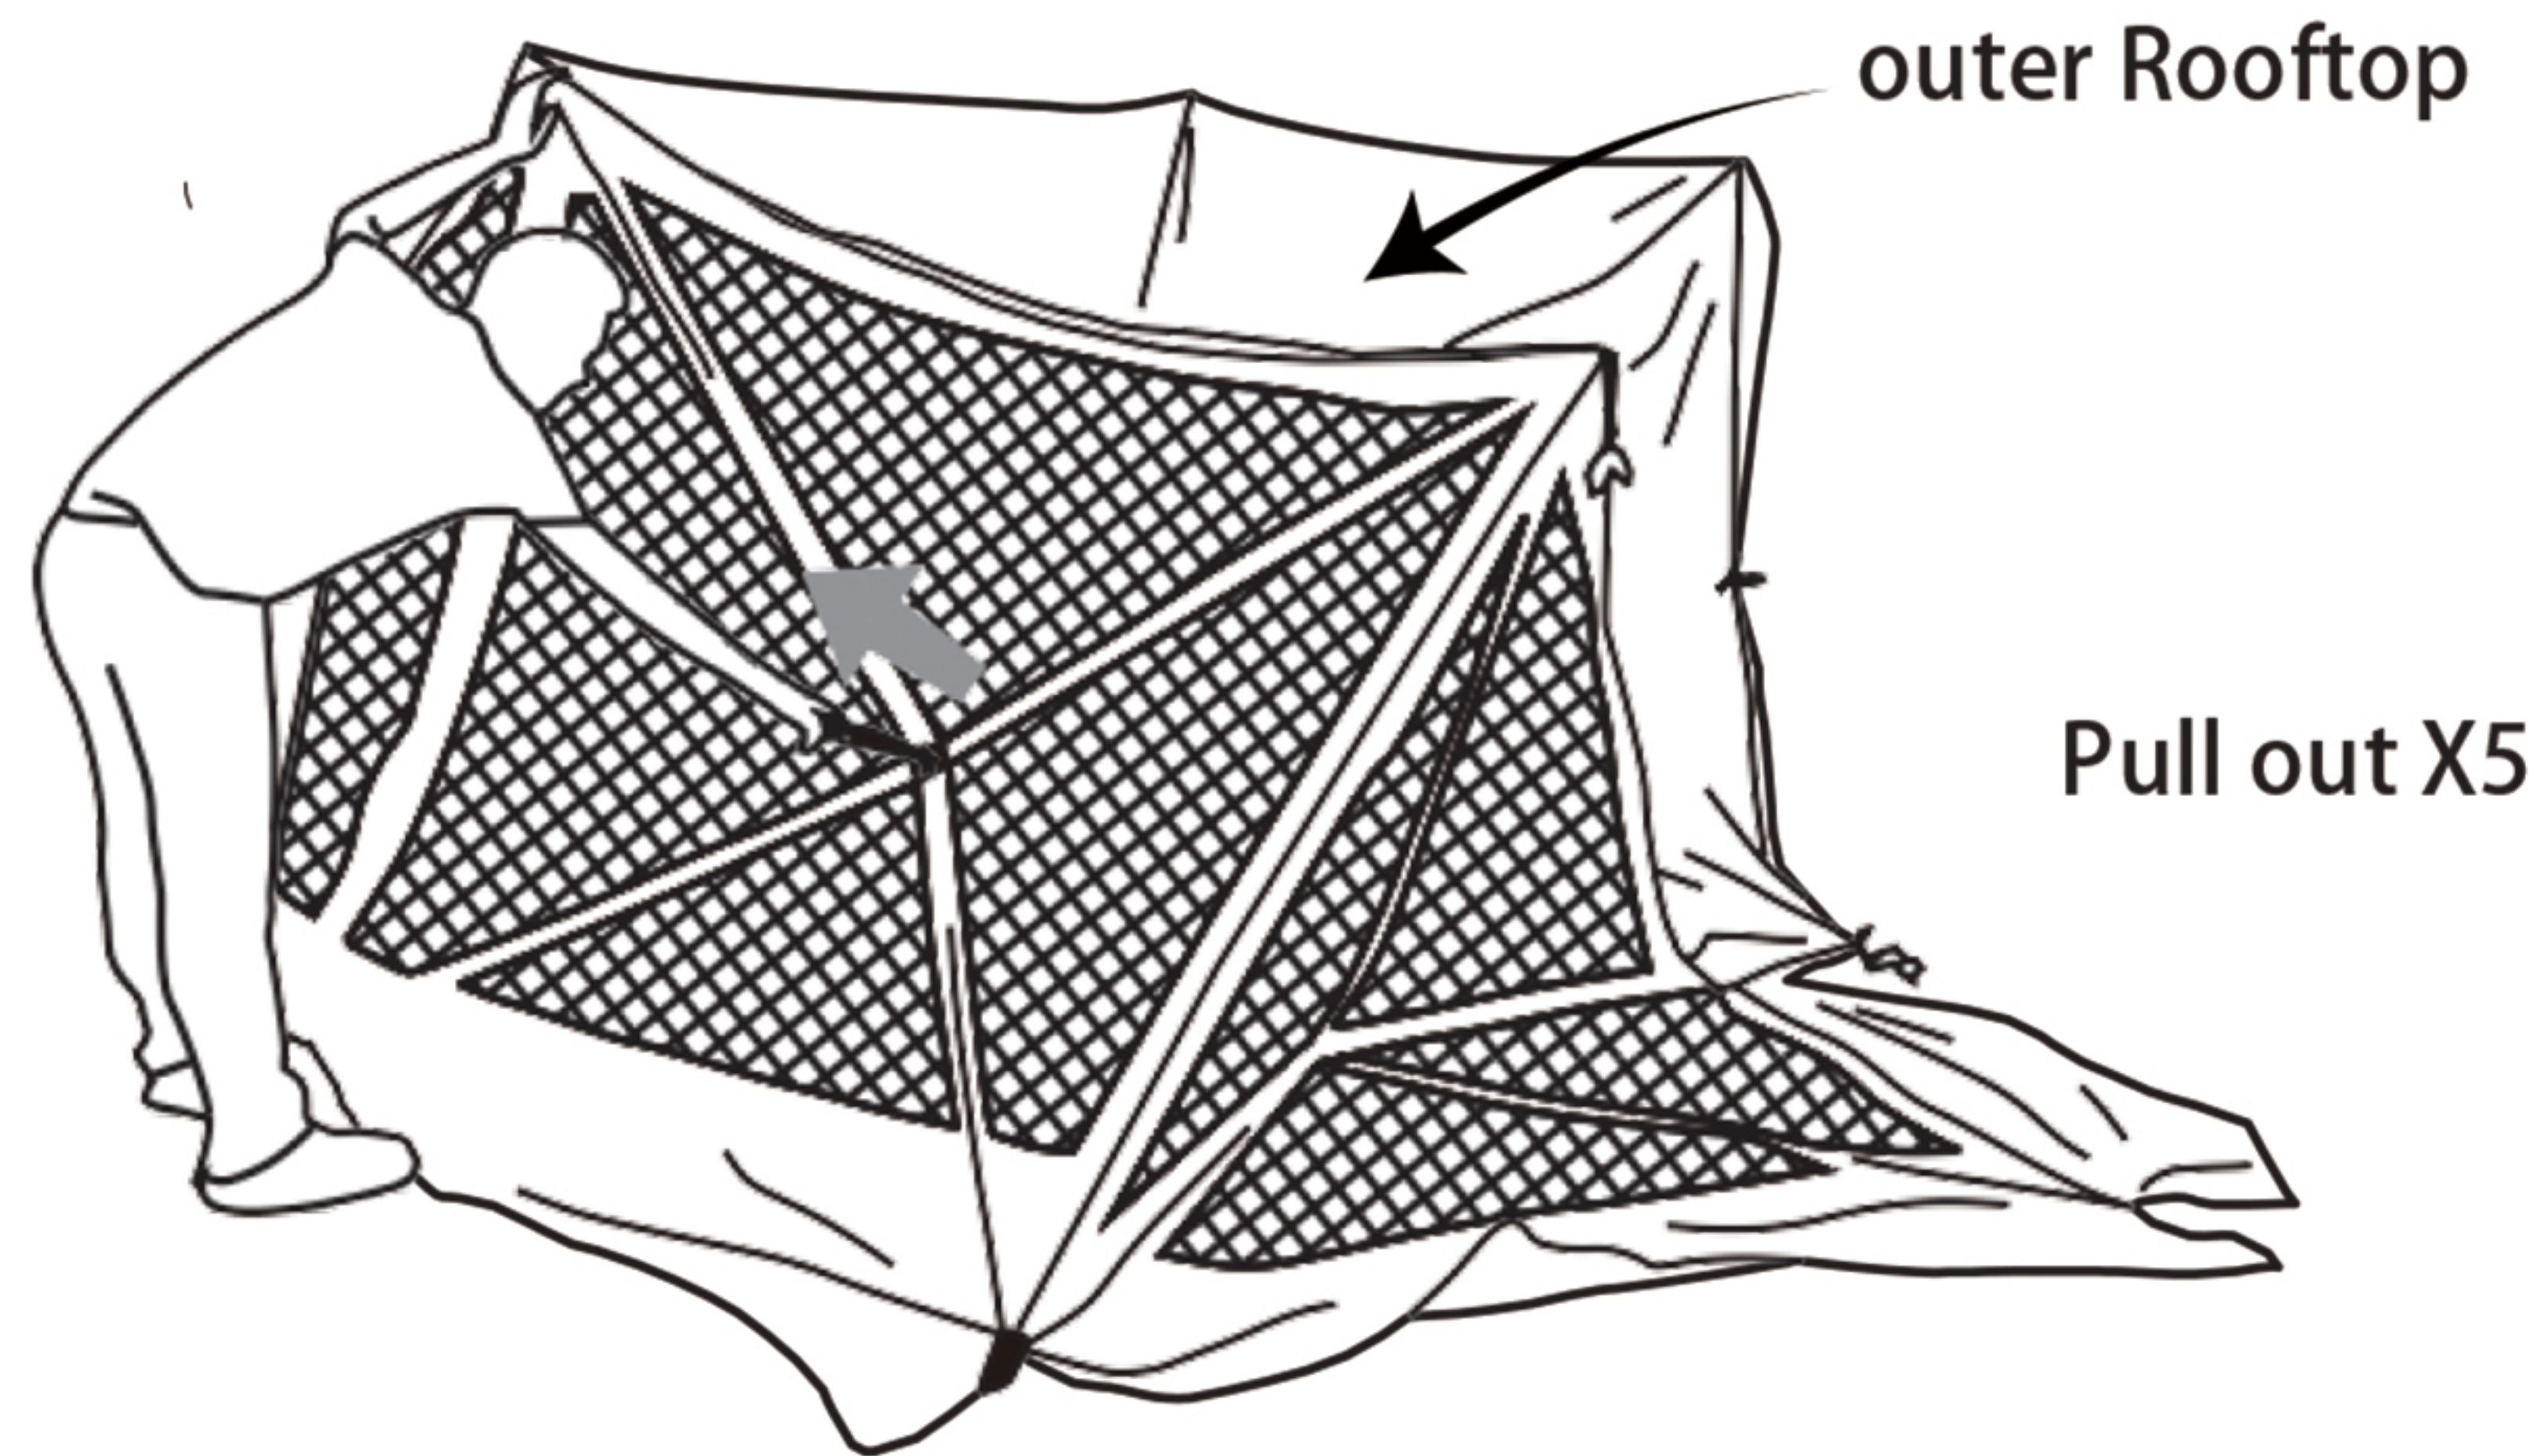


STEP 3:

Reach for the center webbing and pull back to pop open the side wall. Repeat for 5 times to pop open all side walls. **See Fig 2.** Gently pull outward until the hub pops into the open position.

NOTE: Use caution during this step as there is tension on the poles and roof hub.

Hold the tent in place while popping open the walls by pushing forward the hub frame and / or.


SET UP

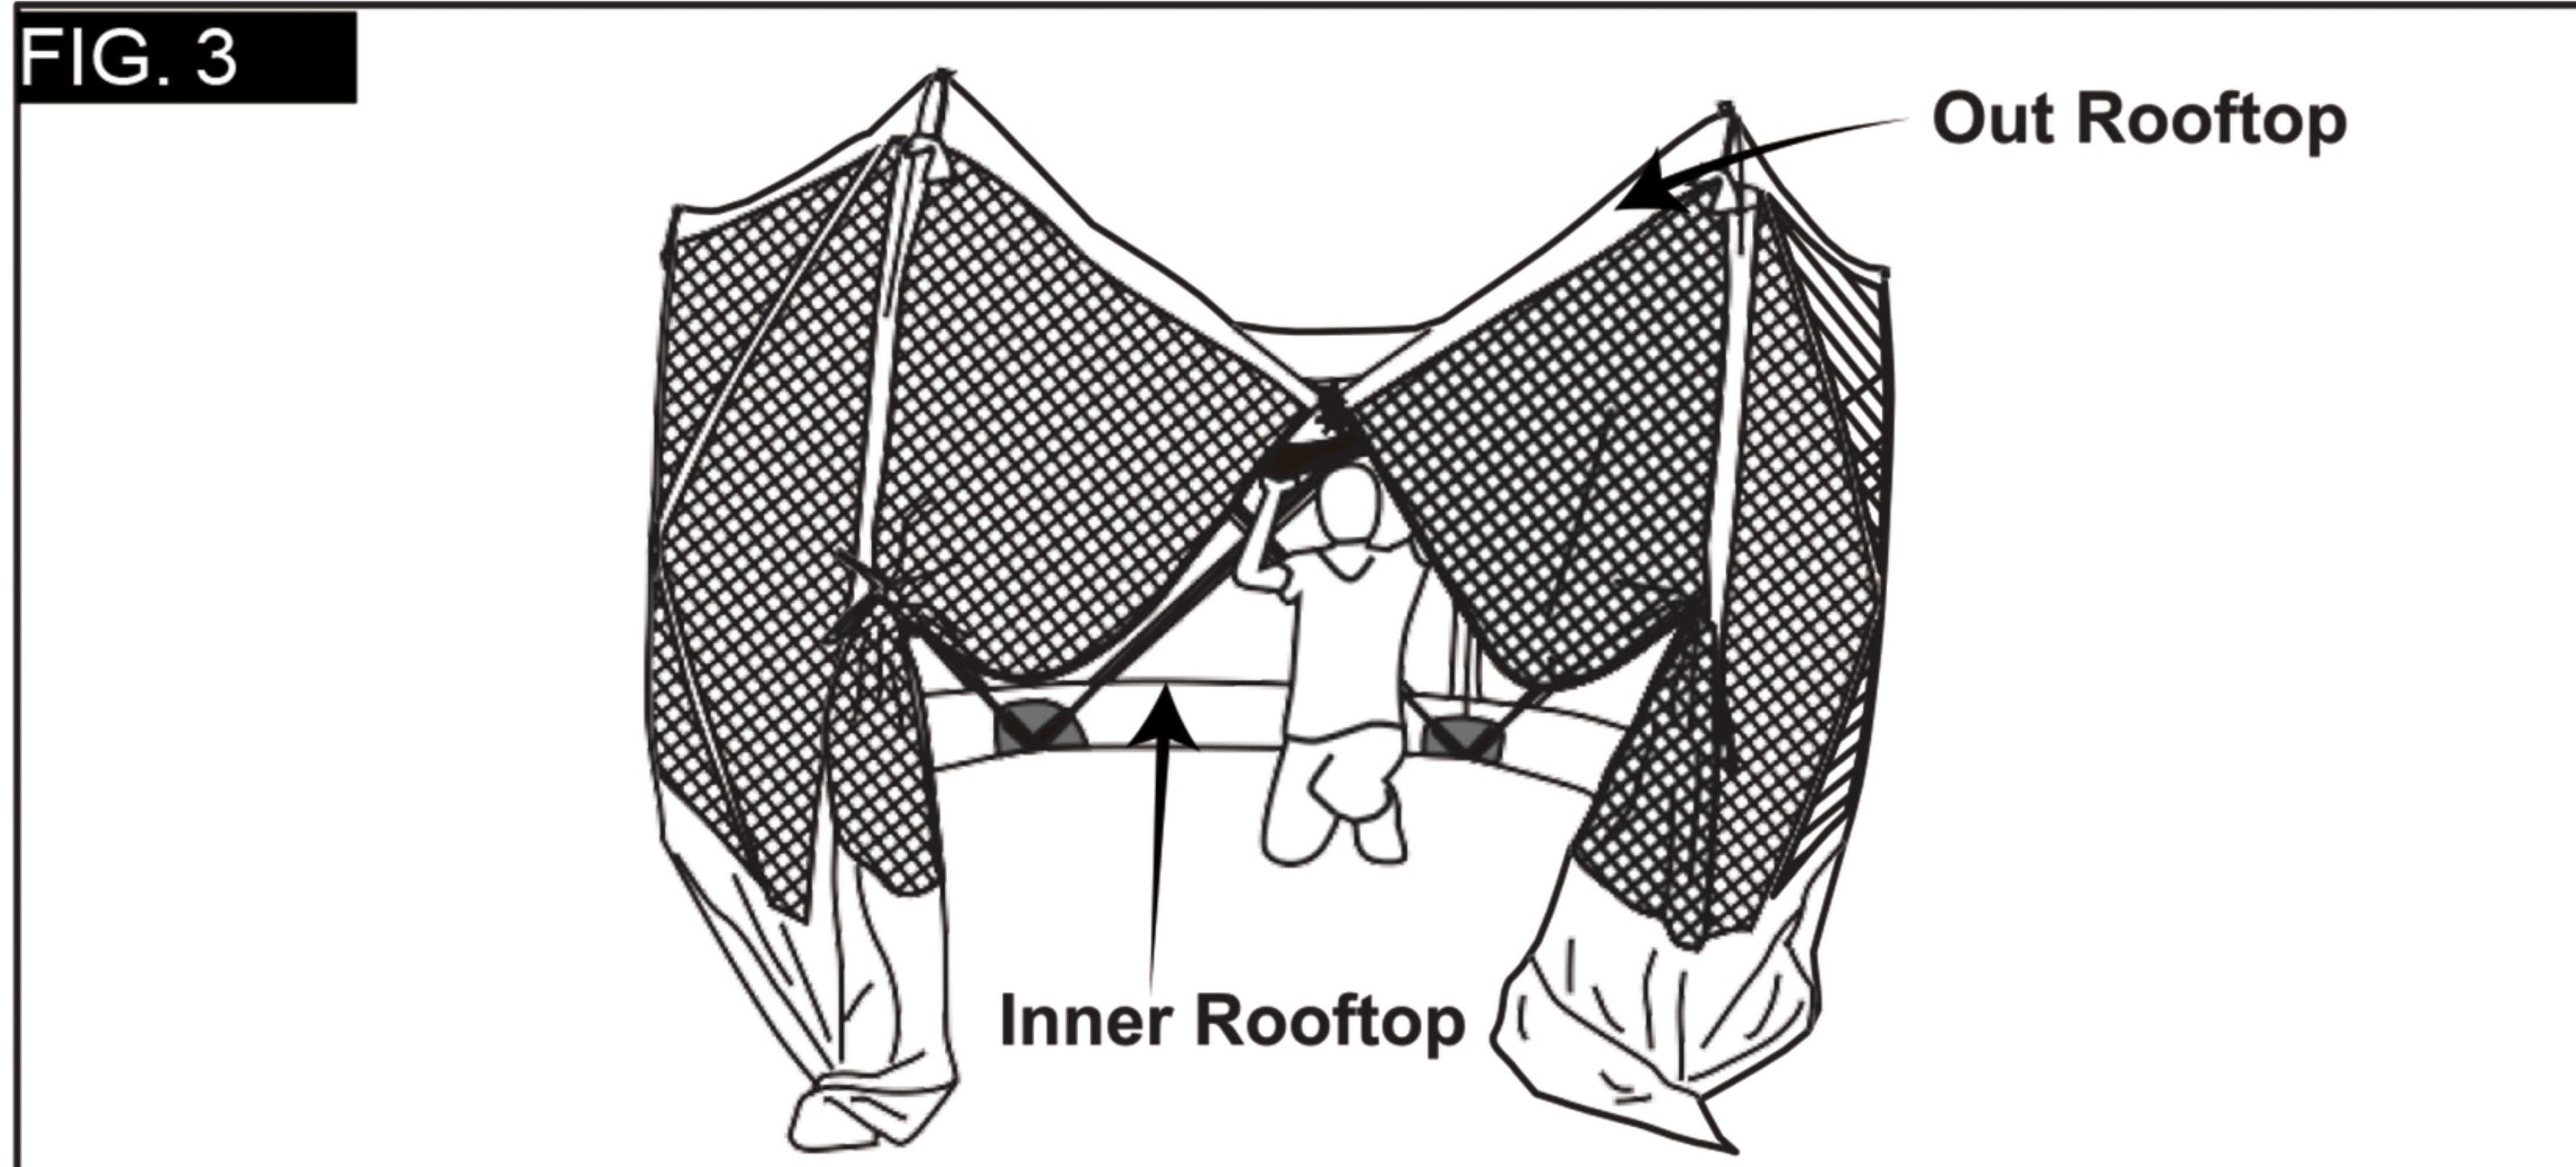

STEP 4:

At this point the tent should be standing on its own, with the rooftop unset up. Enter the screenhouse through the front zip door. Find the center hub and push upward until the rooftop pops into fully opened positioned. **See Fig. 3.**

NOTE: Use caution during this step to avoid potential harm when popping into place. Push up using the palm of your hand. The screenhouse might be lift up, if unsecured to the ground.

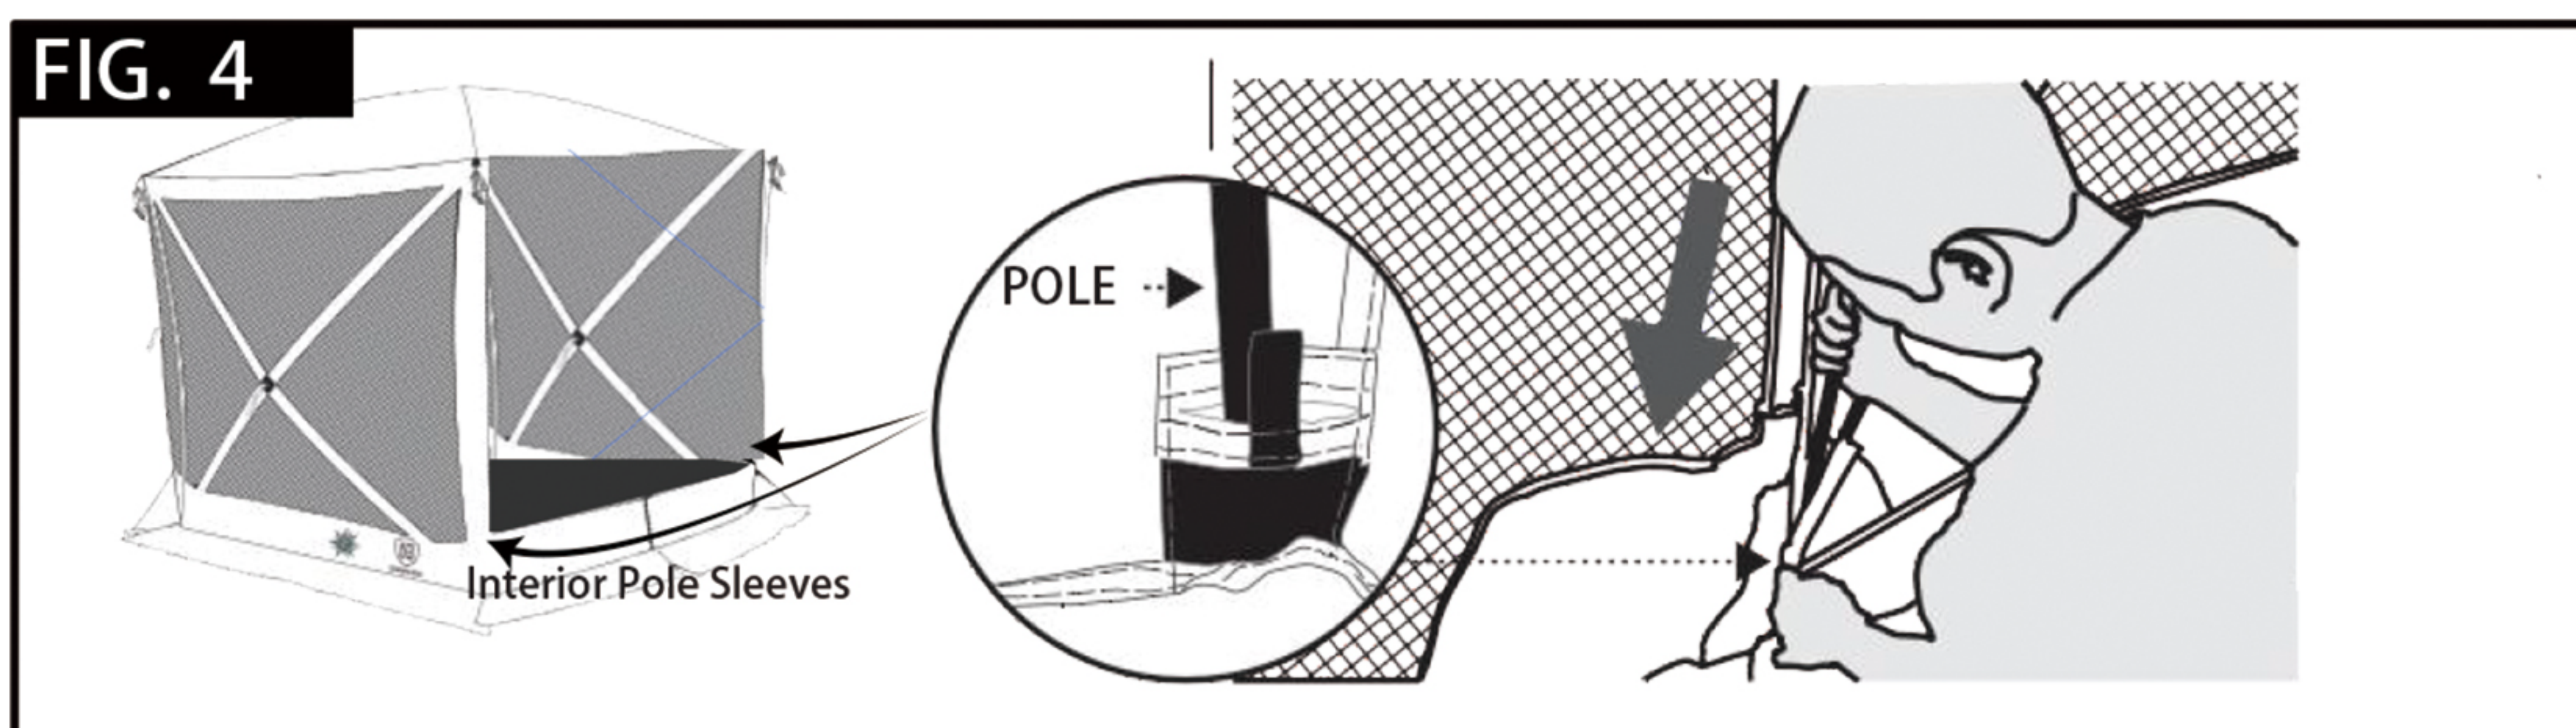


STEP 5:

Assemble the two Fiberglass Poles (B) by connecting its shock-cord separately. Slide each pole into the interior pole sleeves located at corners of the front door. After securing the poles in the sleeves, use the hook loop tabs to secure them into place. **See Fig. 4.**

SET UP


FIG. 5

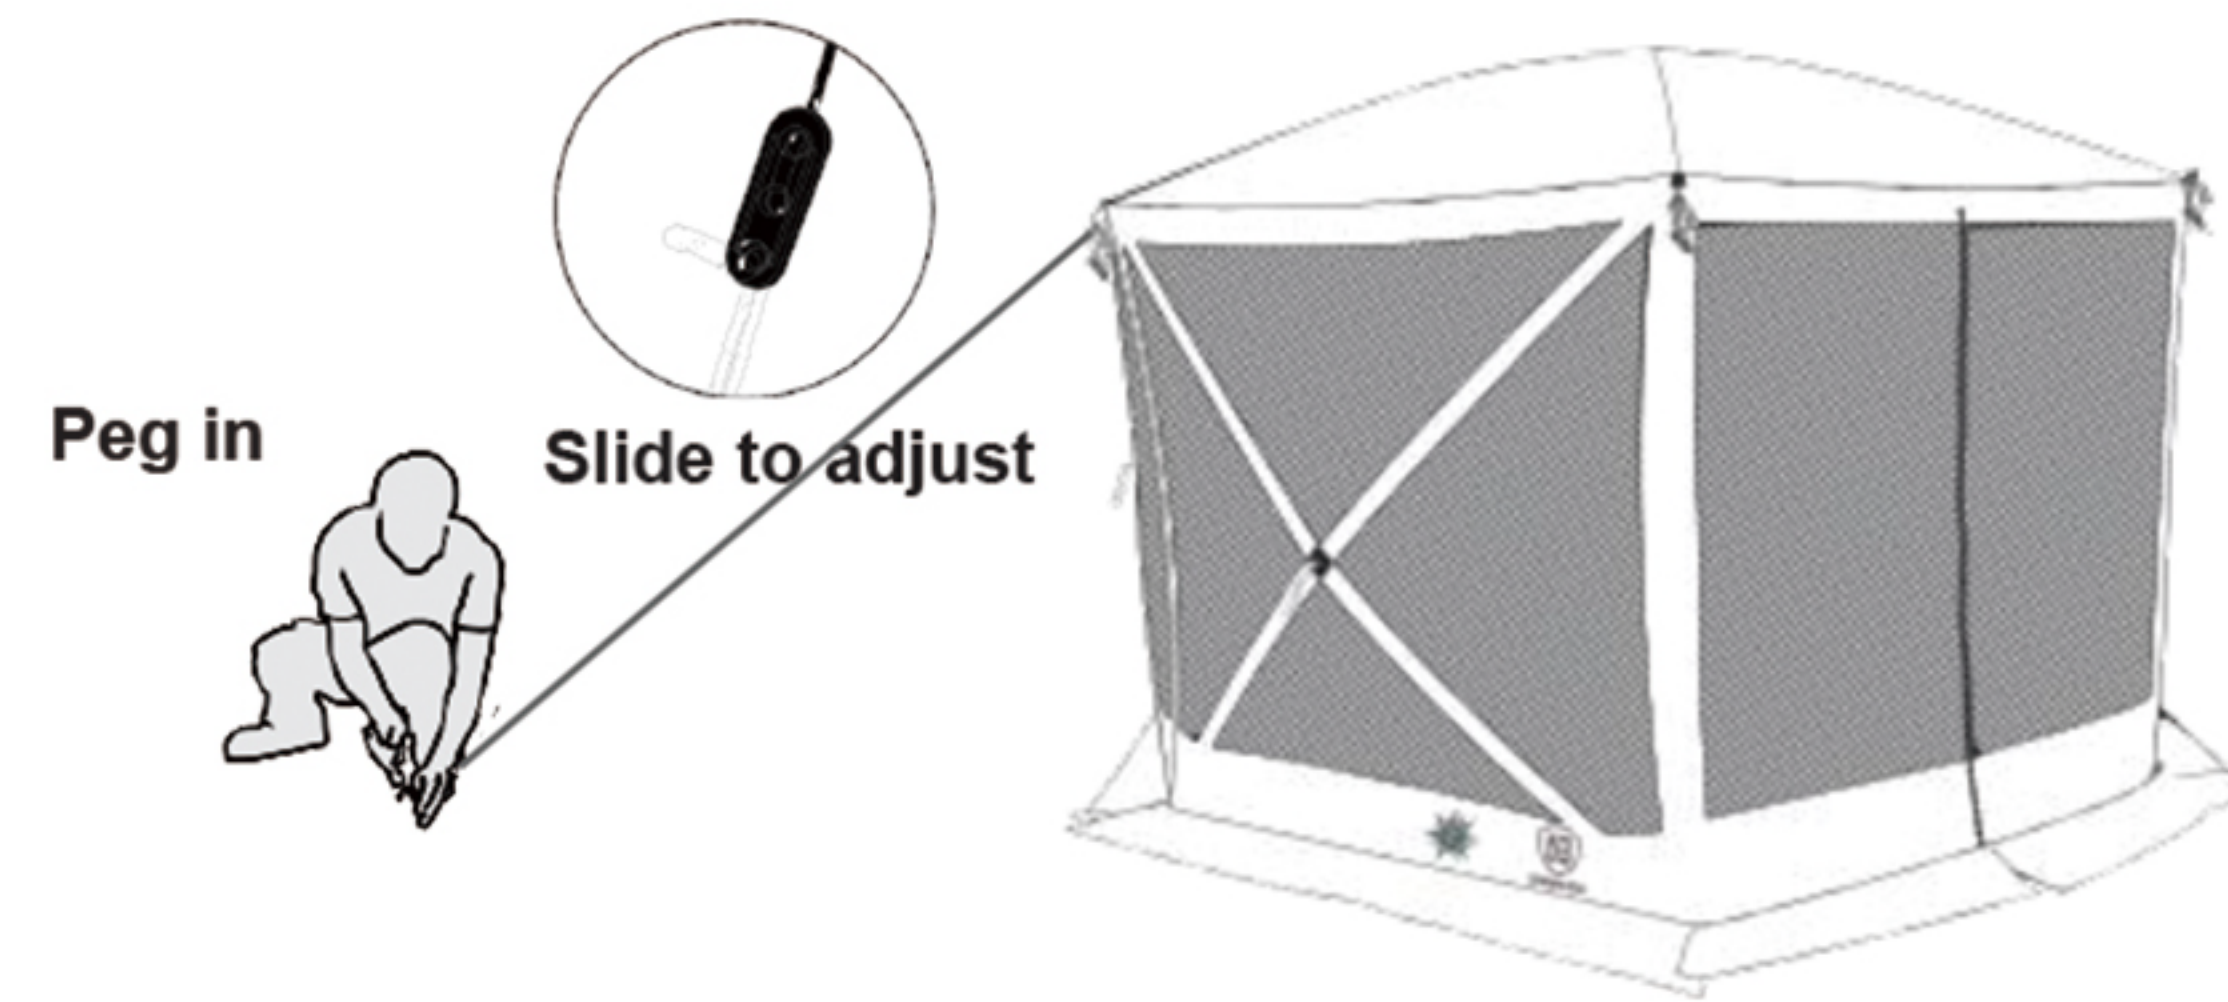

STEP 6:

Outside of the screen house , begin anchoring the ground skirt into place with the provided Stakes (E) and Tie-Down Ropes (D). Use the adjustment sliders to get the correct tension for the rope. **See Fig. 5.**

FIG. 6

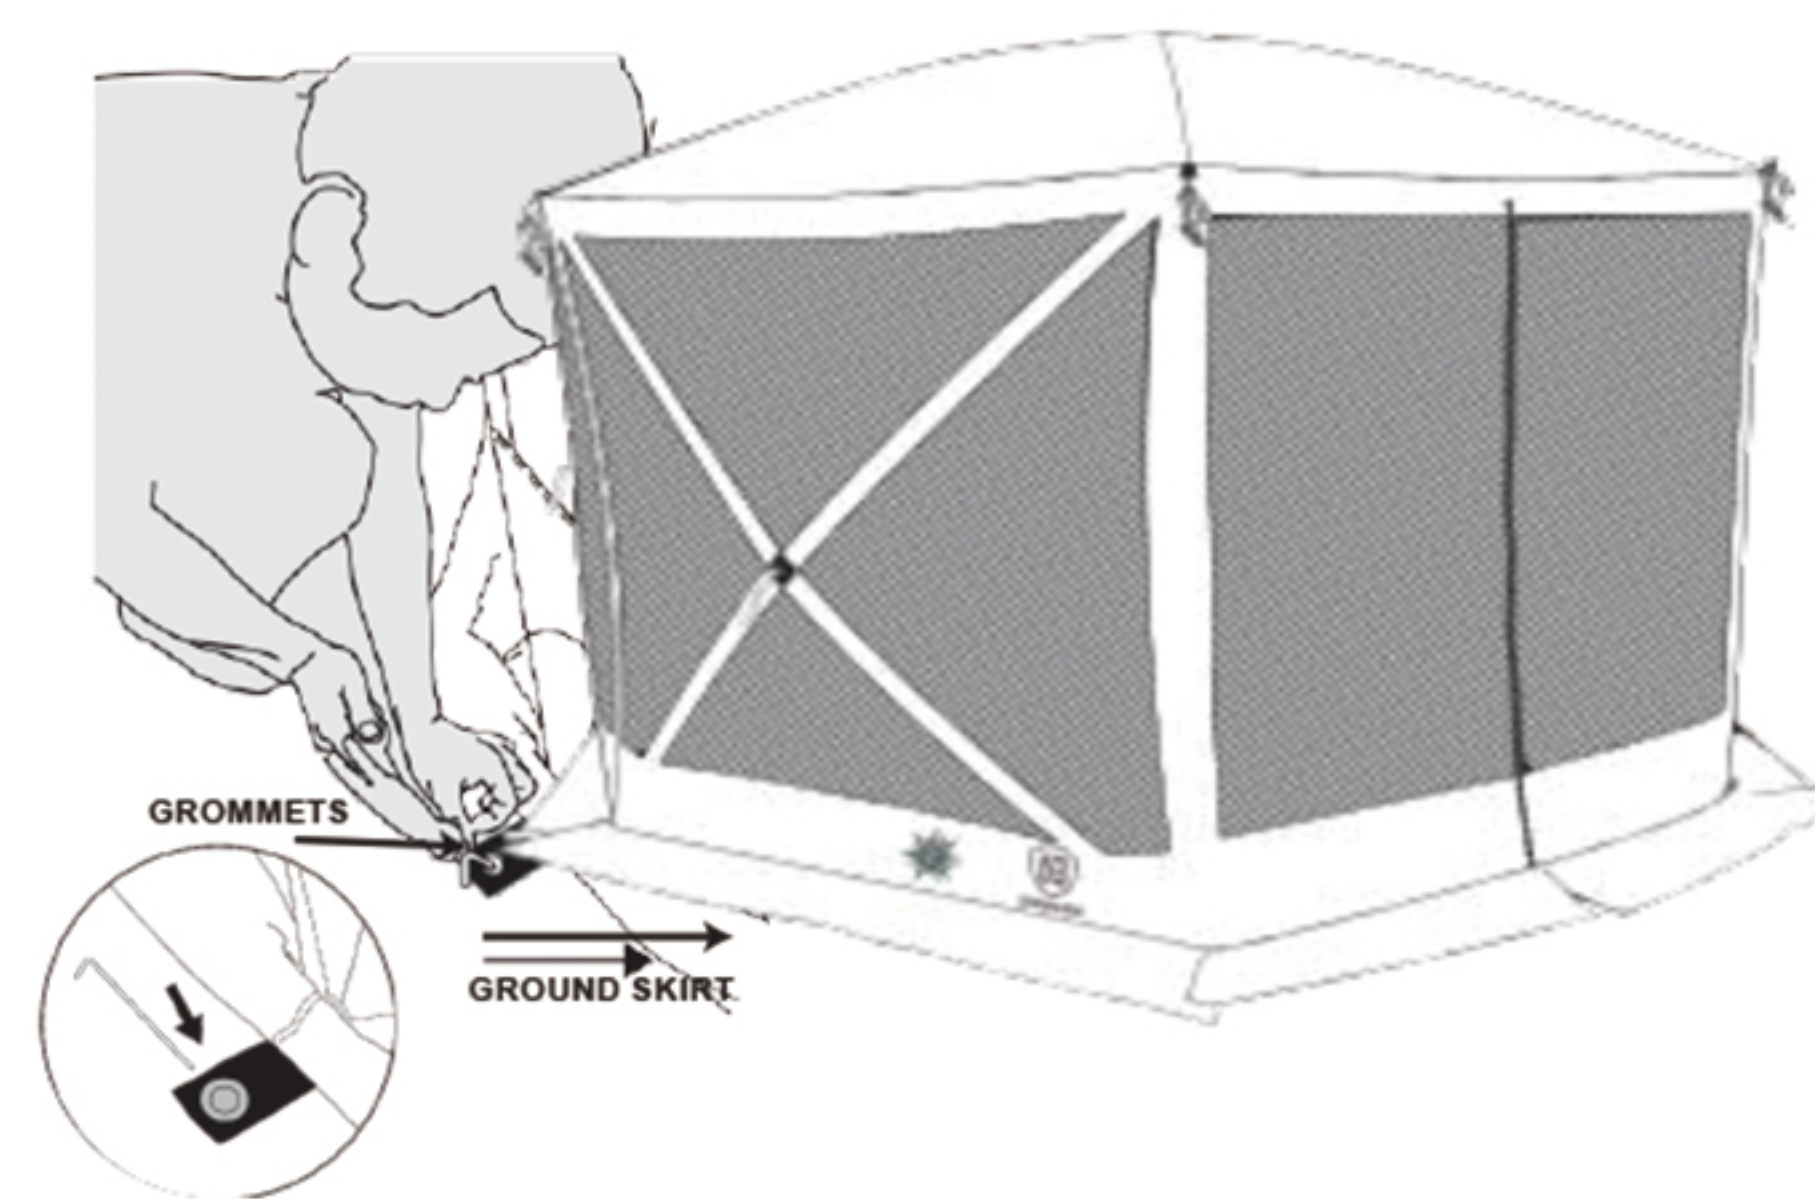


STEP 7:

Use a hammer to drive the Stakes (E) completely through the grommet found on each corner of the ground skirt. **See Fig. 6.**

Your screenhouse is ready to go! Enjoy a nice day out.

TAKE DOWN

Disassembly

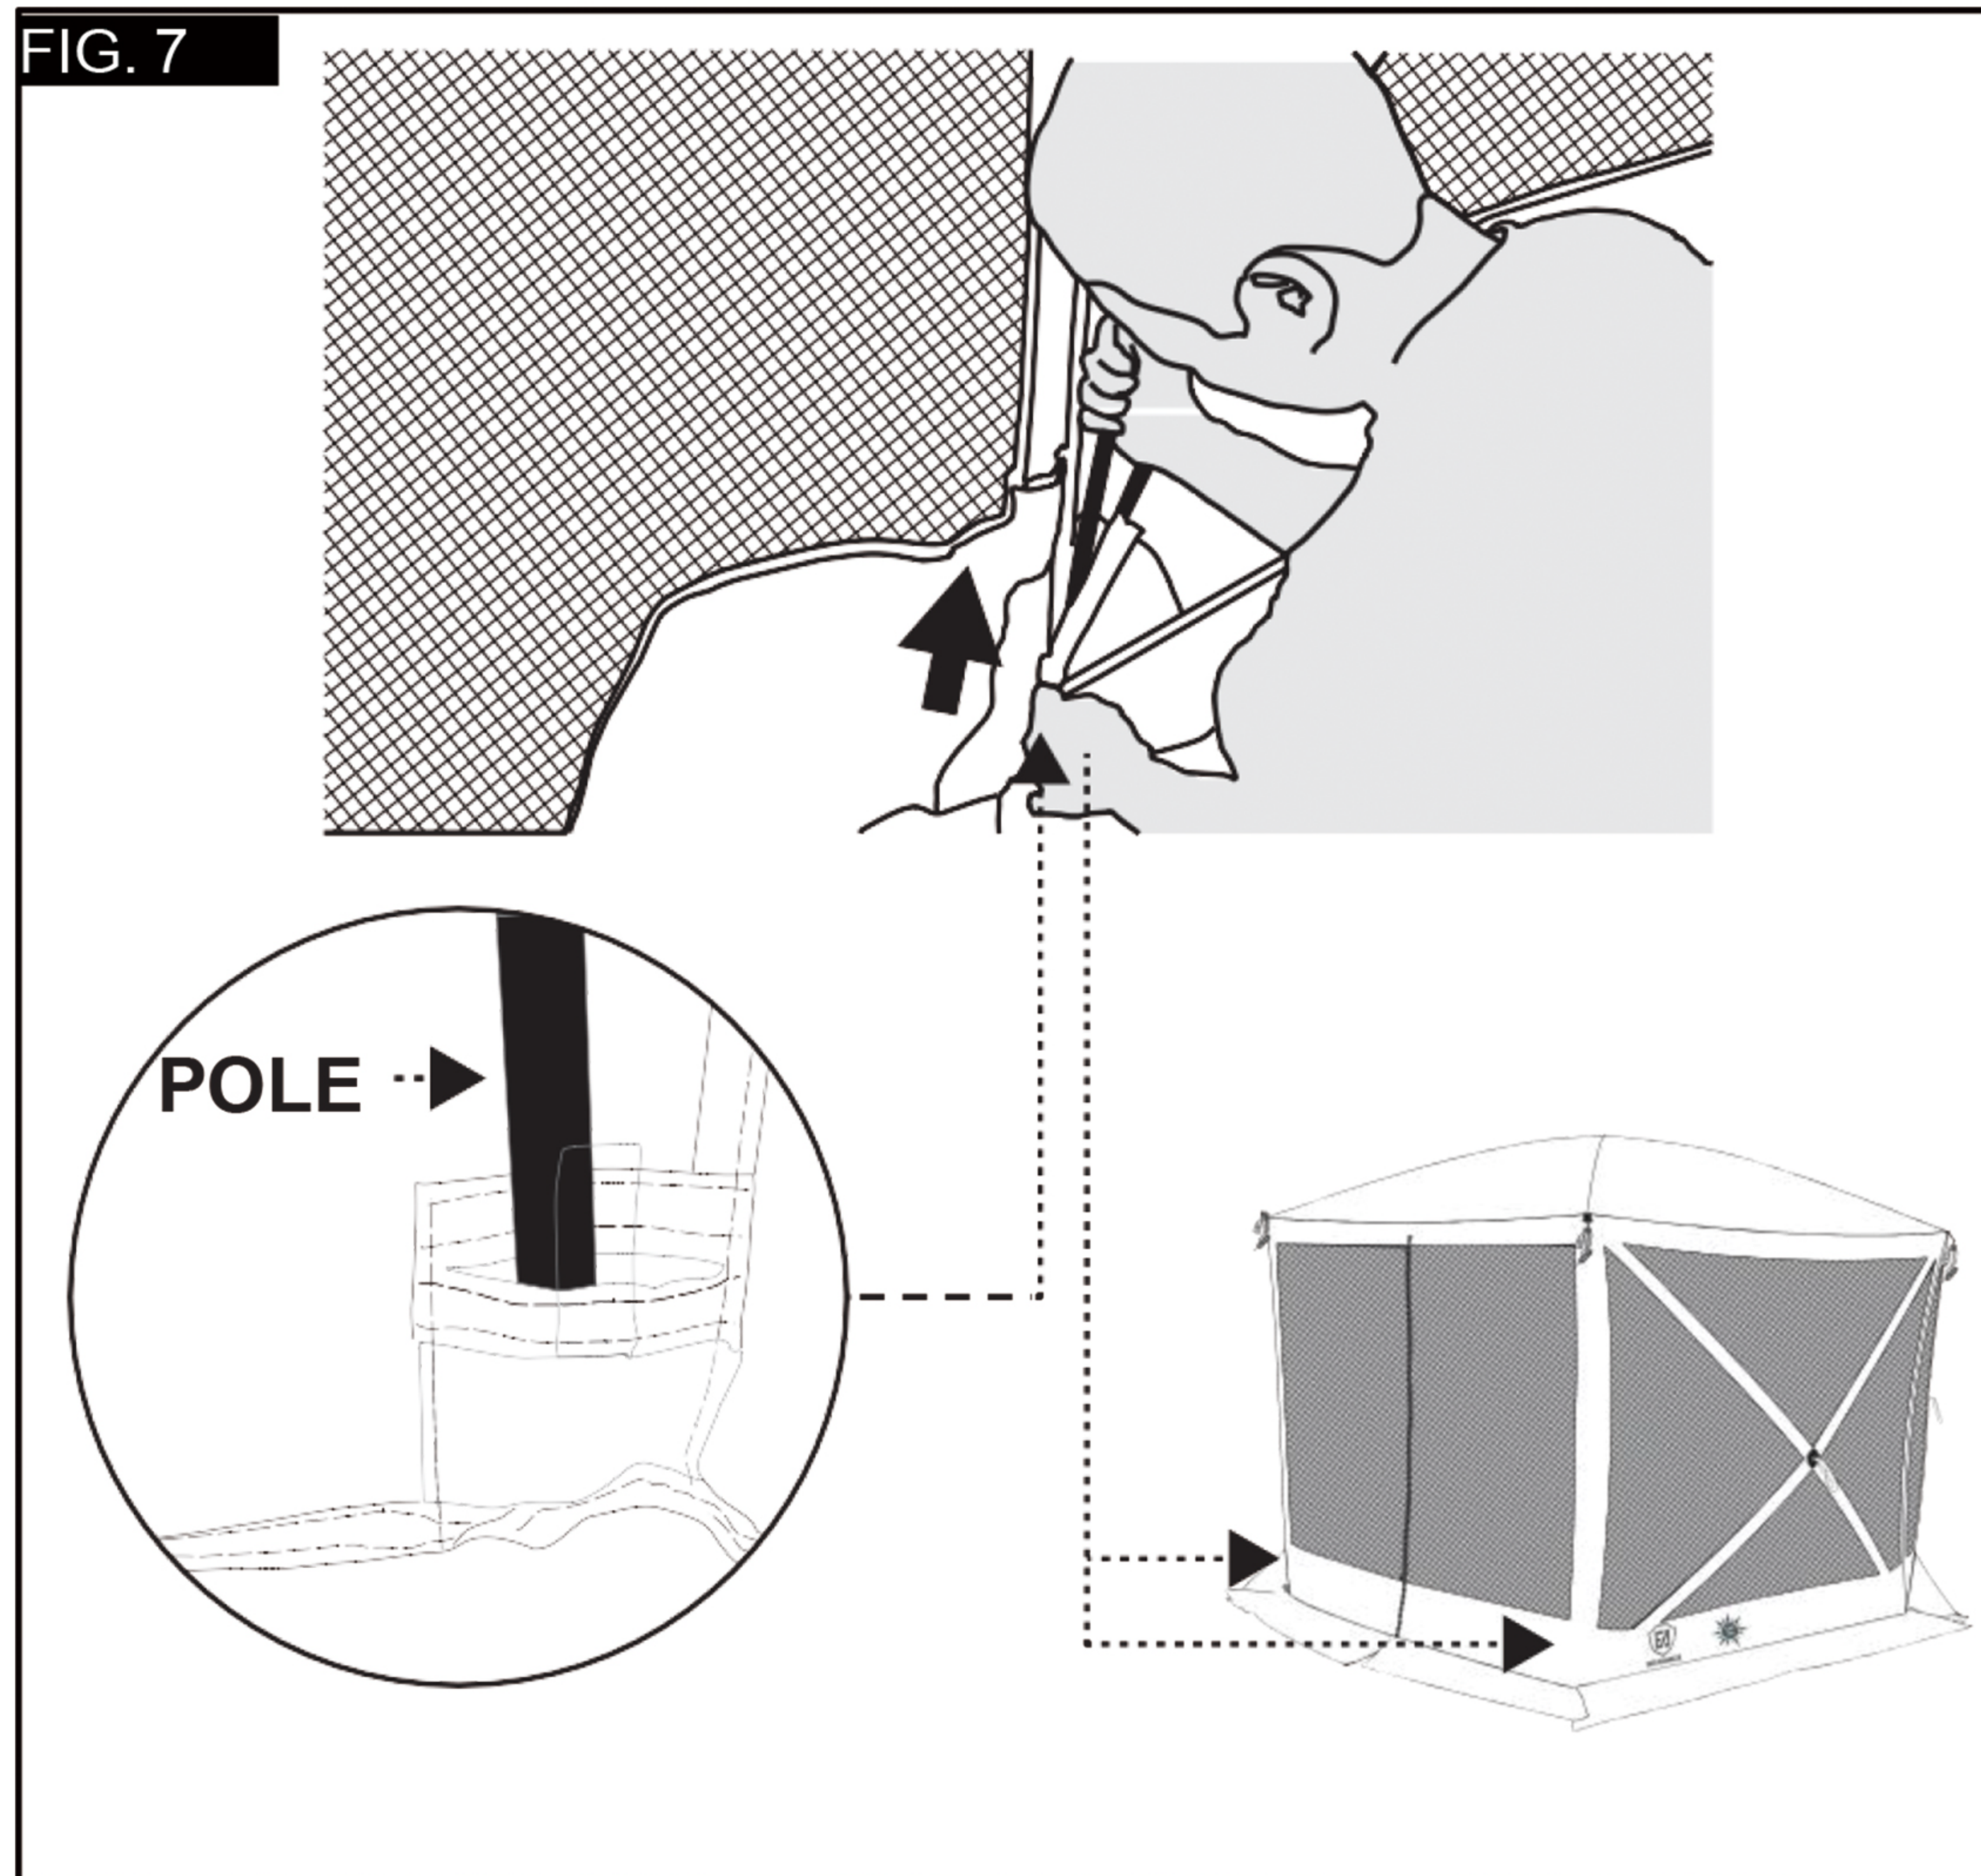


STEP 1A:

Undo the hook and loop tabs around the Fiberglass Poles (B) then remove them from the interior sleeves, at the corners of the front door. **See Fig. 7.**

STEP 1B:

Remove the Stakes (E) and relax the Tie-Down Ropes (D) from outside of the tent.

TAKE DOWN

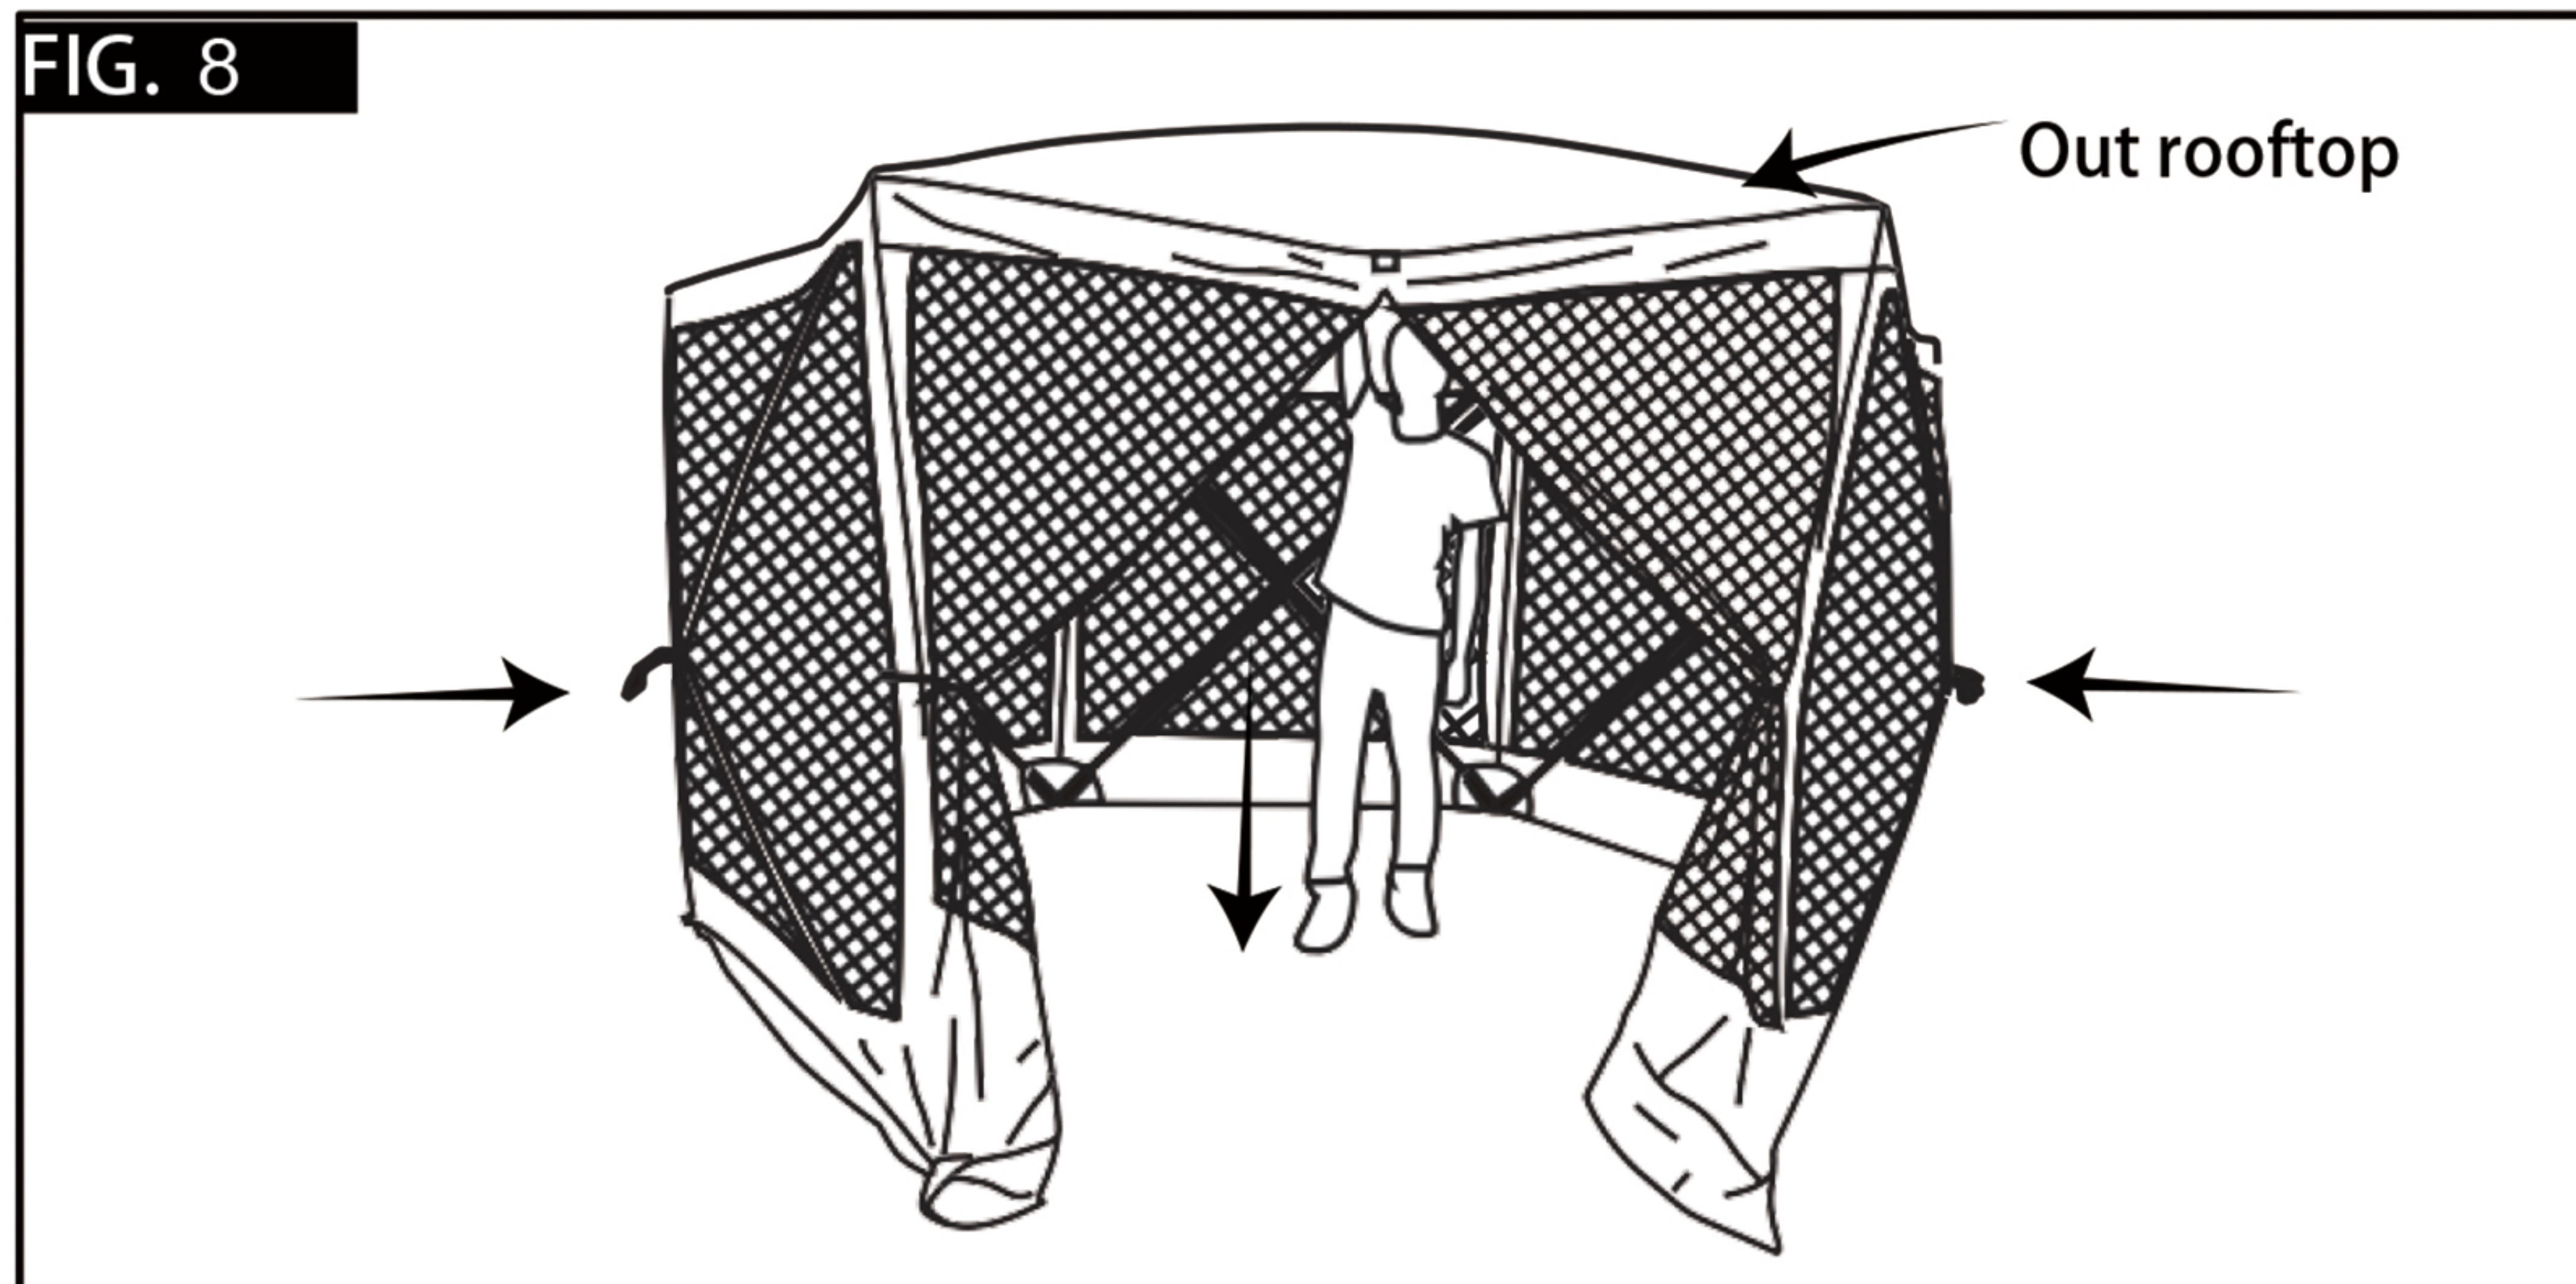

STEP 2:

Walk inside the tent, grab the webbing loop hanging from the center rooftop hub and pull down until the tension releases and the roof drops down.

See Fig. 8.

NOTE: Use caution to avoid hitting your head on the poles as they come down. Position yourself appropriately underneath the roof hub.


STEP 3:

Walk around the tent, collapsing each side wall by carefully pushing the hub in . It will automatically relax towards the center of the tent.

NOTE: To prevent tangling , zip the door panel shut in advance.

TAKE DOWN

FIG. 9

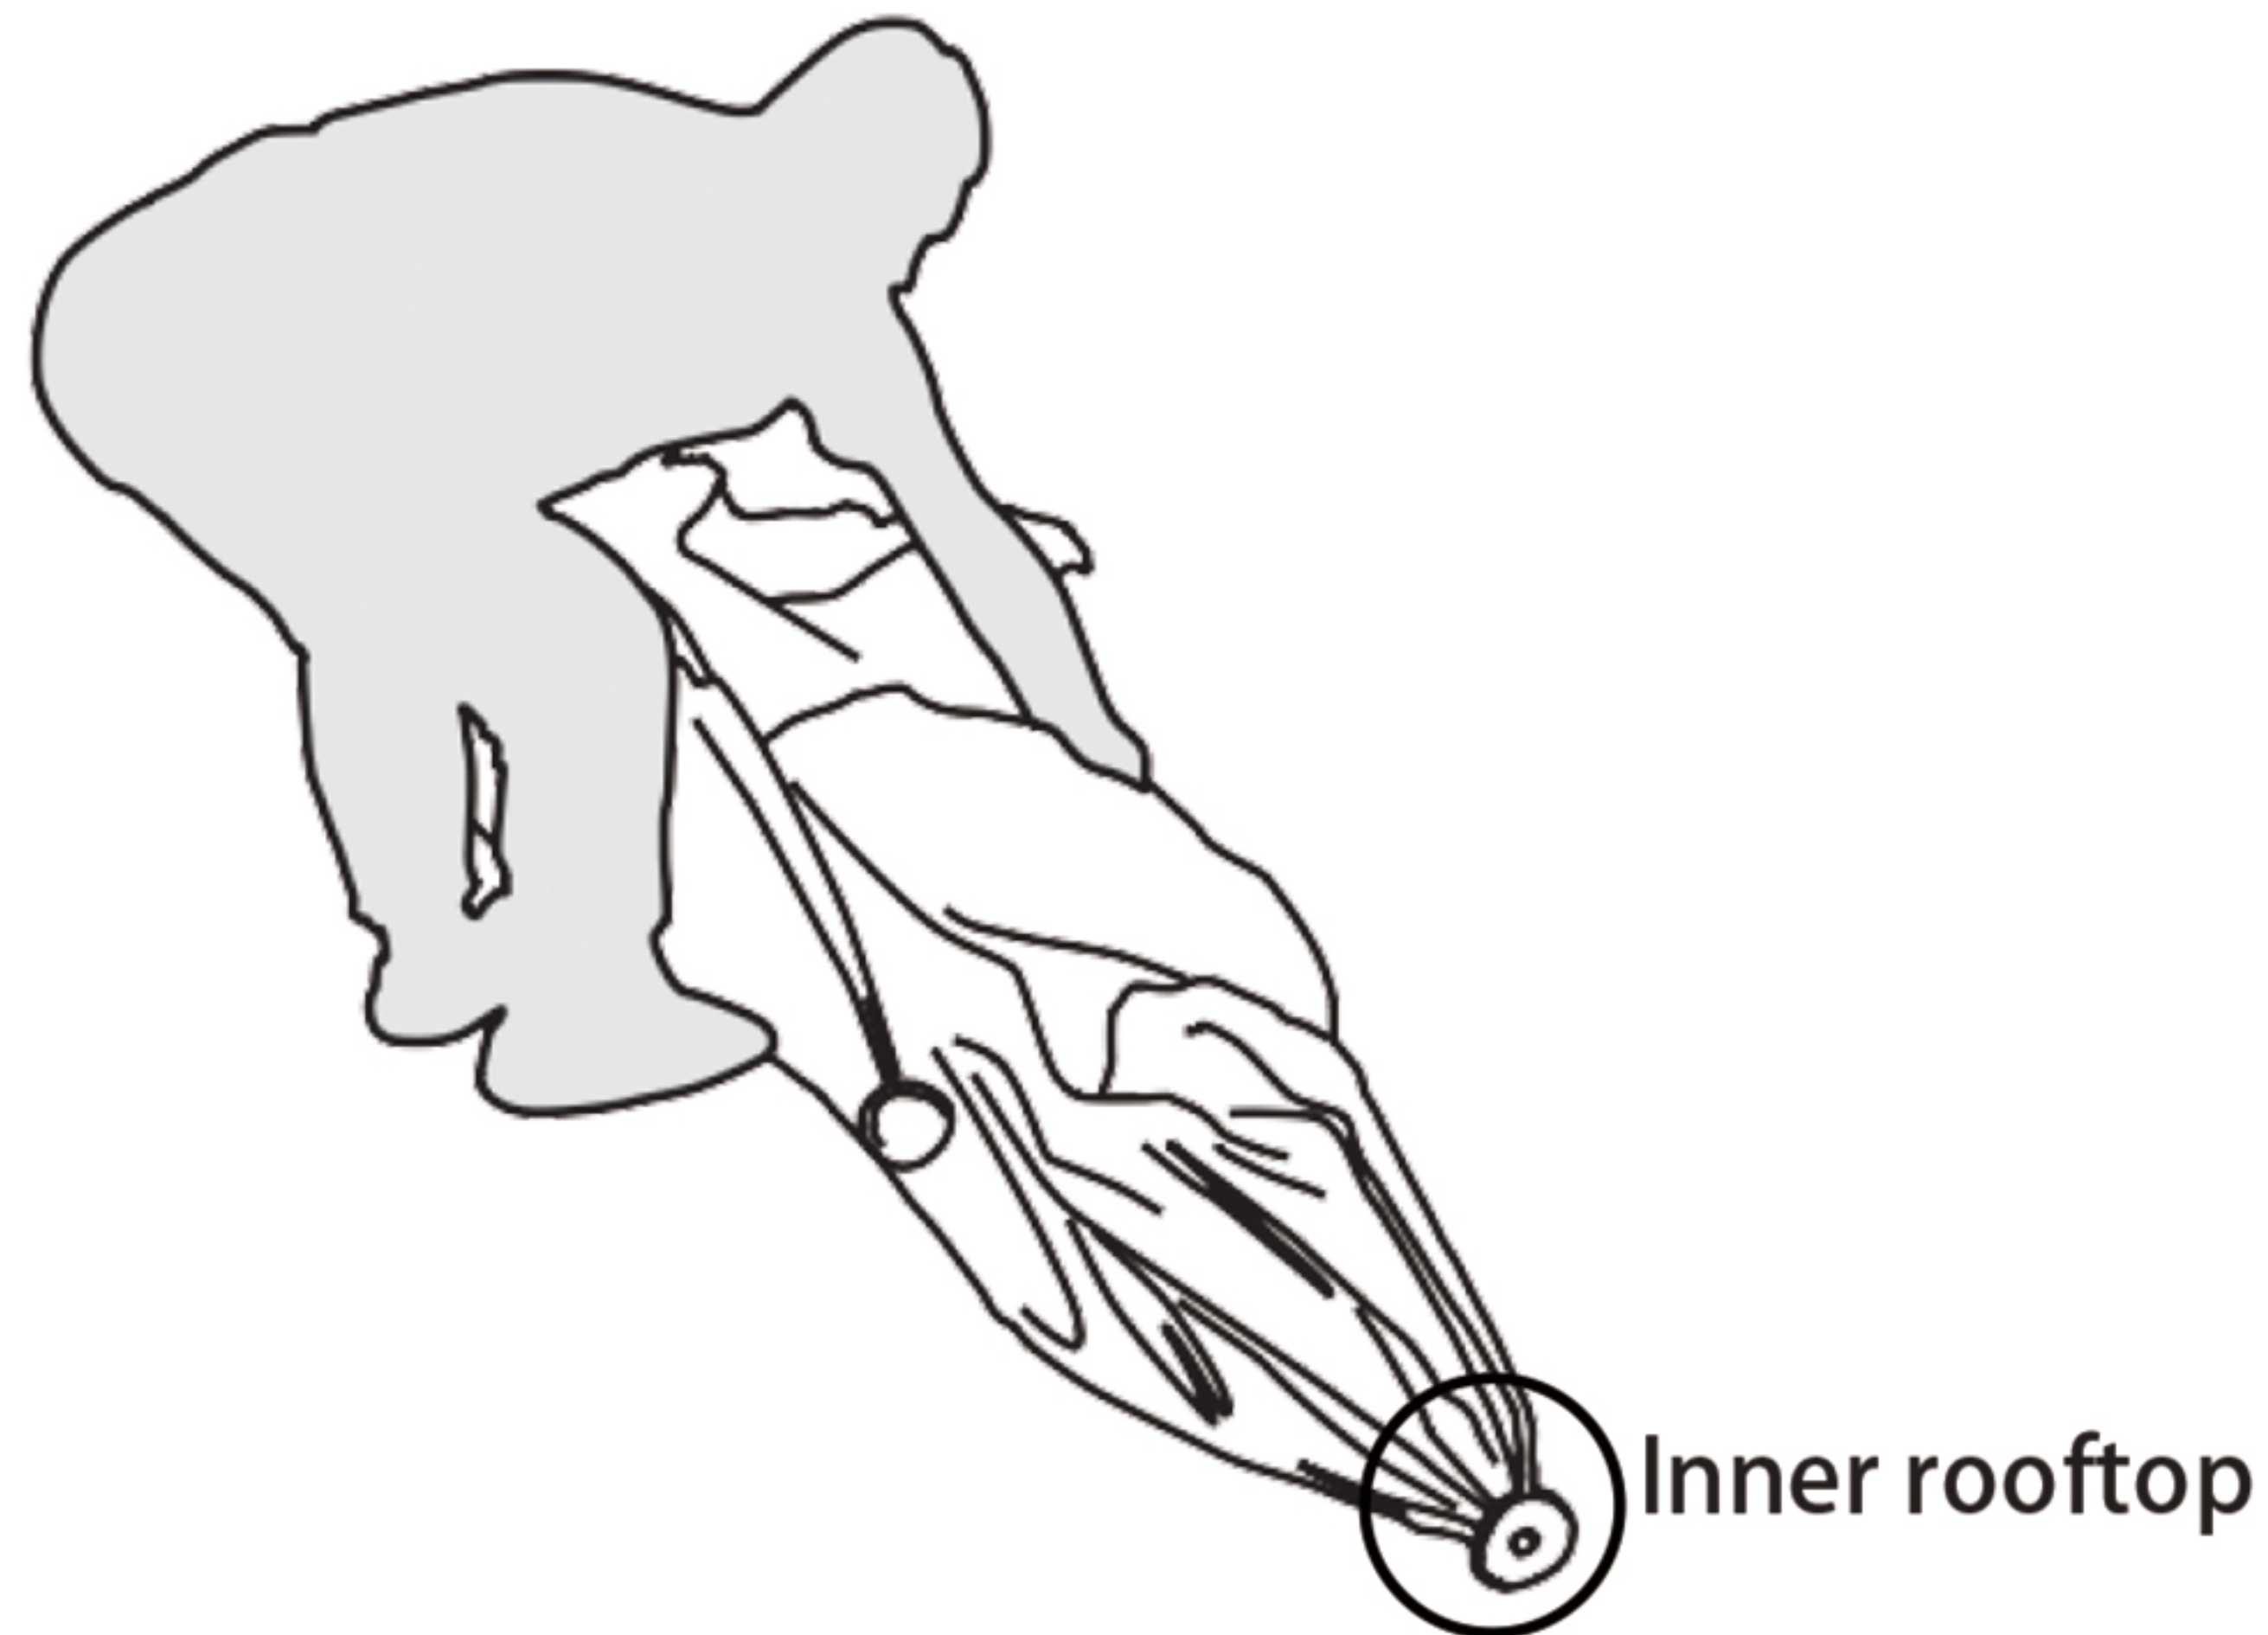

STEP 4:

At this point, the tent will be flat on the ground. Gather the corners of each side wall and fold in. Be watchful of entangled poles and don't force the tent while folding it. **See Fig. 9.**

STEP 5:

Wrap and tightening fasten the strap around the folded tent to make restoring the carry bag easier. When placing inside the bag, slide in the inner rooftop first and then the entire screenhouse. Put the rest of the items (Stake, Tie Down Ropes, and Poles) into the carry bag and zip it close to complete disassembly and store away.

WARRANTY INFORMATION

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.

PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

For more information, please refer to:

 Website: www.everadvanced.com

 Email: info@everadvanced.com

 Facebook: [@everadvanced](https://www.facebook.com/everadvanced)

 Instagram: [@everadvanced](https://www.instagram.com/everadvanced)