

**EVER ADVANCED  
INSTRUCTION MANUAL**

Camping Tent

(KC-80321)

# TABLE OF CONTENTS

|                           |     |
|---------------------------|-----|
| Safety & Care             | 1   |
| Assembly Instructions     | 2-3 |
| Tent Folding Instructions | 4   |
| Warranty Information      | 5   |

## PLEASE READ CAREFULLY

### NOTE

Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

# SAFETY & CARE

## SAFETY WARNING - Do's and Do Not's

EVERYONE WHO USES THIS TENT SHOULD READ THIS MANUAL AND BECOME FAMILIAR WITH ALL SAFETY WARNINGS AND PRECAUTIONS FOR SAFE USE, ASSEMBLY, CARE, MAINTENANCE, AND STORAGE. KEEP THIS MANUAL SO YOU CAN REFER TO IT LATER.

**! DANGER** CARBON MONOXIDE GAS WILL KILL YOU  
Stoves, heaters, grills, lanterns, candles, and other fuel-burning devices that burn propane, natural gas, charcoal, kerosene, coal, or other fuels produce a toxic gas called carbon monoxide. Because carbon monoxide gas is invisible, odorless, and colorless, a dangerous level of carbon monoxide gas can accumulate in a tent which cannot be detected by sight, smell, or taste. For these reasons:

- DO NOT use matches, lighters, stoves, heaters, grills, lanterns, candles, cooking equipment, or other fuel-burning devices inside or near a tent.
- DO NOT build fires inside or near a tent.
- DO NOT leave campfires unattended.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

**! DANGER** PROTECT YOUR CHILDREN

- DO NOT leave children unattended inside a tent or in camp.
- DO NOT allow children to assemble a tent.
- DO NOT allow children to enter or exit a tent except through the door.
- DO NOT allow children to remain in a closed-up tent on hot days.

Your failure to follow this warning will cause death, serious injury, or permanent disability to your children.

**! WARNING** FLAMMABILITY WARNING KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC  
This tent is made with flame resistant fabric which meets CPAI-84 specifications. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective. Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

## CAMPING DO'S AND DON'TS

### DO NOT...

1. Do not pitch the tent near an open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use (other than recommended) water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Do not store the tent on a concrete floor.

### DO...

1. Always extinguish the campfire before leaving the area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.

4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy ropes.
5. Take your tent down and store properly after camping.

## CARE

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON A CONCRETE FLOOR. DO NOT SPRAY THE TENT WITH INSECTICIDE.

Your tent is water repellent, however, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

EXERCISE CARE WHEN USING ELECTRIC DEVICES IN AND NEAR TENTS.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

**IMPORTANT:** WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT.  
NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.  
TO PROLONG THE LIFE OF THE TENT FLOOR, SELECT A LEVEL, CLEAN AREA FOR THE CAMPSITE. TO PREVENT DAMAGE TO THE ZIPPER, UNZIP THE DOORS TO ALLOW AIR TO ENTER THE TENT.  
TO IMPROVE THE WEATHER RESISTANCE OF YOUR TENT, IT IS ADVISABLE TO USE A SEAM SEALER TO COAT ALL EXPOSED SEAMS. YOU SHOULD APPLY ONLY TO THE INSIDE SEAMS OF THE TENT AND UNDERSIDE OF THE TENT FLY. IF APPLIED TO THE OUTSIDE OF SEAMS, DISCOLORATION OF YOUR TENT MAY OCCUR. SEAM SEALER IS AVAILABLE IN THE CAMPING SECTION OF ANY LOCAL SPORTING GOODS STORE.


# ASSEMBLY INSTRUCTIONS

## Assembly Instructions

### STEP 1:

Remove the Tent from the Carry Bag and unfasten the webbing strap around it. **See Fig. 1.**


FIG. 1

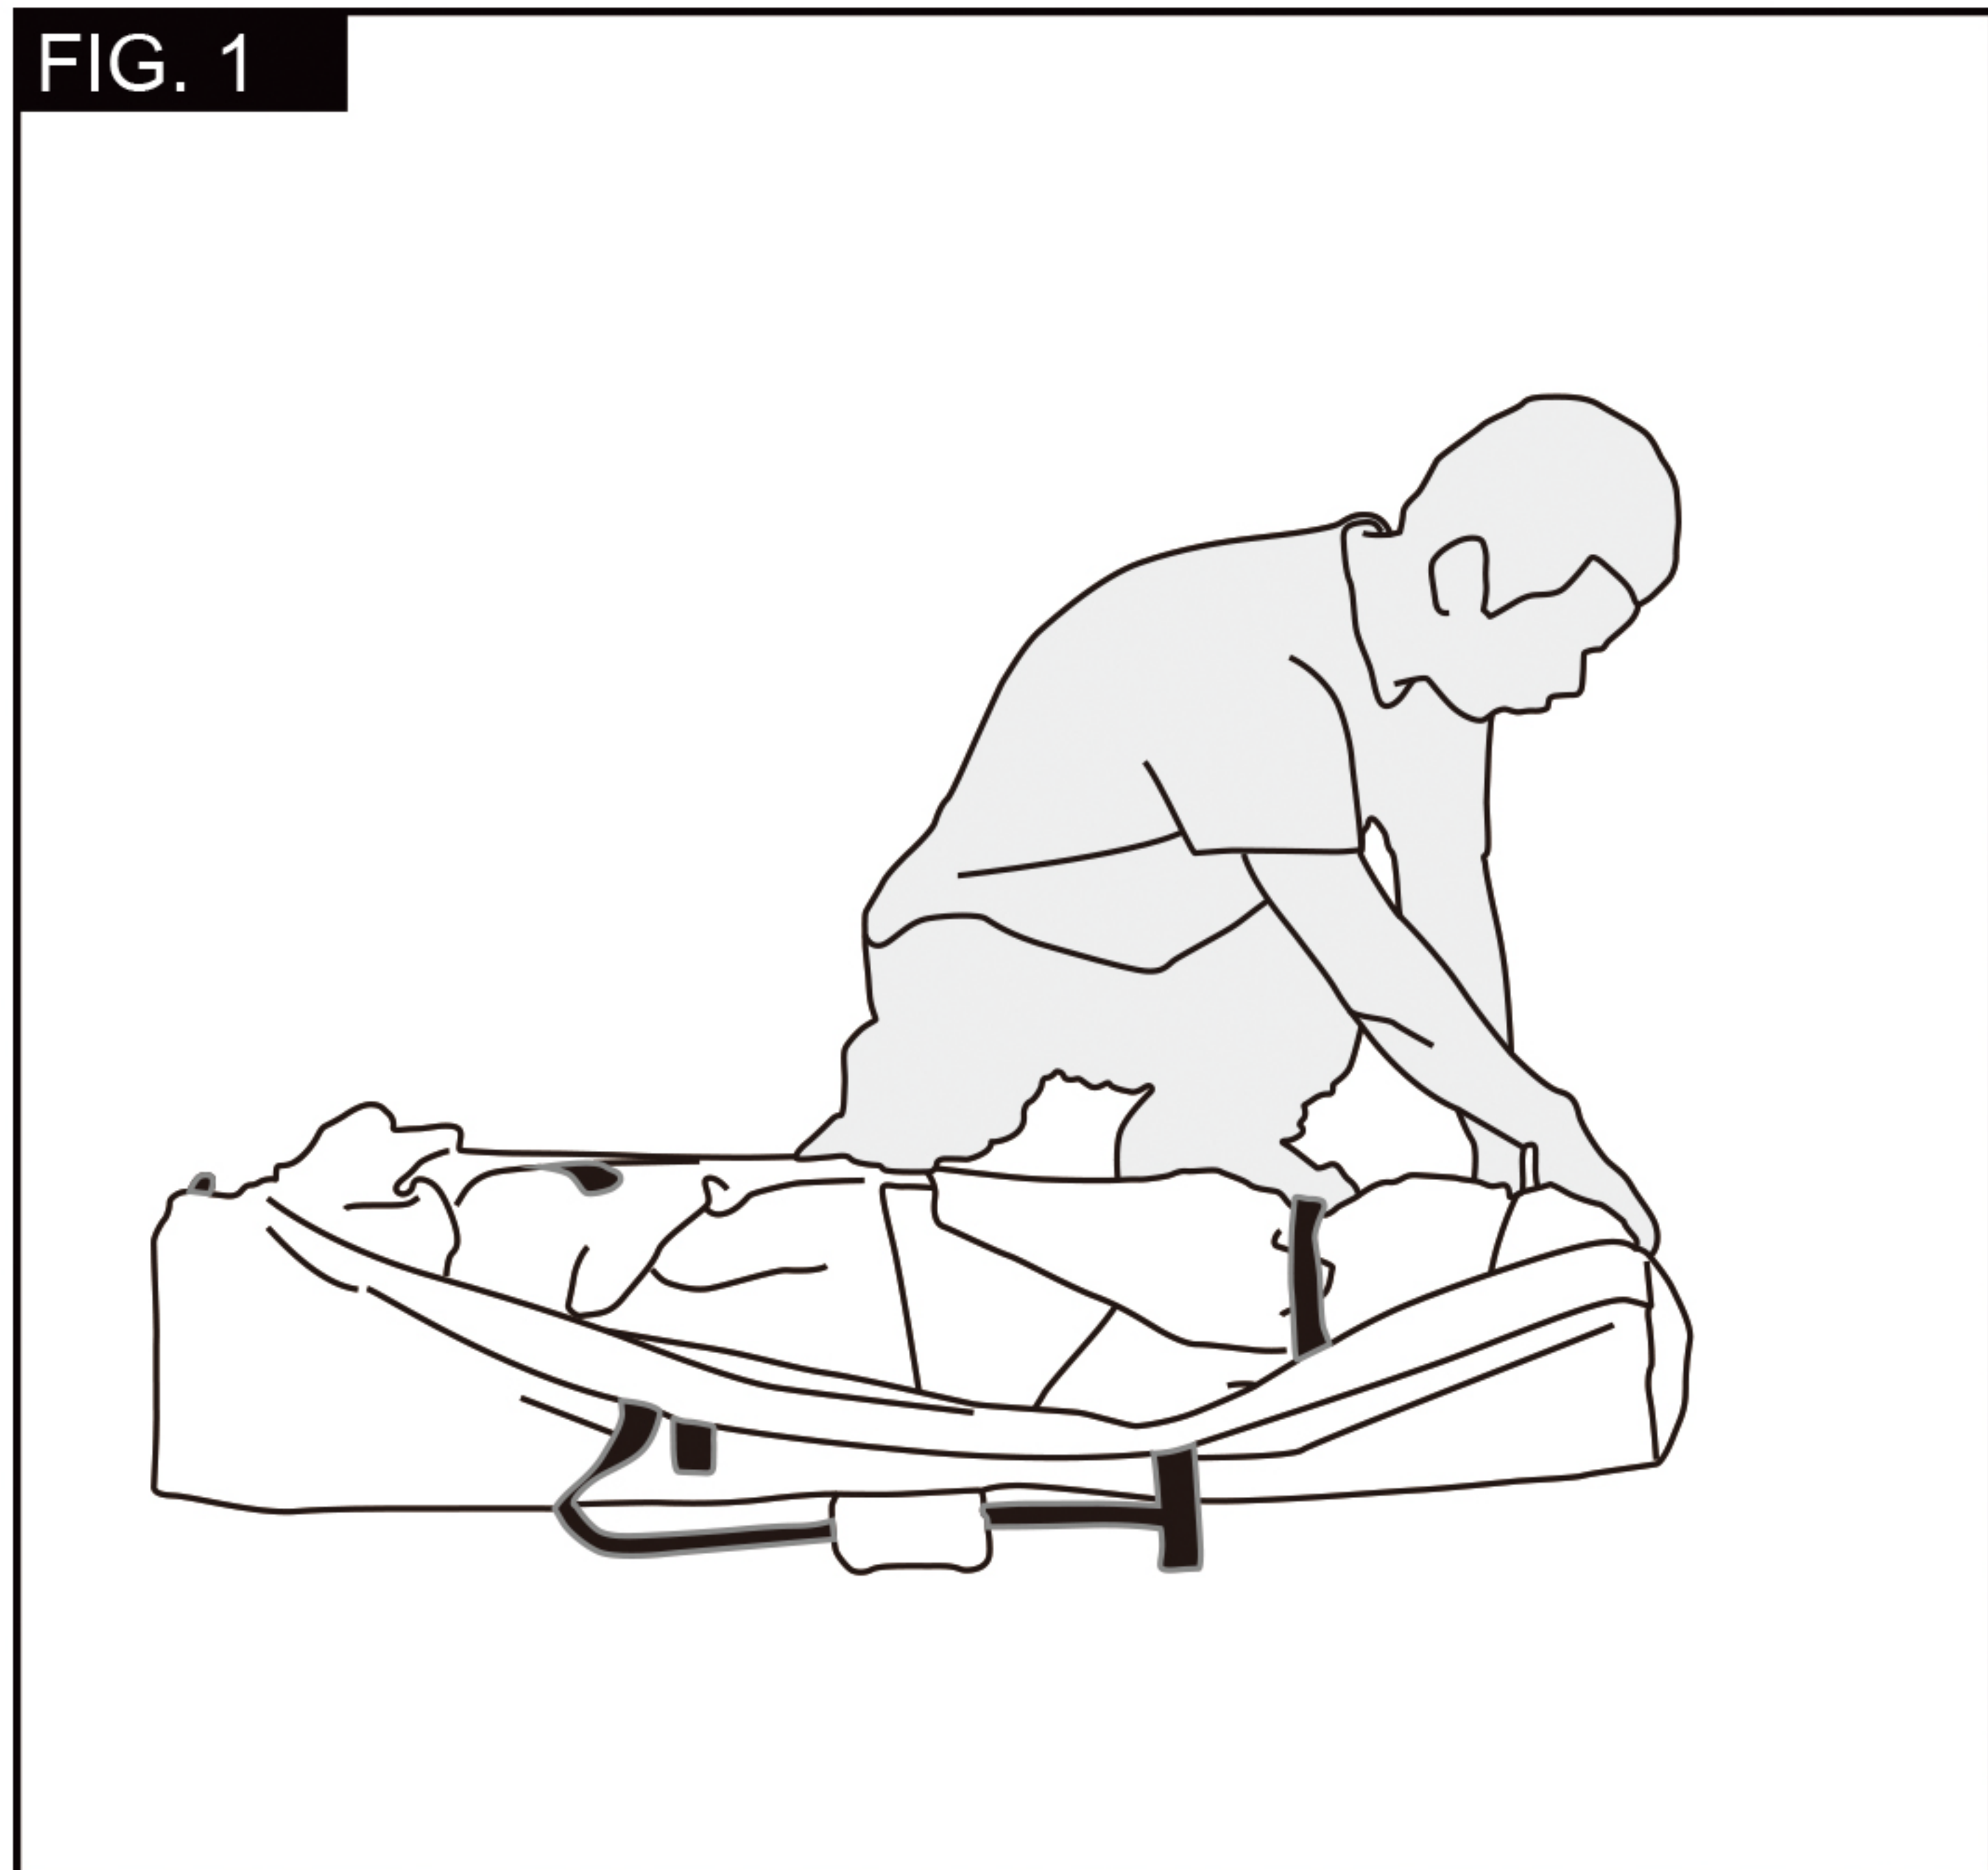

### STEP 2:

Spread out the instant frame with tent body. **See Fig. 2.**


FIG. 2

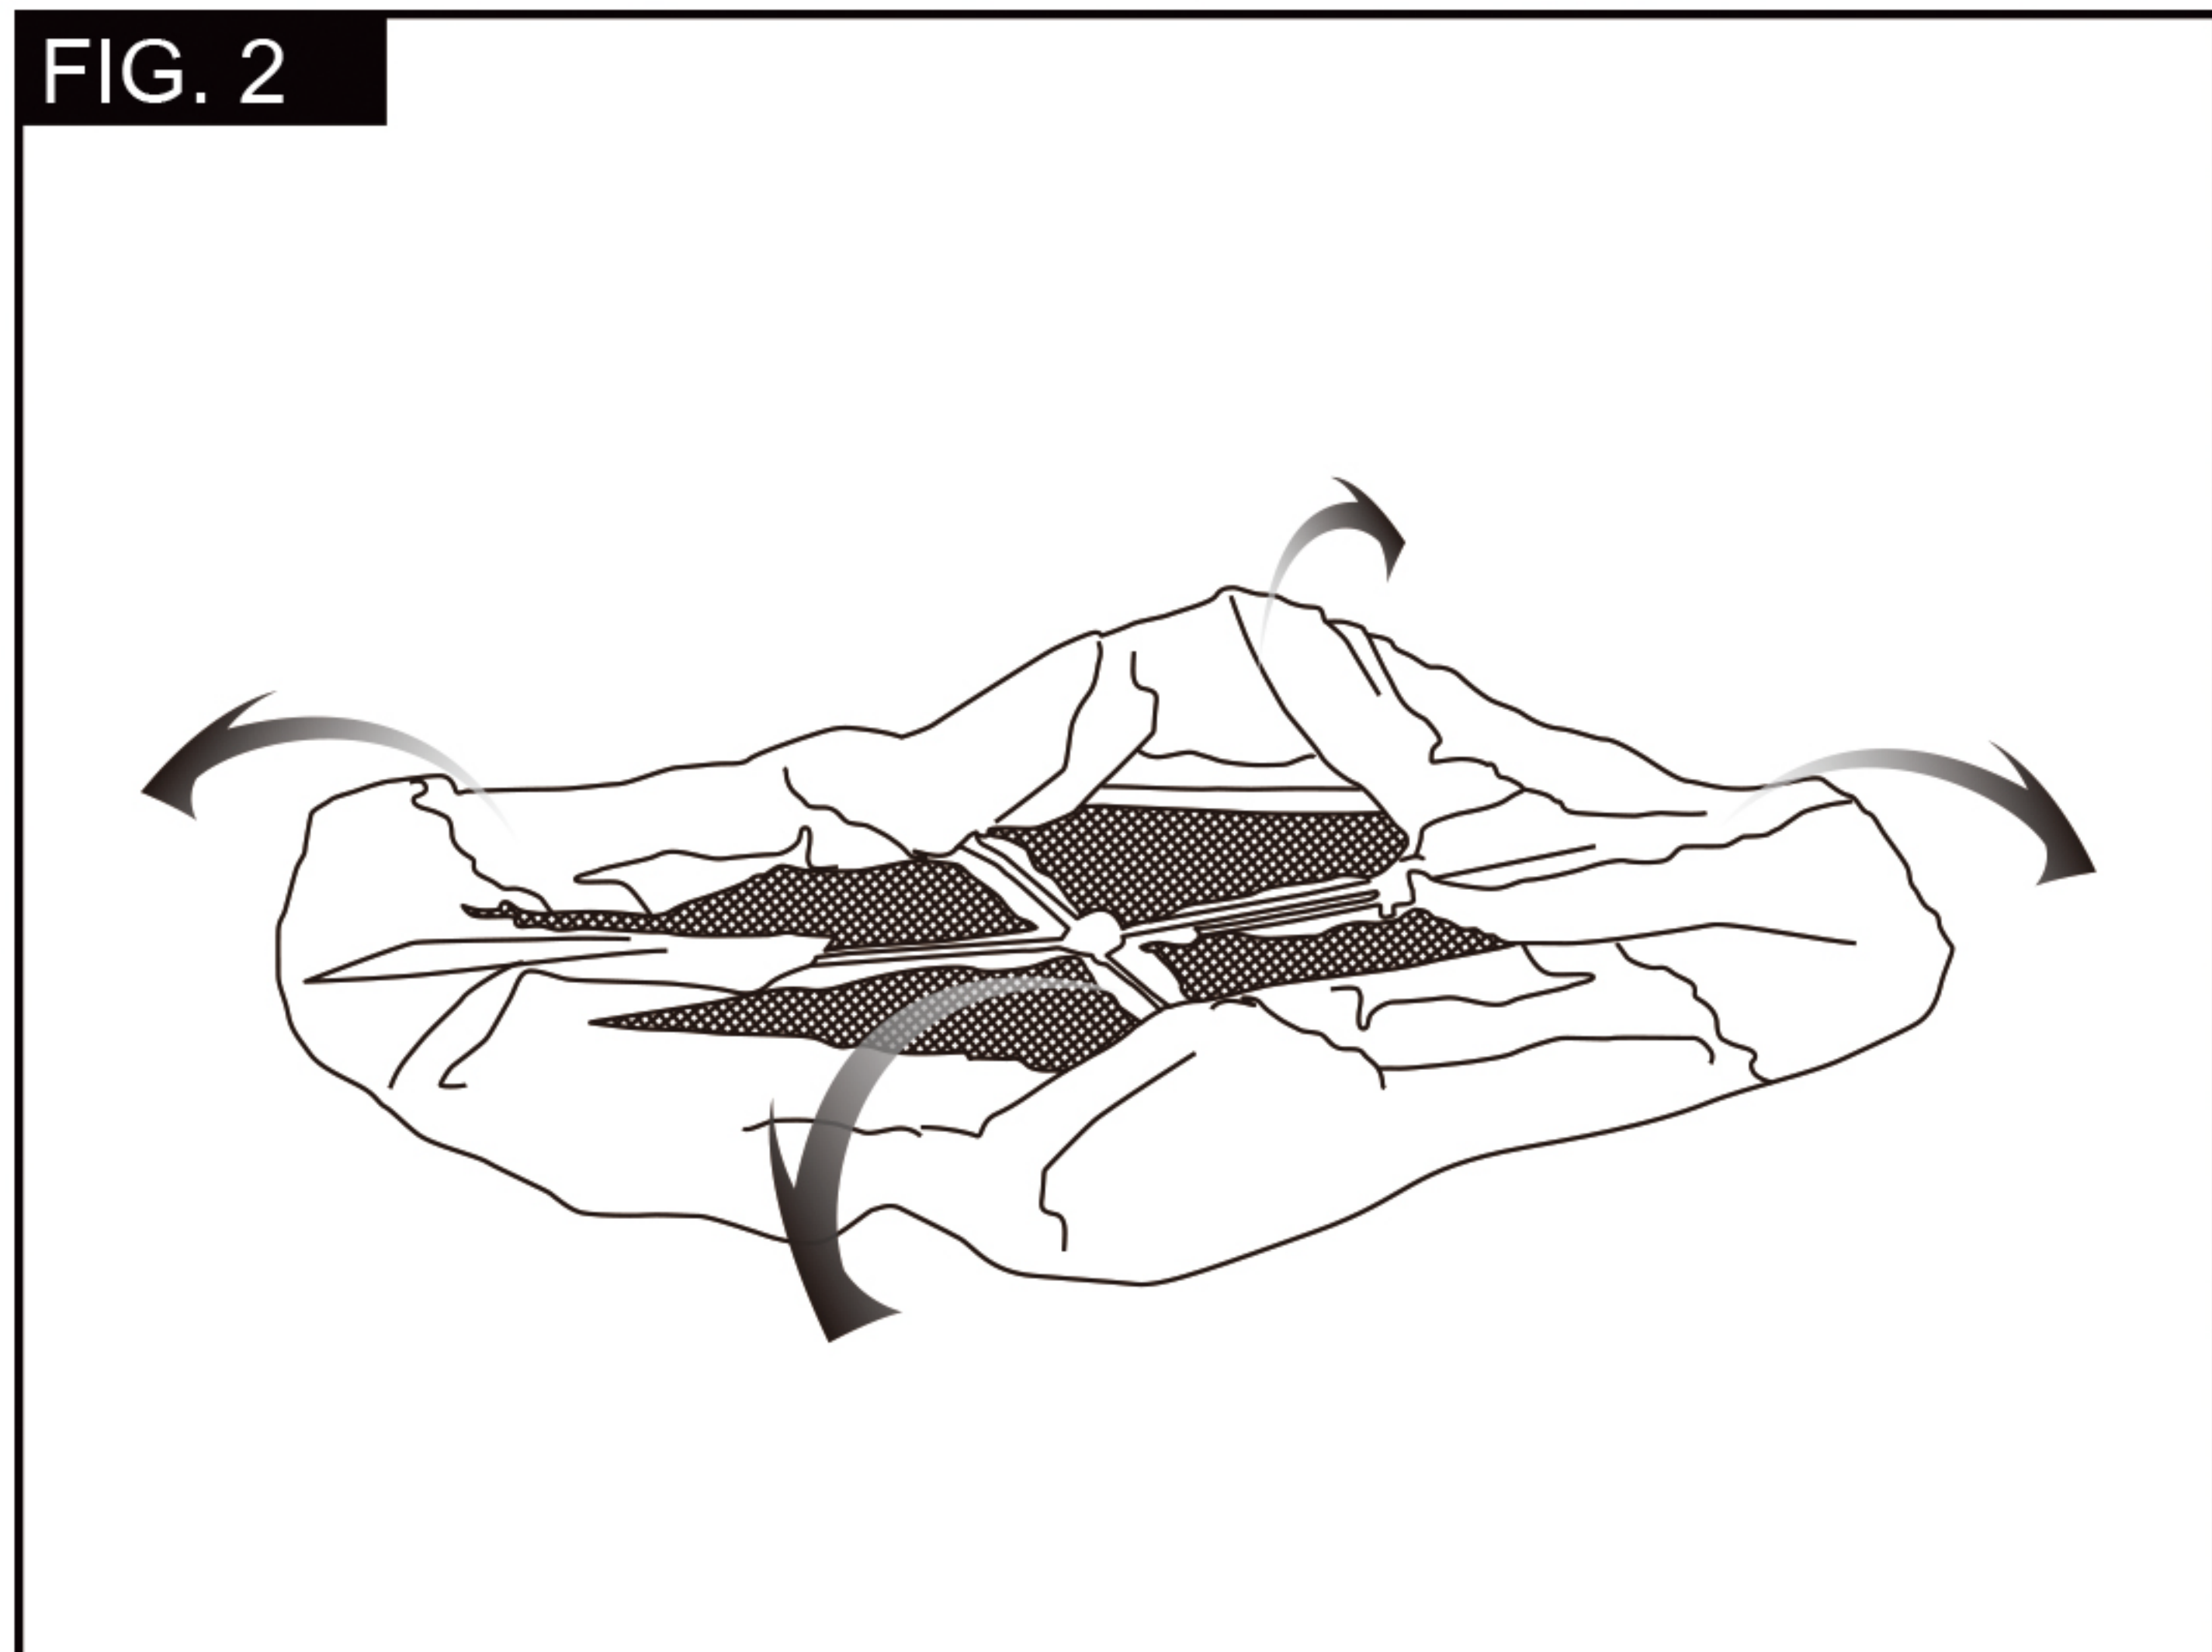

### STEP 3:

Drag the legs toward the outside, flatten all of the corners on the ground. **See Fig. 3.**


FIG. 3

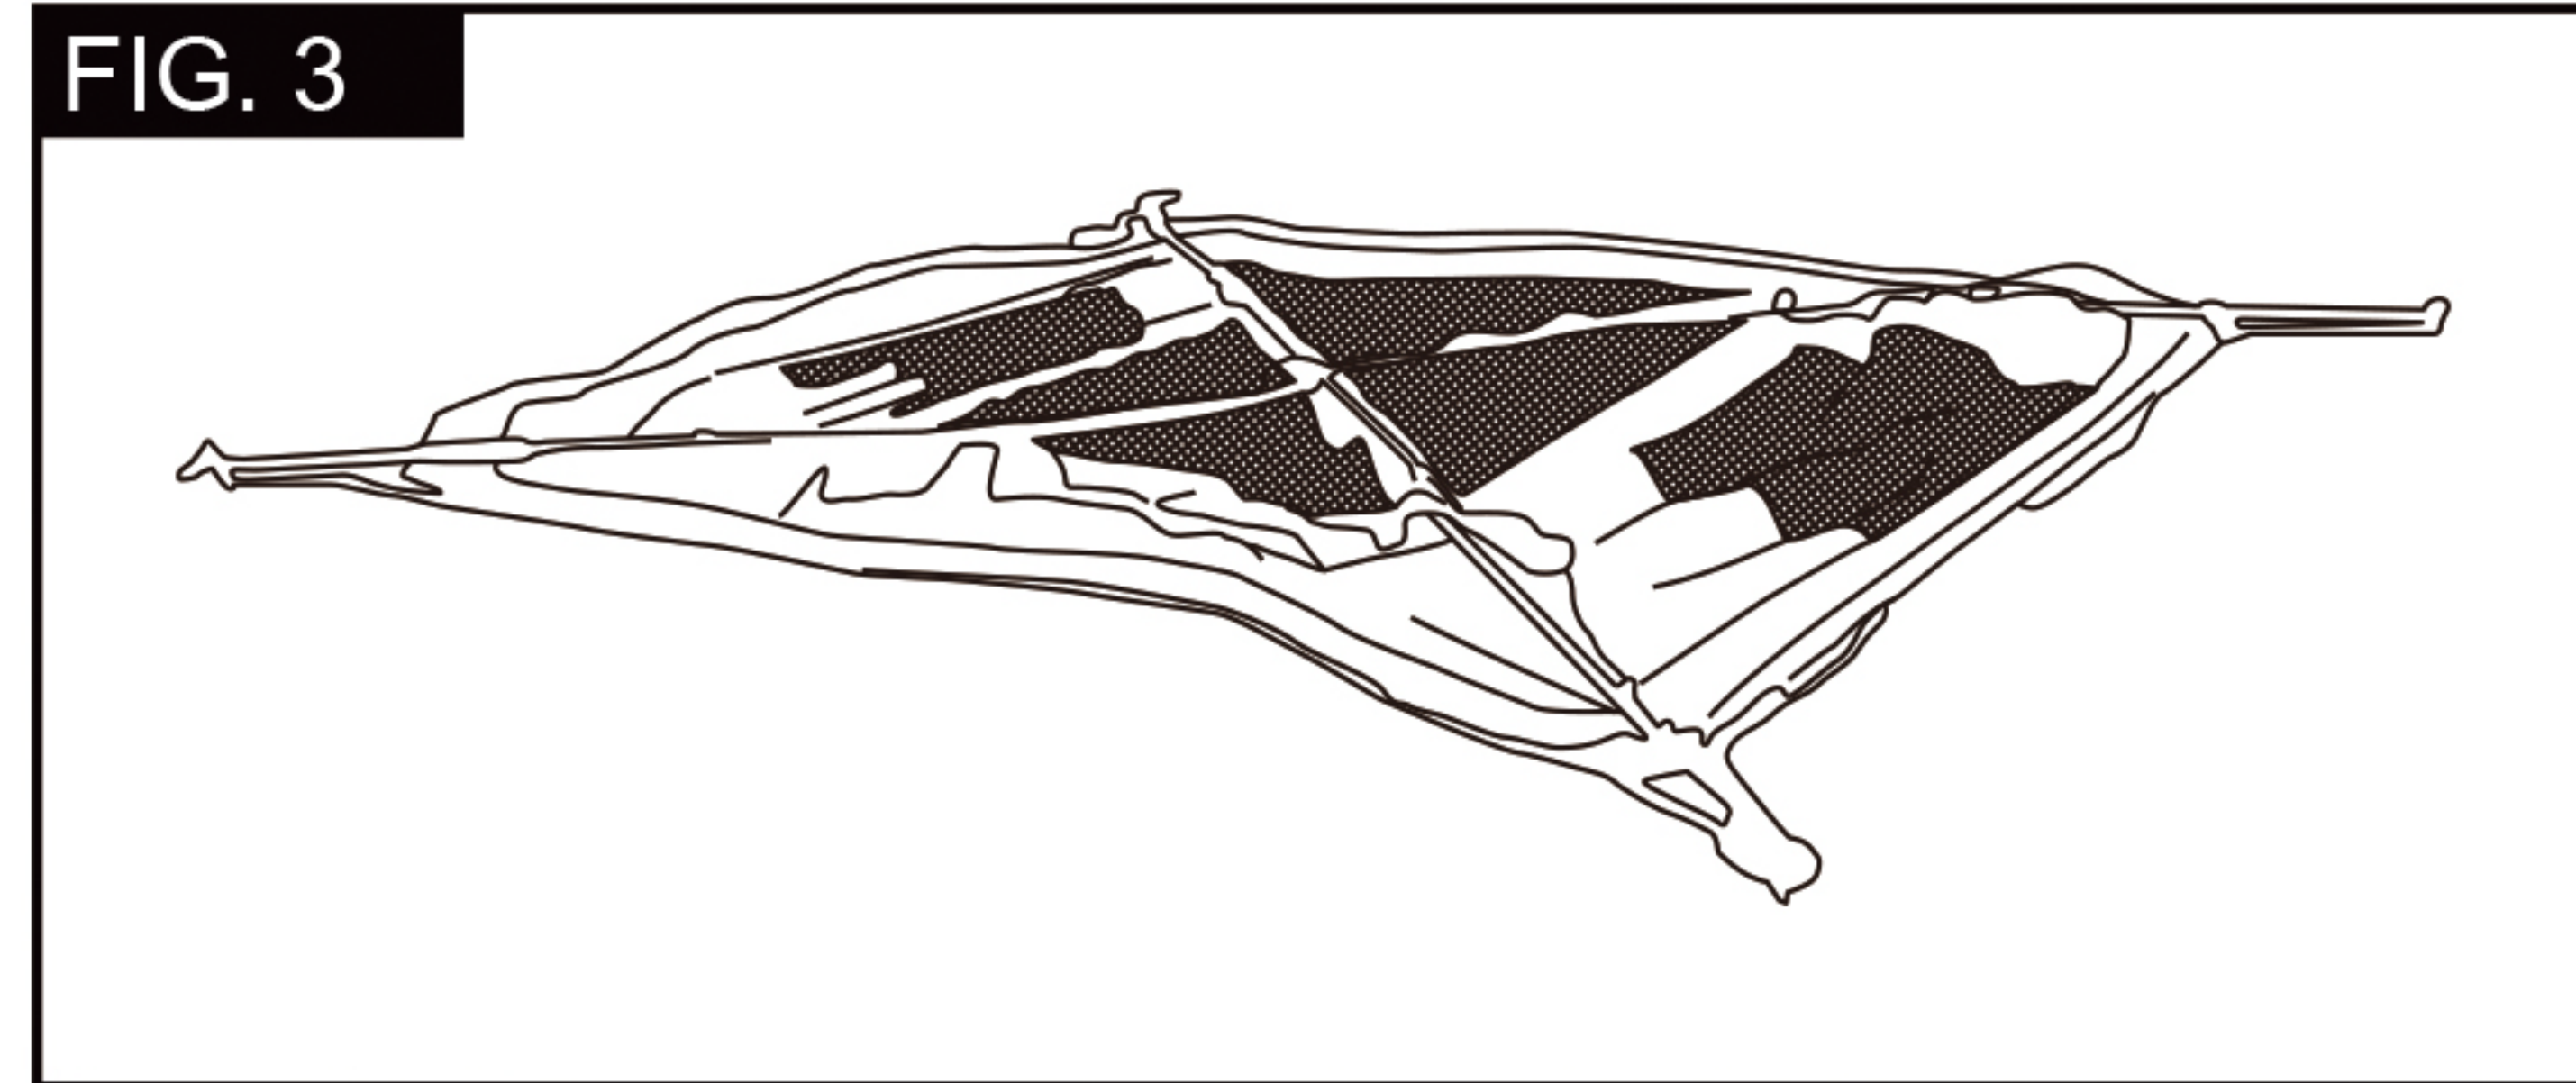

### STEP 4:

Raise the tent, extend each of the telescoping leg poles on the walls until they snap into place. **See Fig. 4.**


FIG. 4

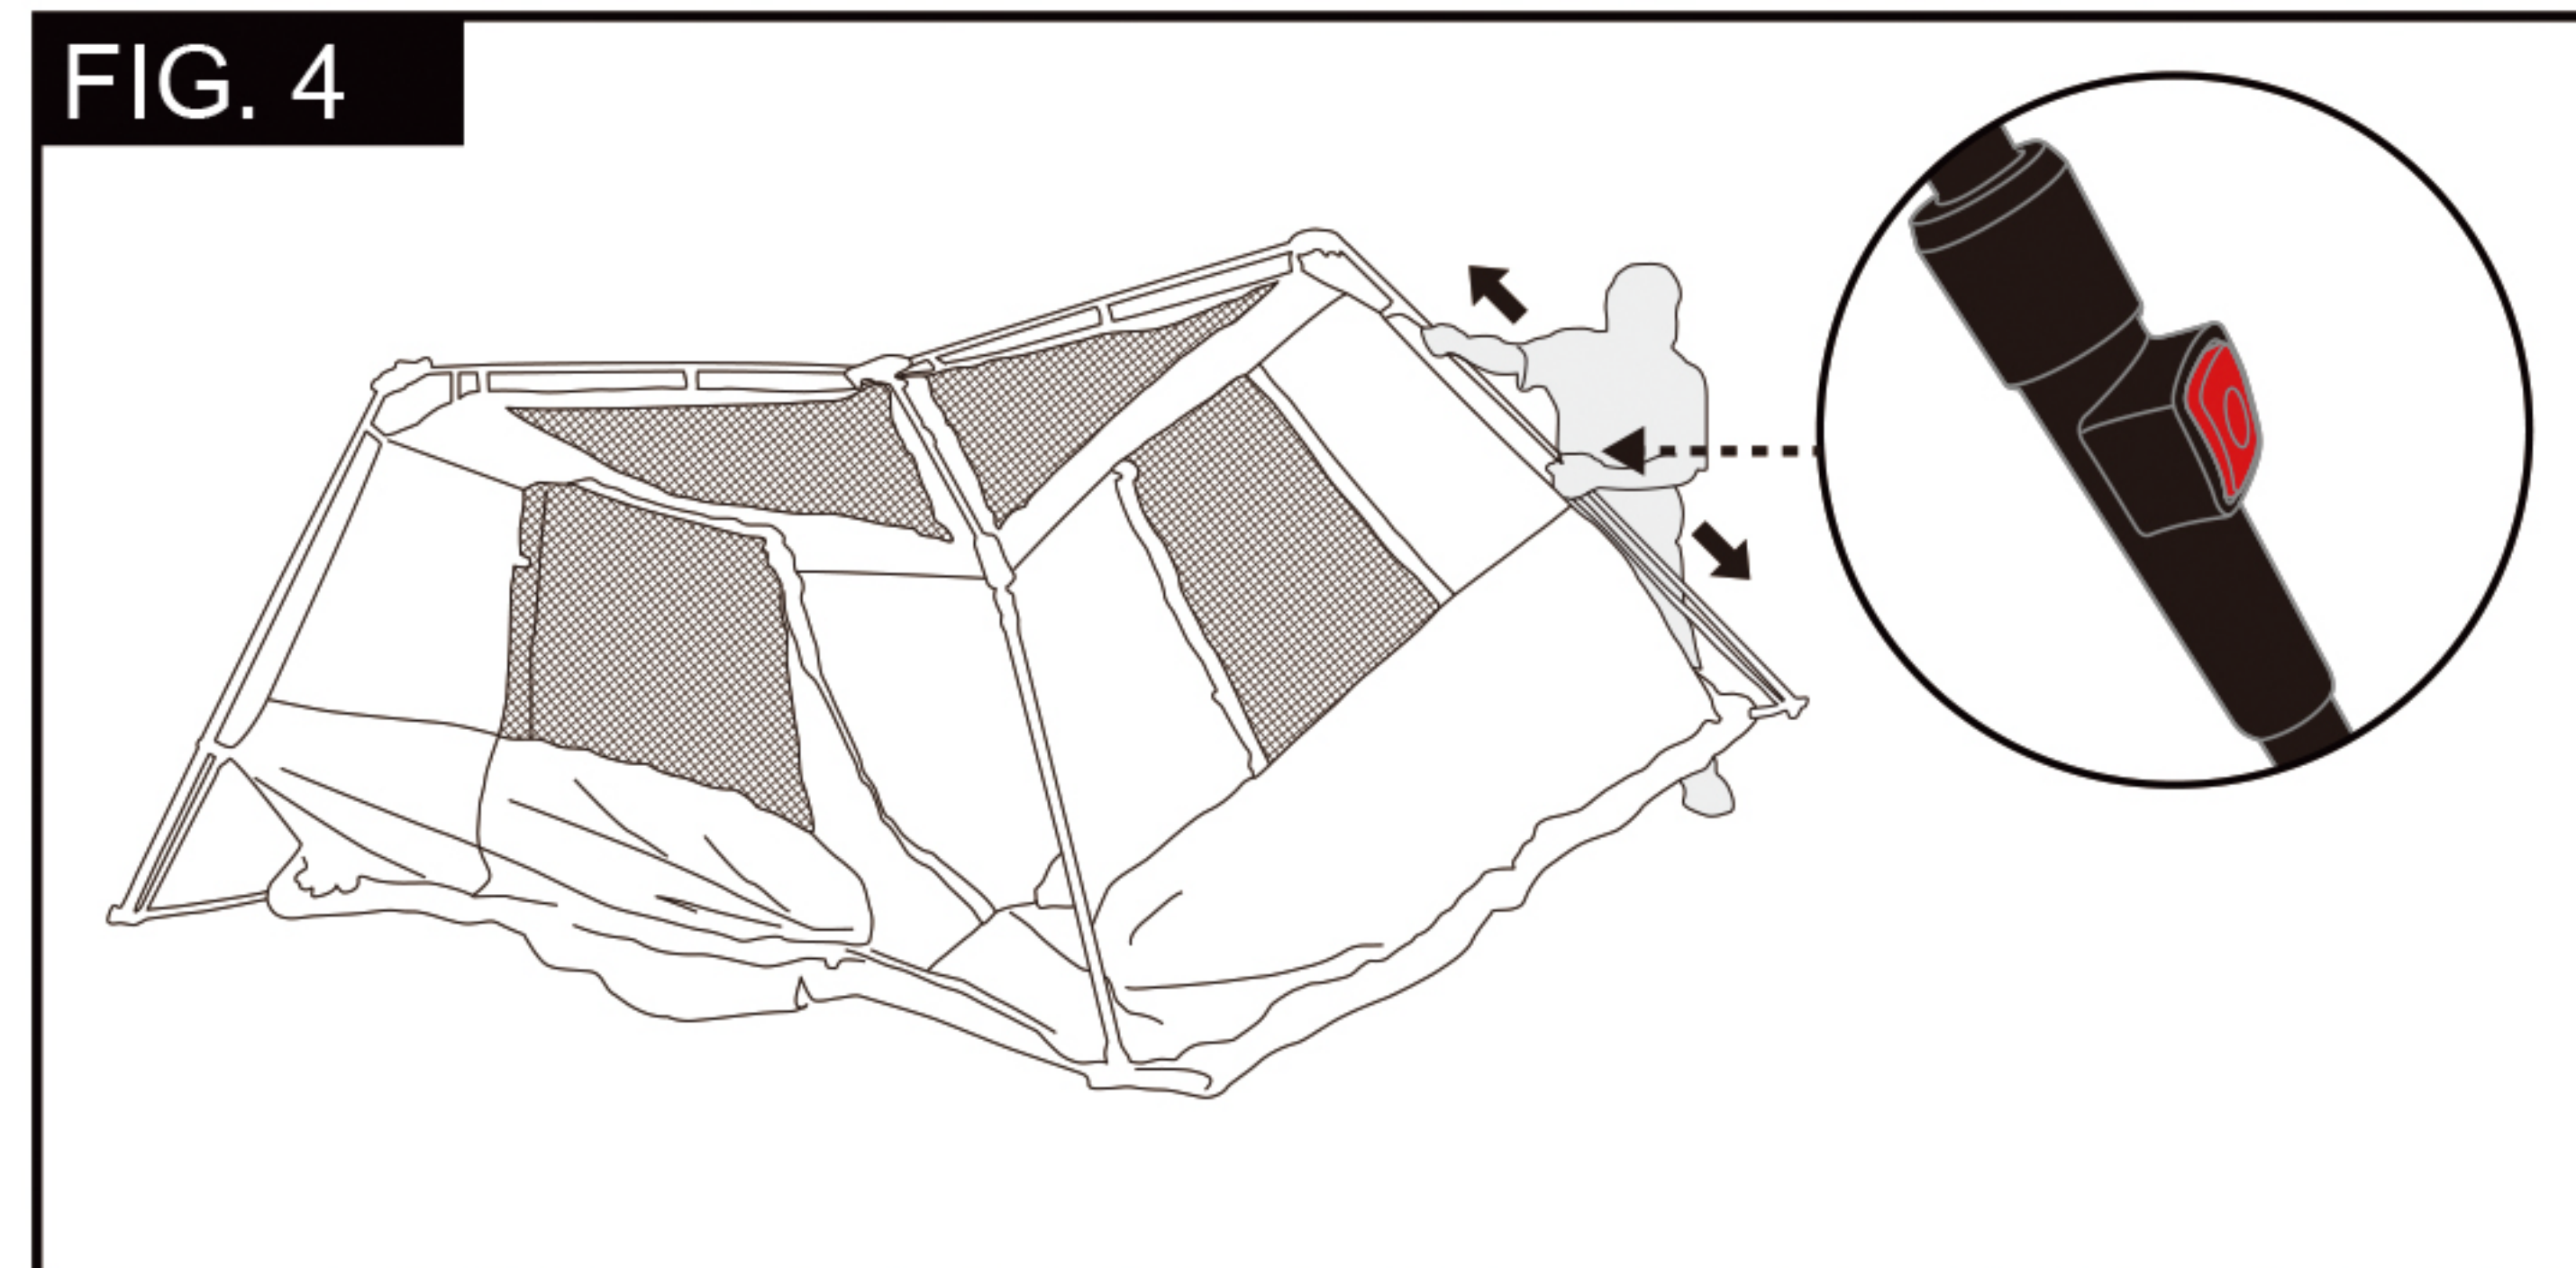

### STEP 5:

Stake the tent down by inserting the Steel Stakes through the webbing loops on the base of the tent. **See Fig. 5.**


FIG. 5

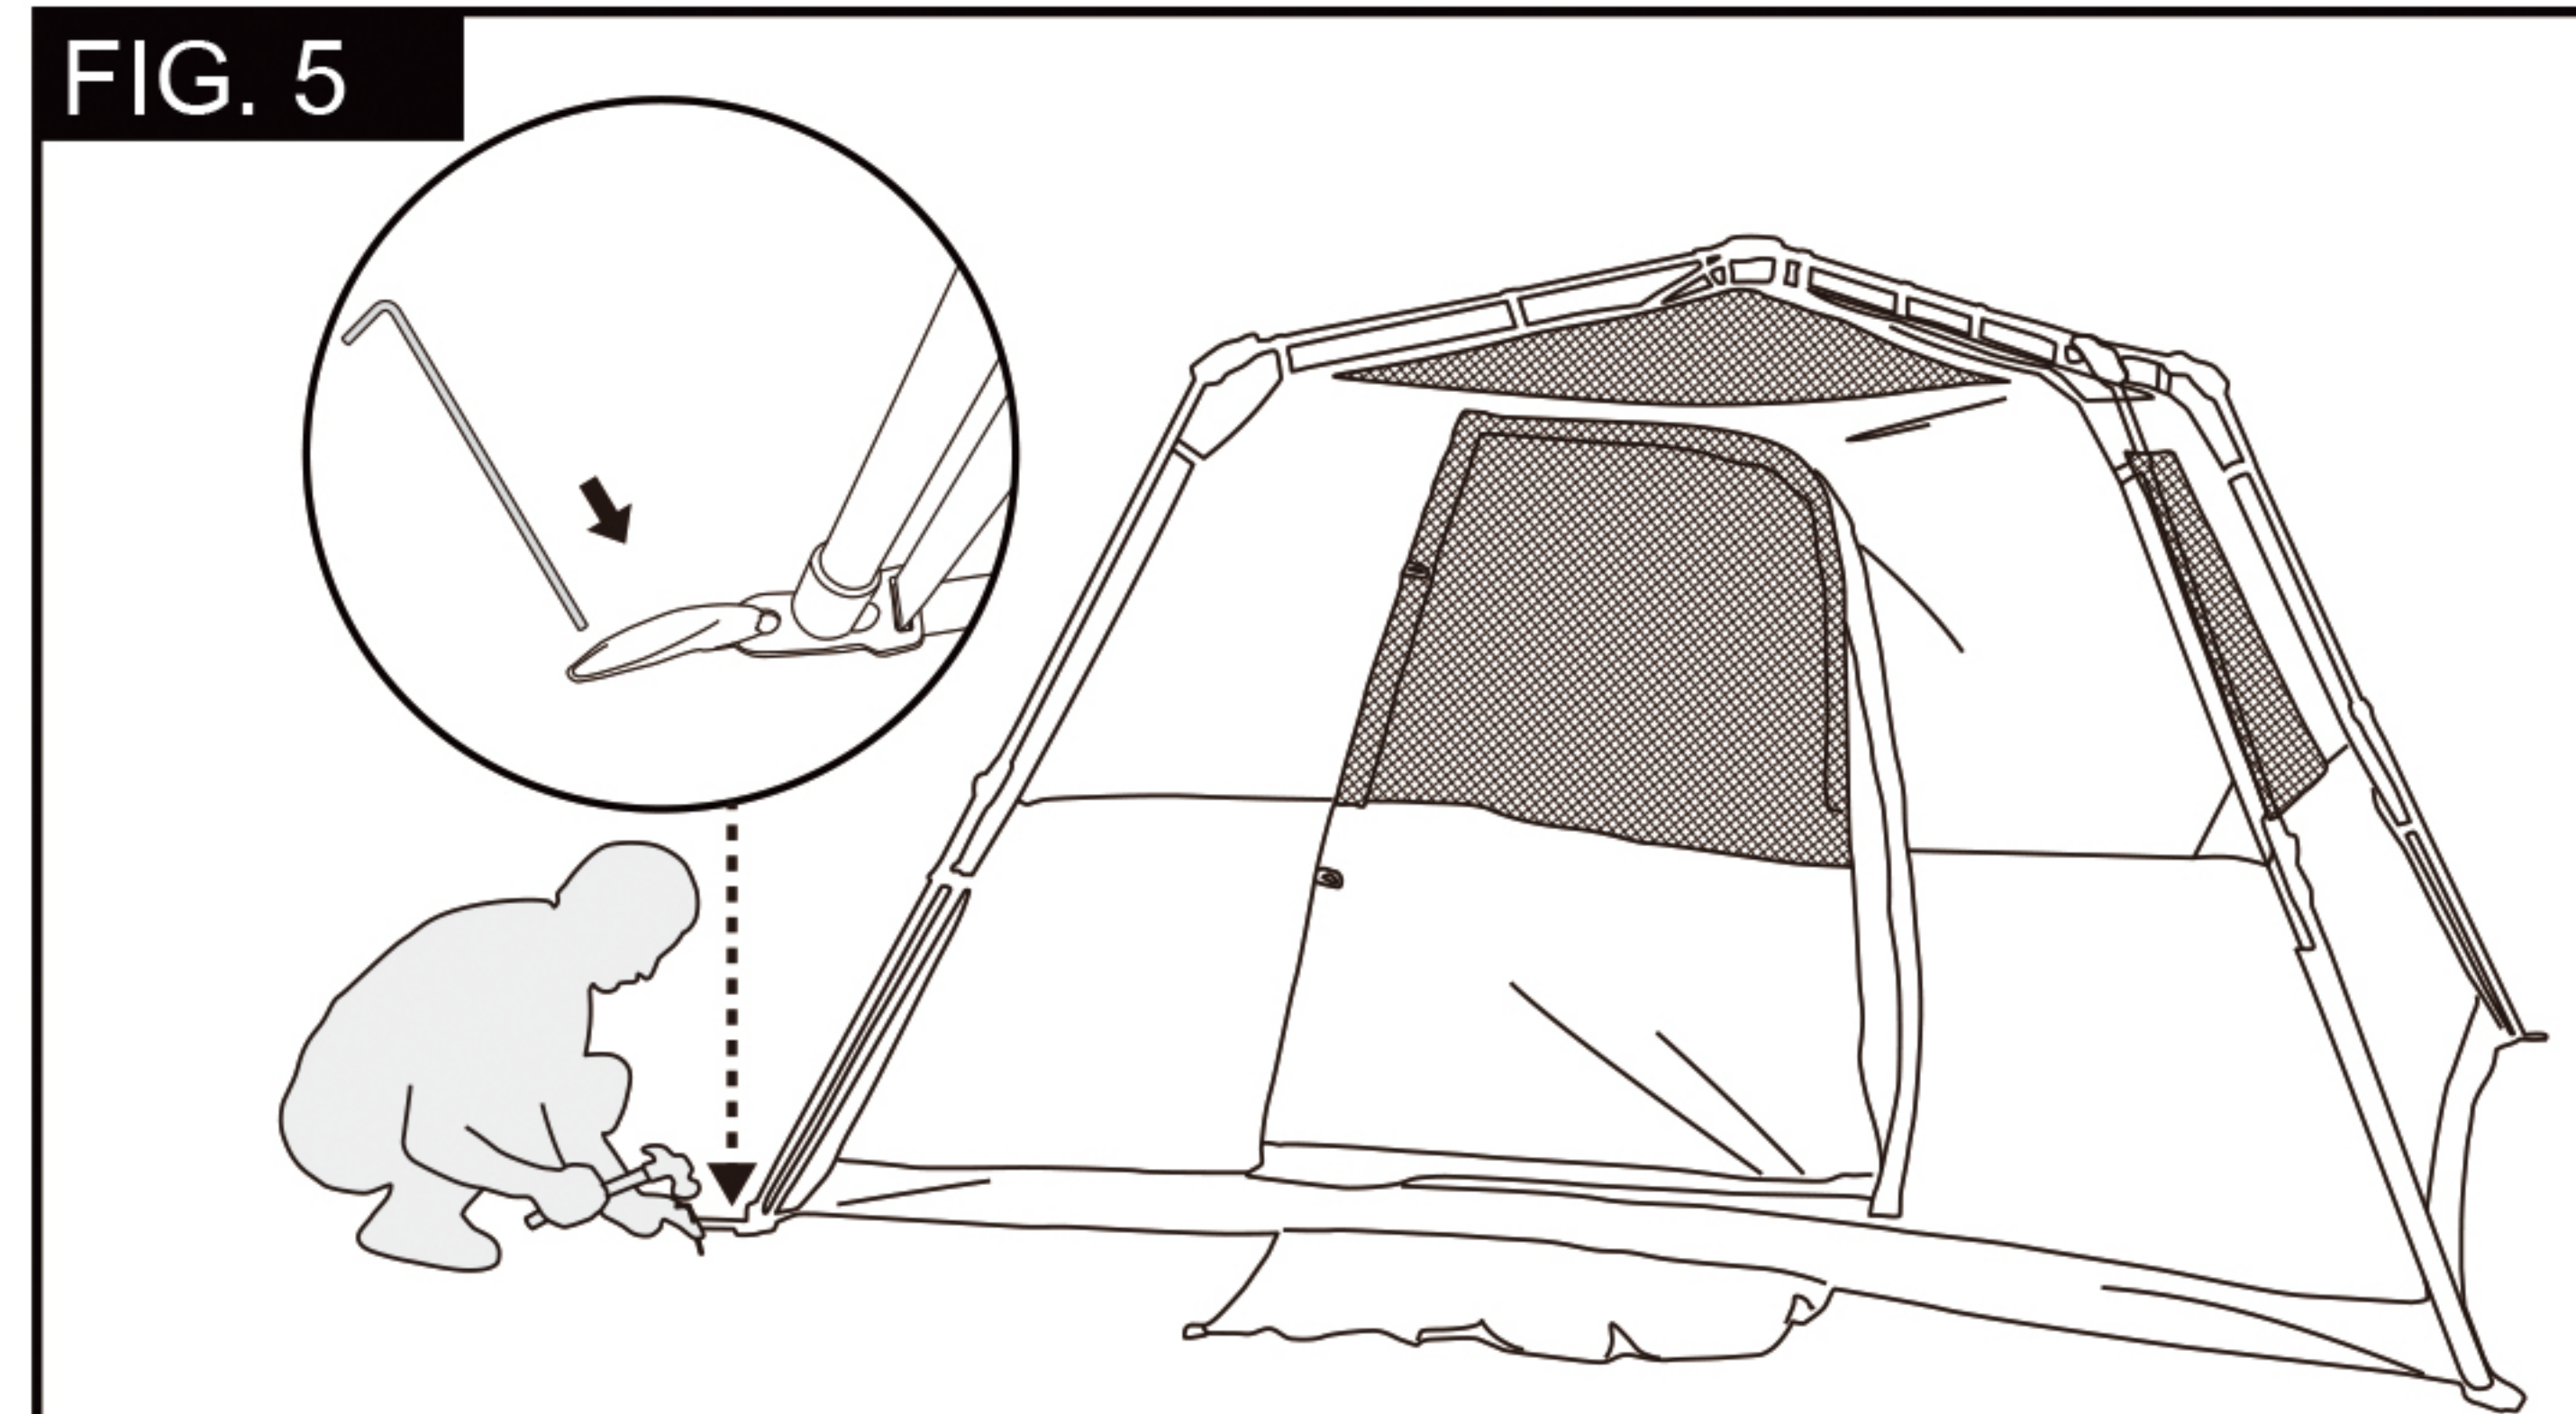

# ASSEMBLY INSTRUCTIONS


## STEP 6:

Unzip the door, walk into the tent, and fasten the S-hook from the Gear Loft to corresponding fabric loops on the tent ceiling. **See Fig. 6.**

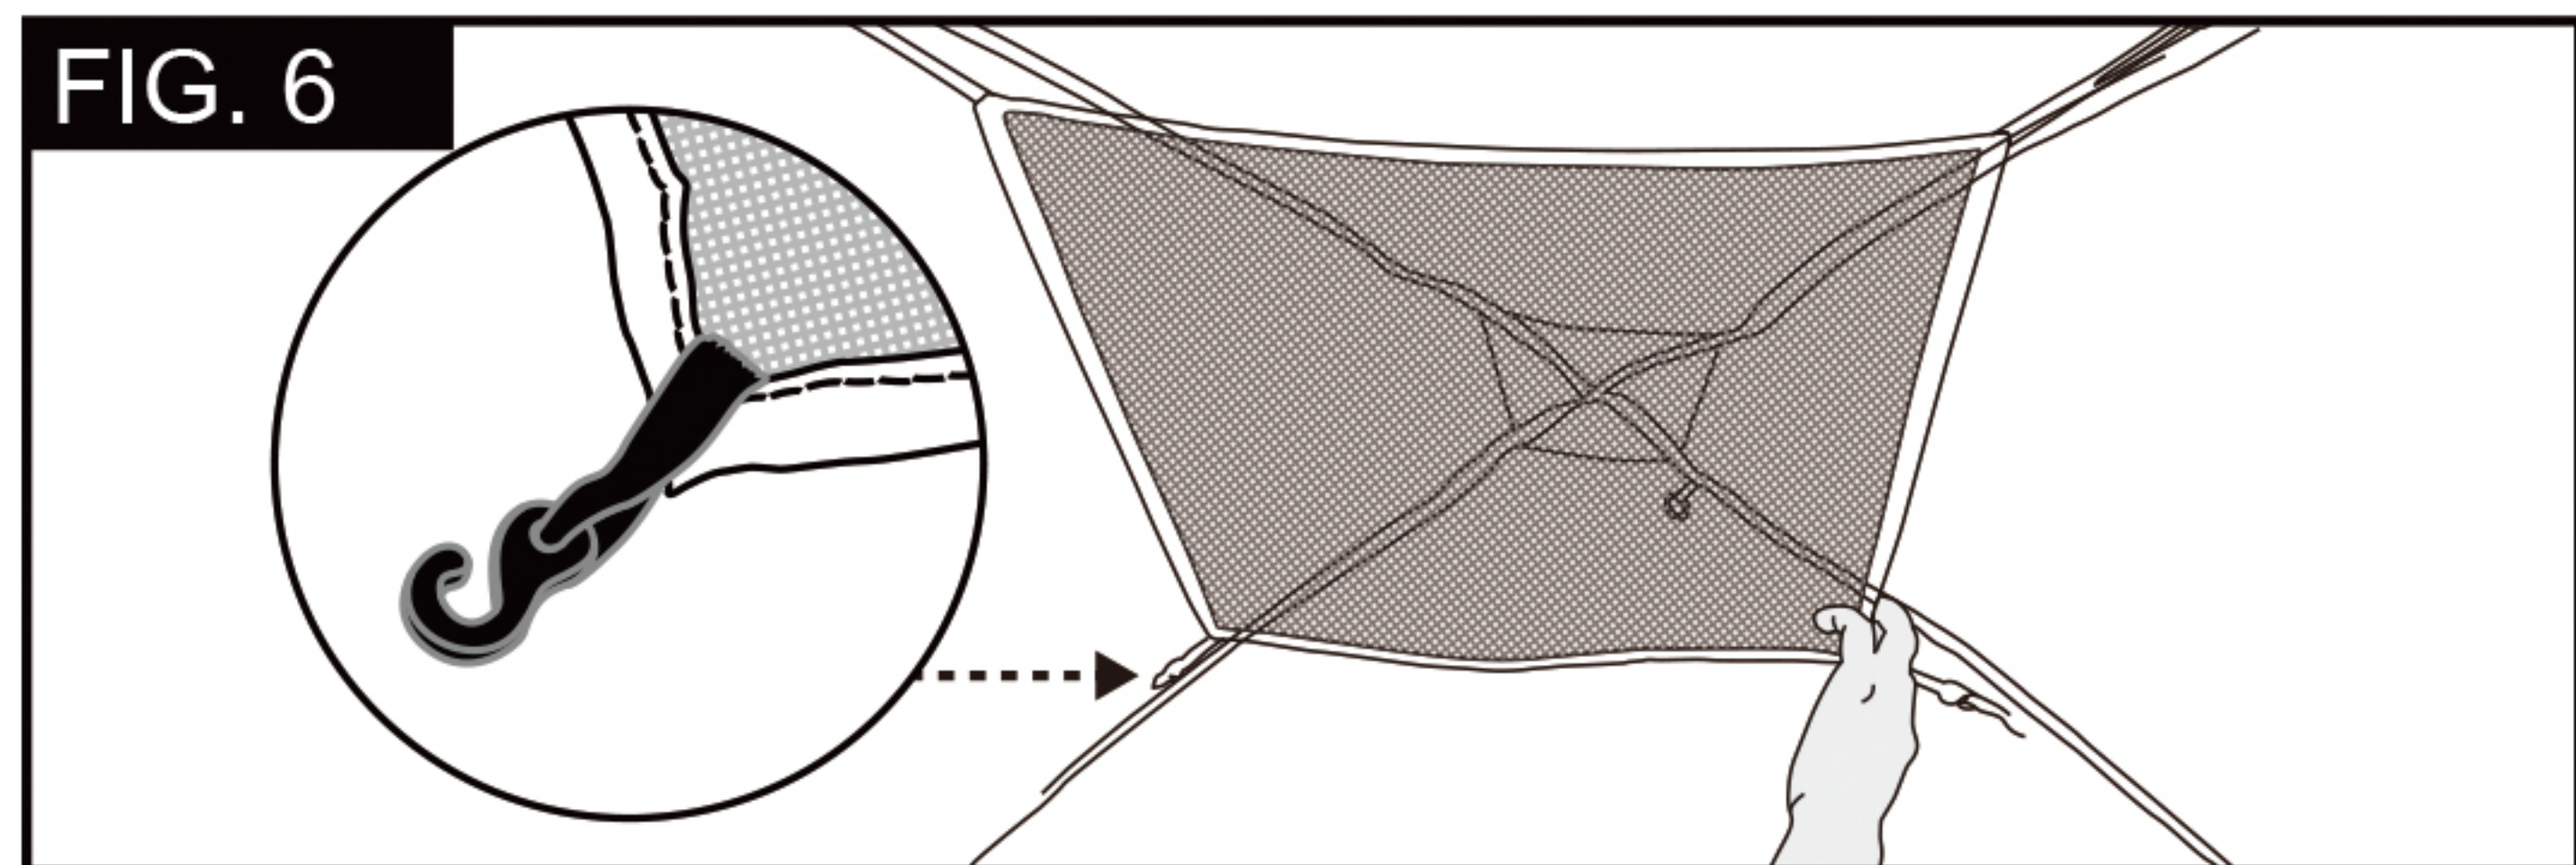


## STEP 7:

Walk out of the tent, drape the separate tent rainfly over the tent. Rainfly should be centered over the tent. Secure the Velcro tabs on the fly to the poles of the instant frame. **See Fig. 7.**

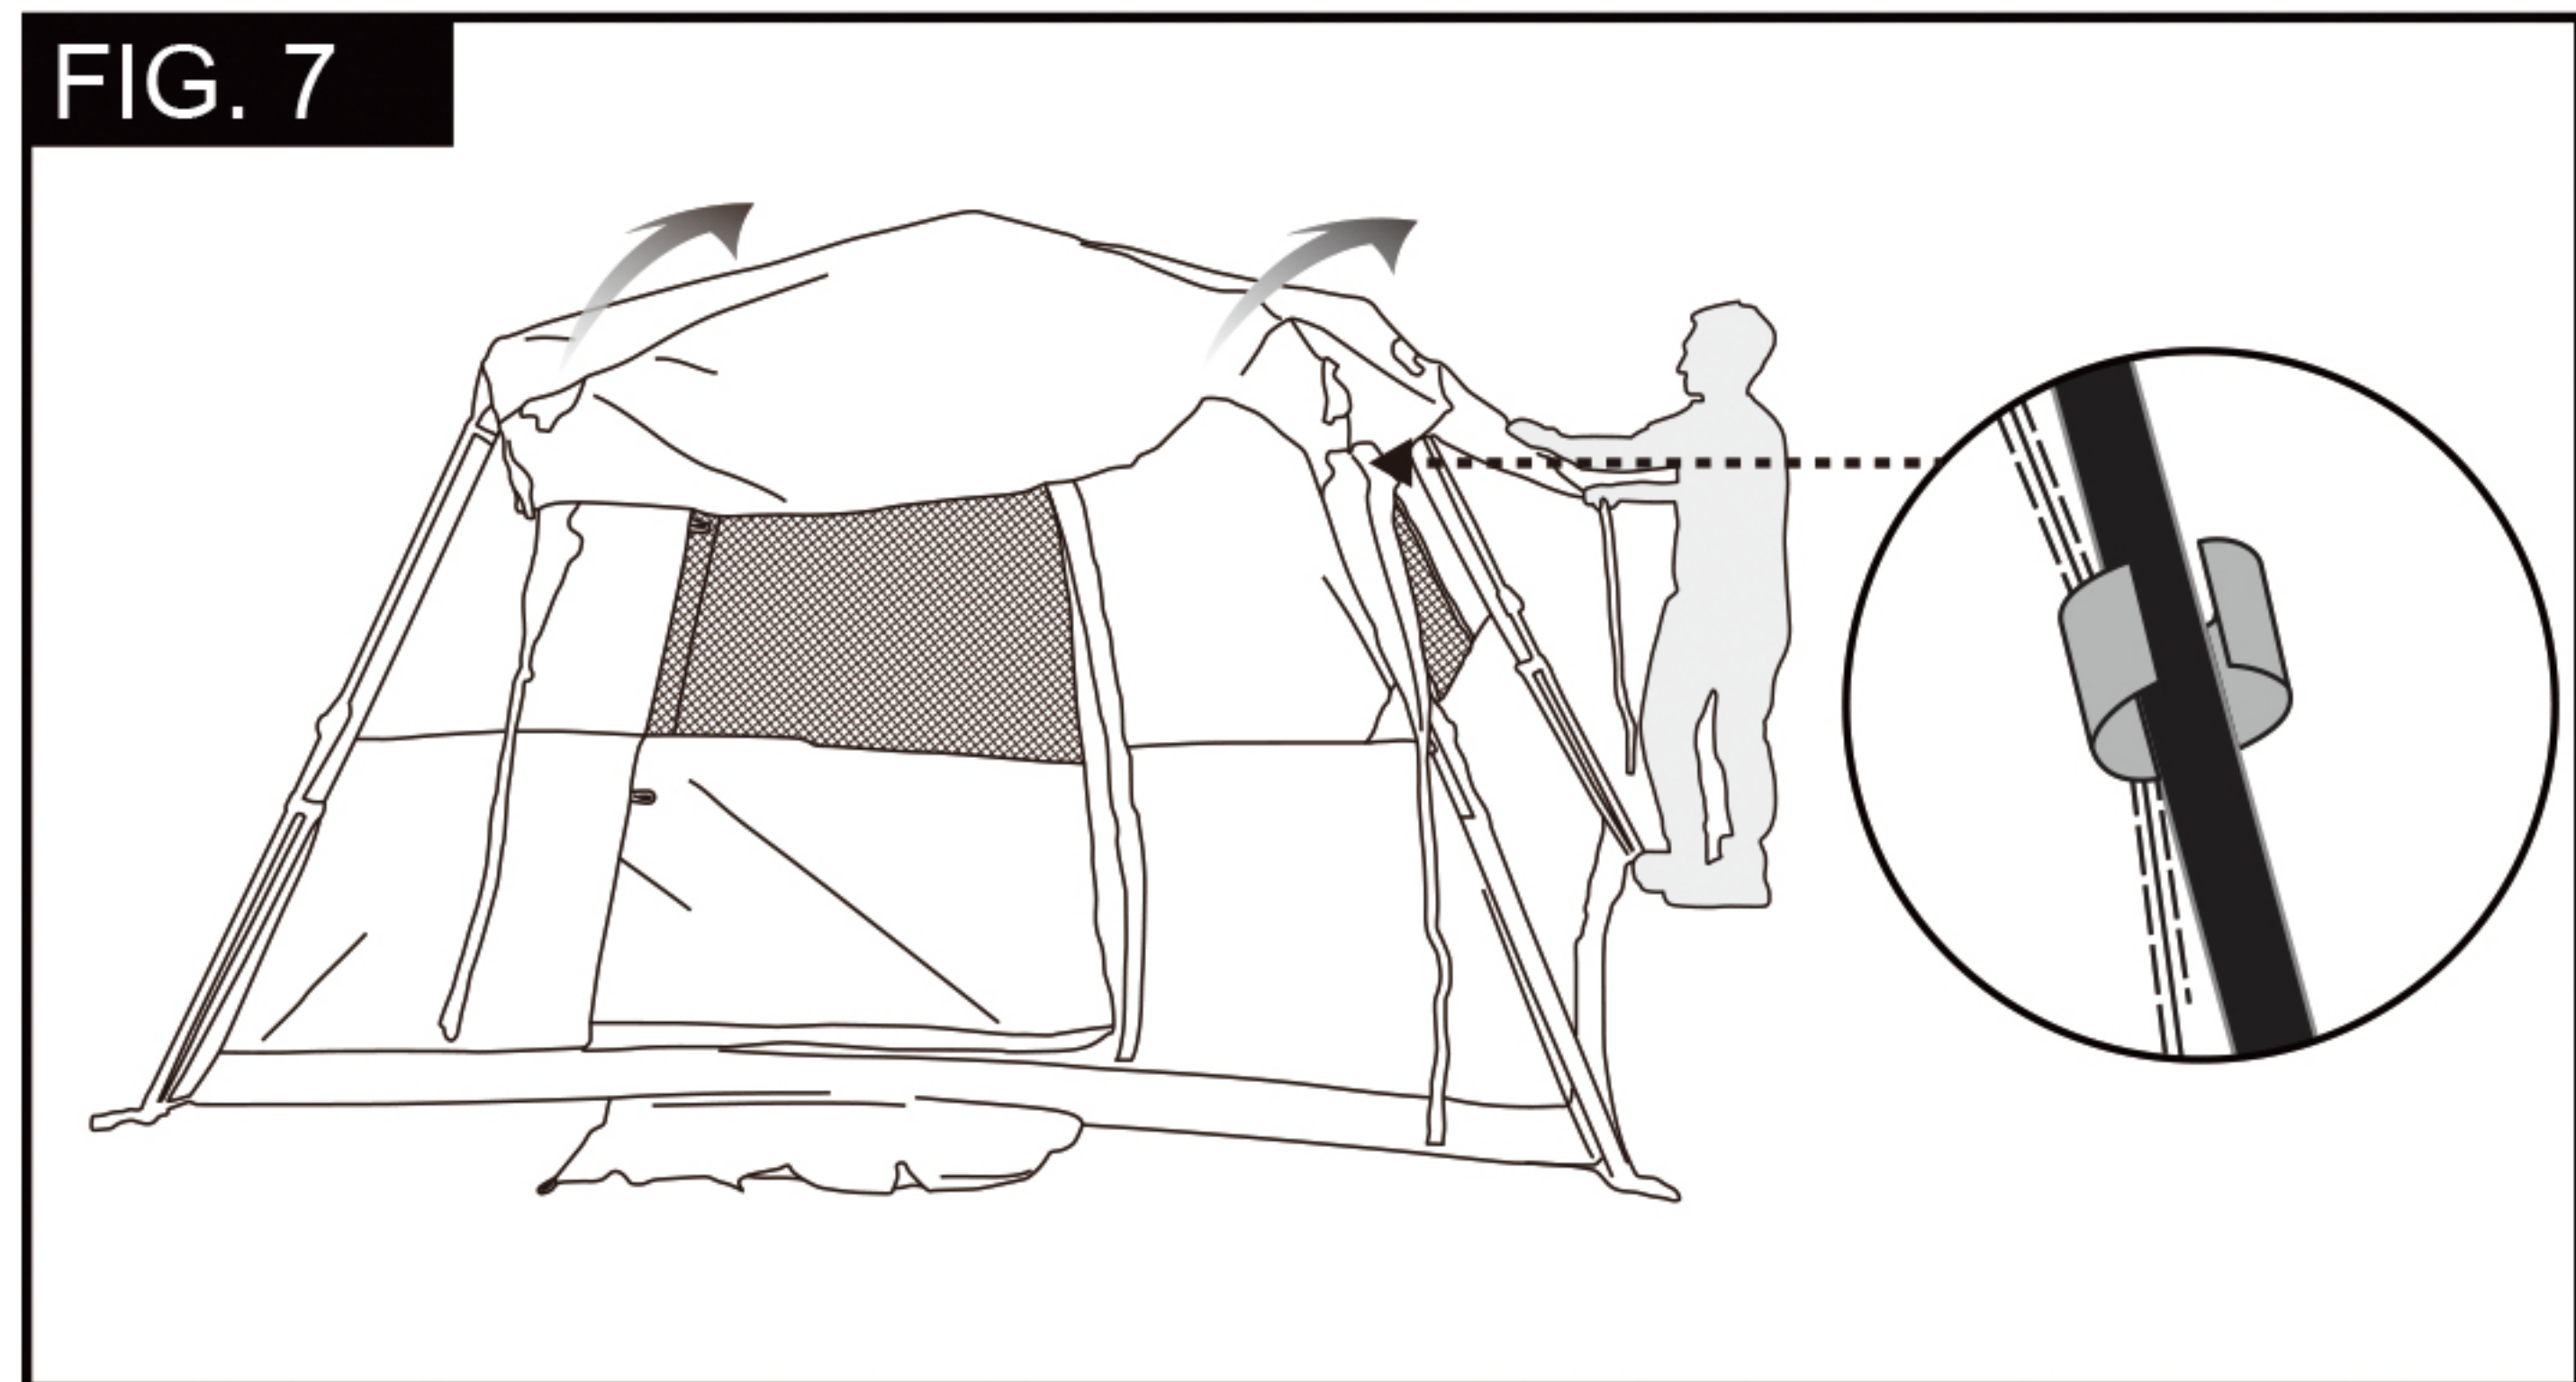


## STEP 8:

Attach the rainfly to the frame by pulling the S-hooks down to the D-ring at base of the tent. **See Fig. 8.**

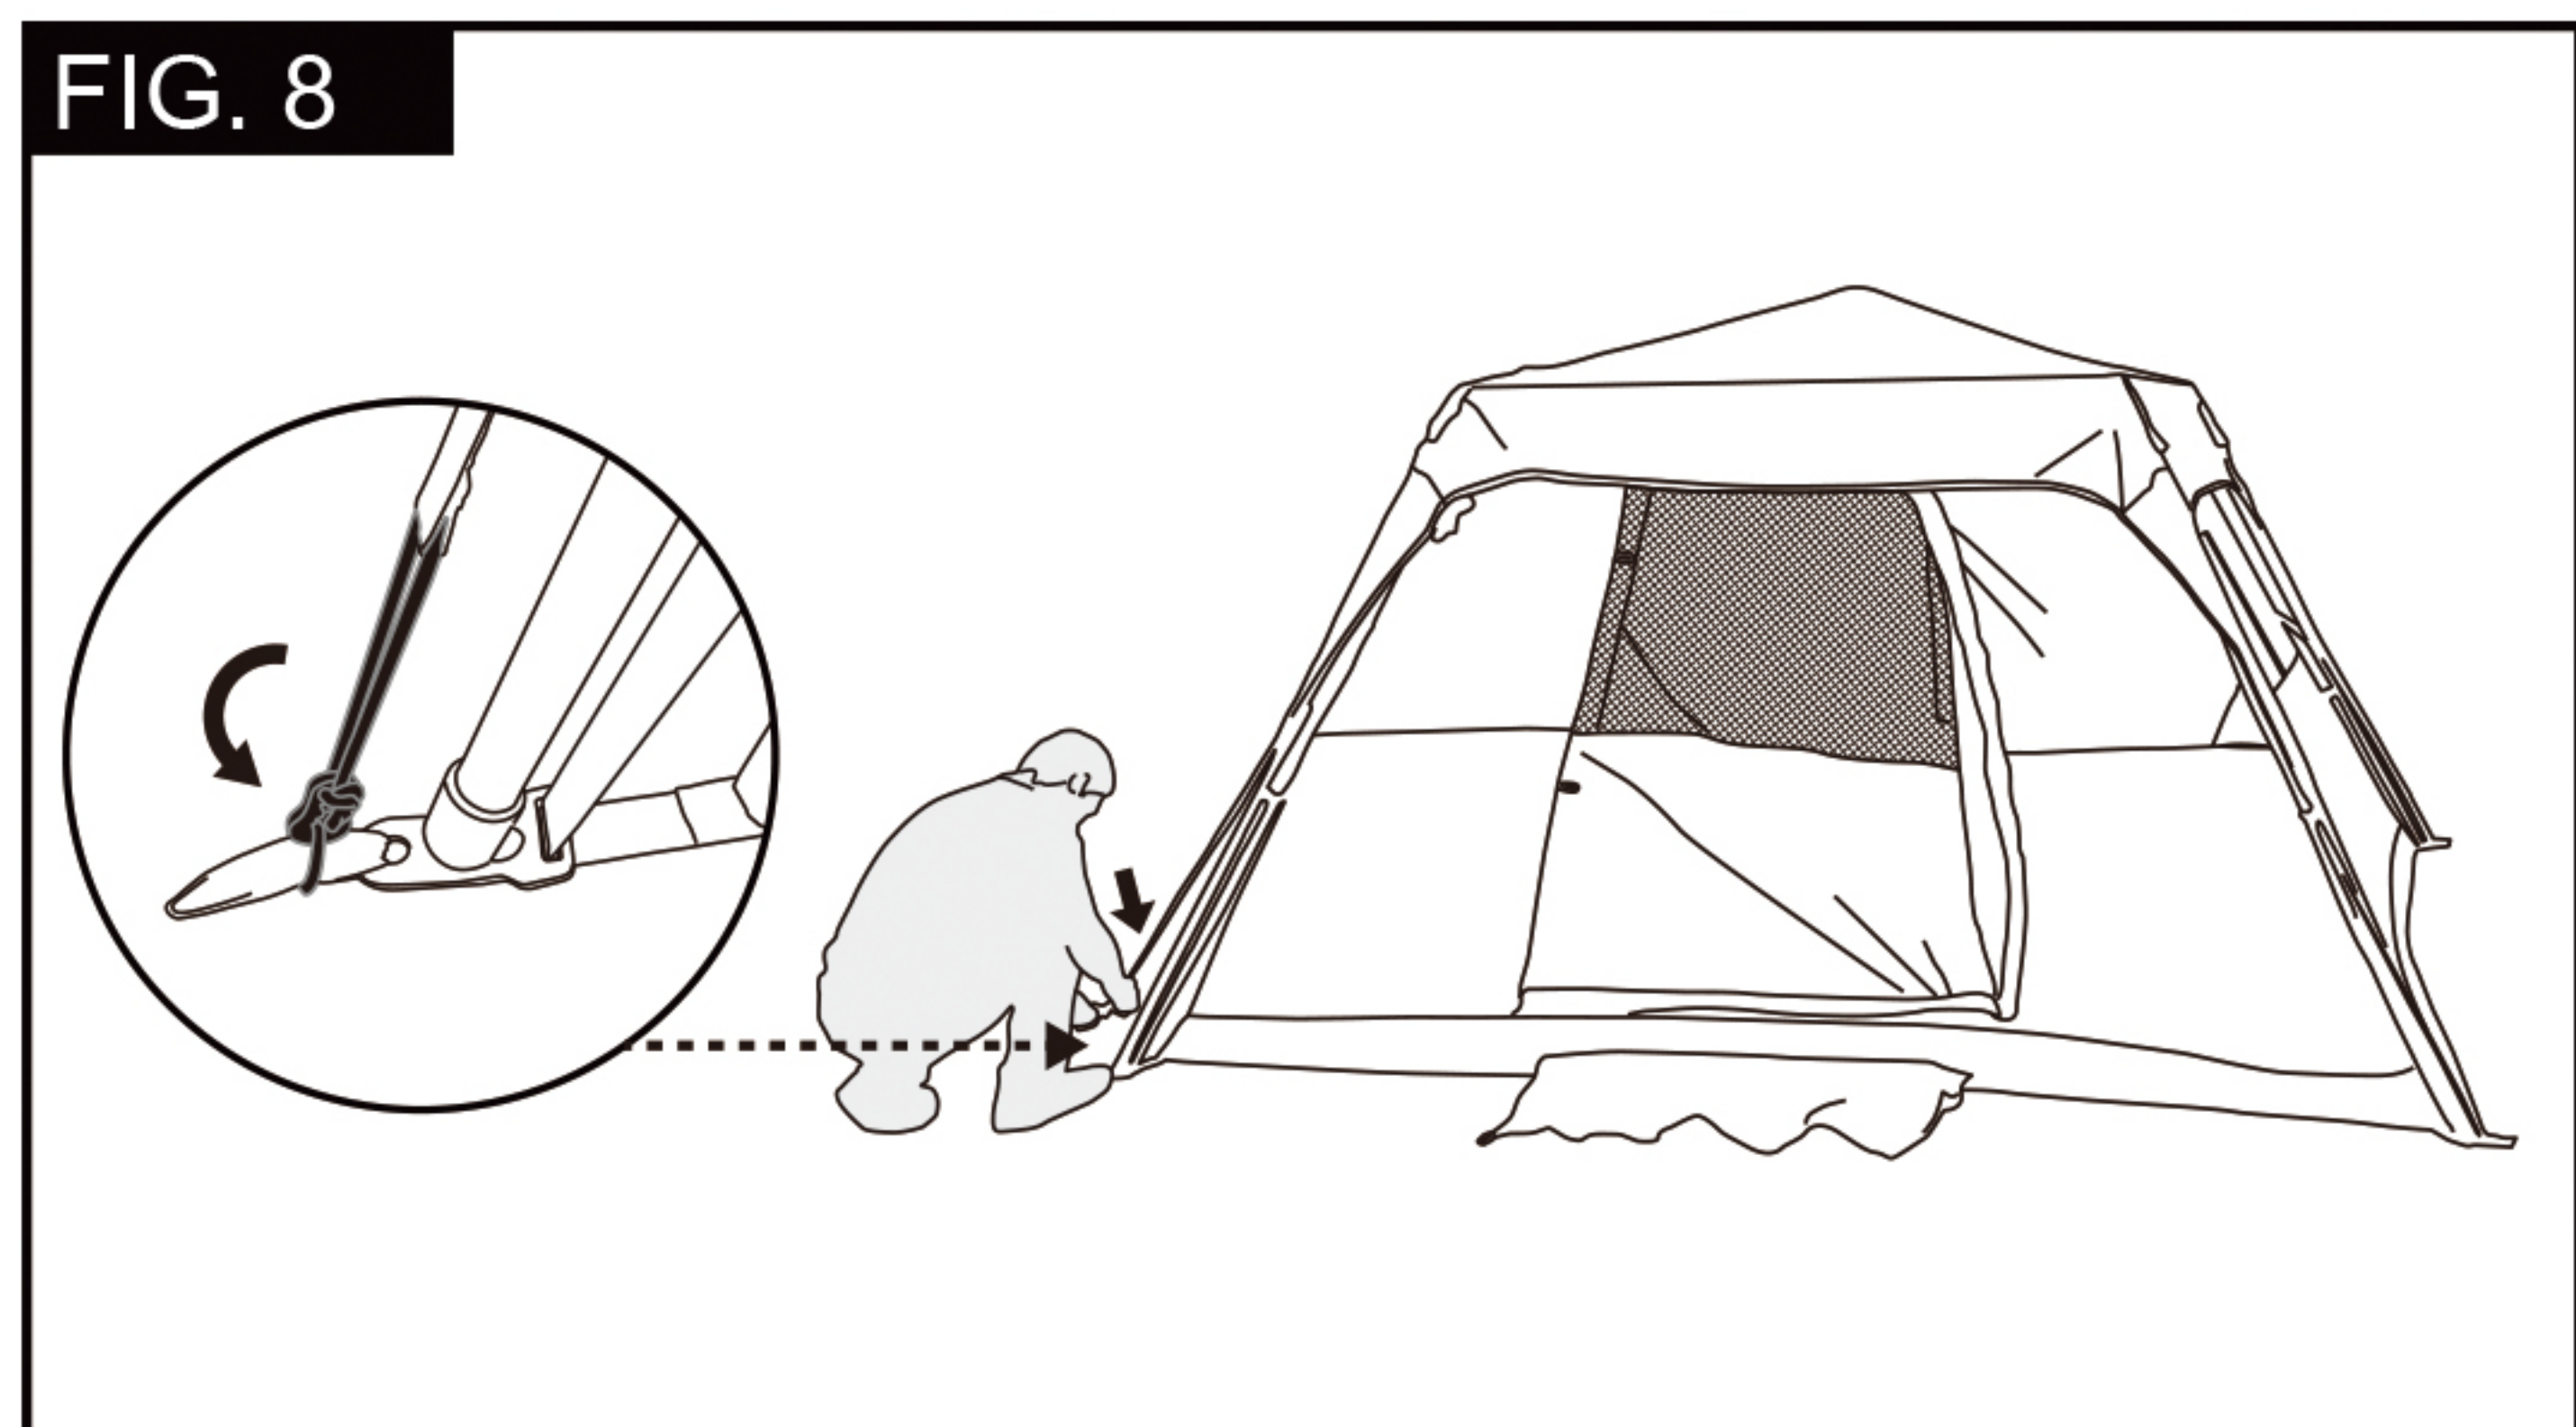


## STEP 9:

Extend the Rainfly Pole and insert it into the sleeve under the front of the rainfly edge. Then fix both ends of the pole into the grommets on the webbing of the G-hook. **See Fig. 9.**

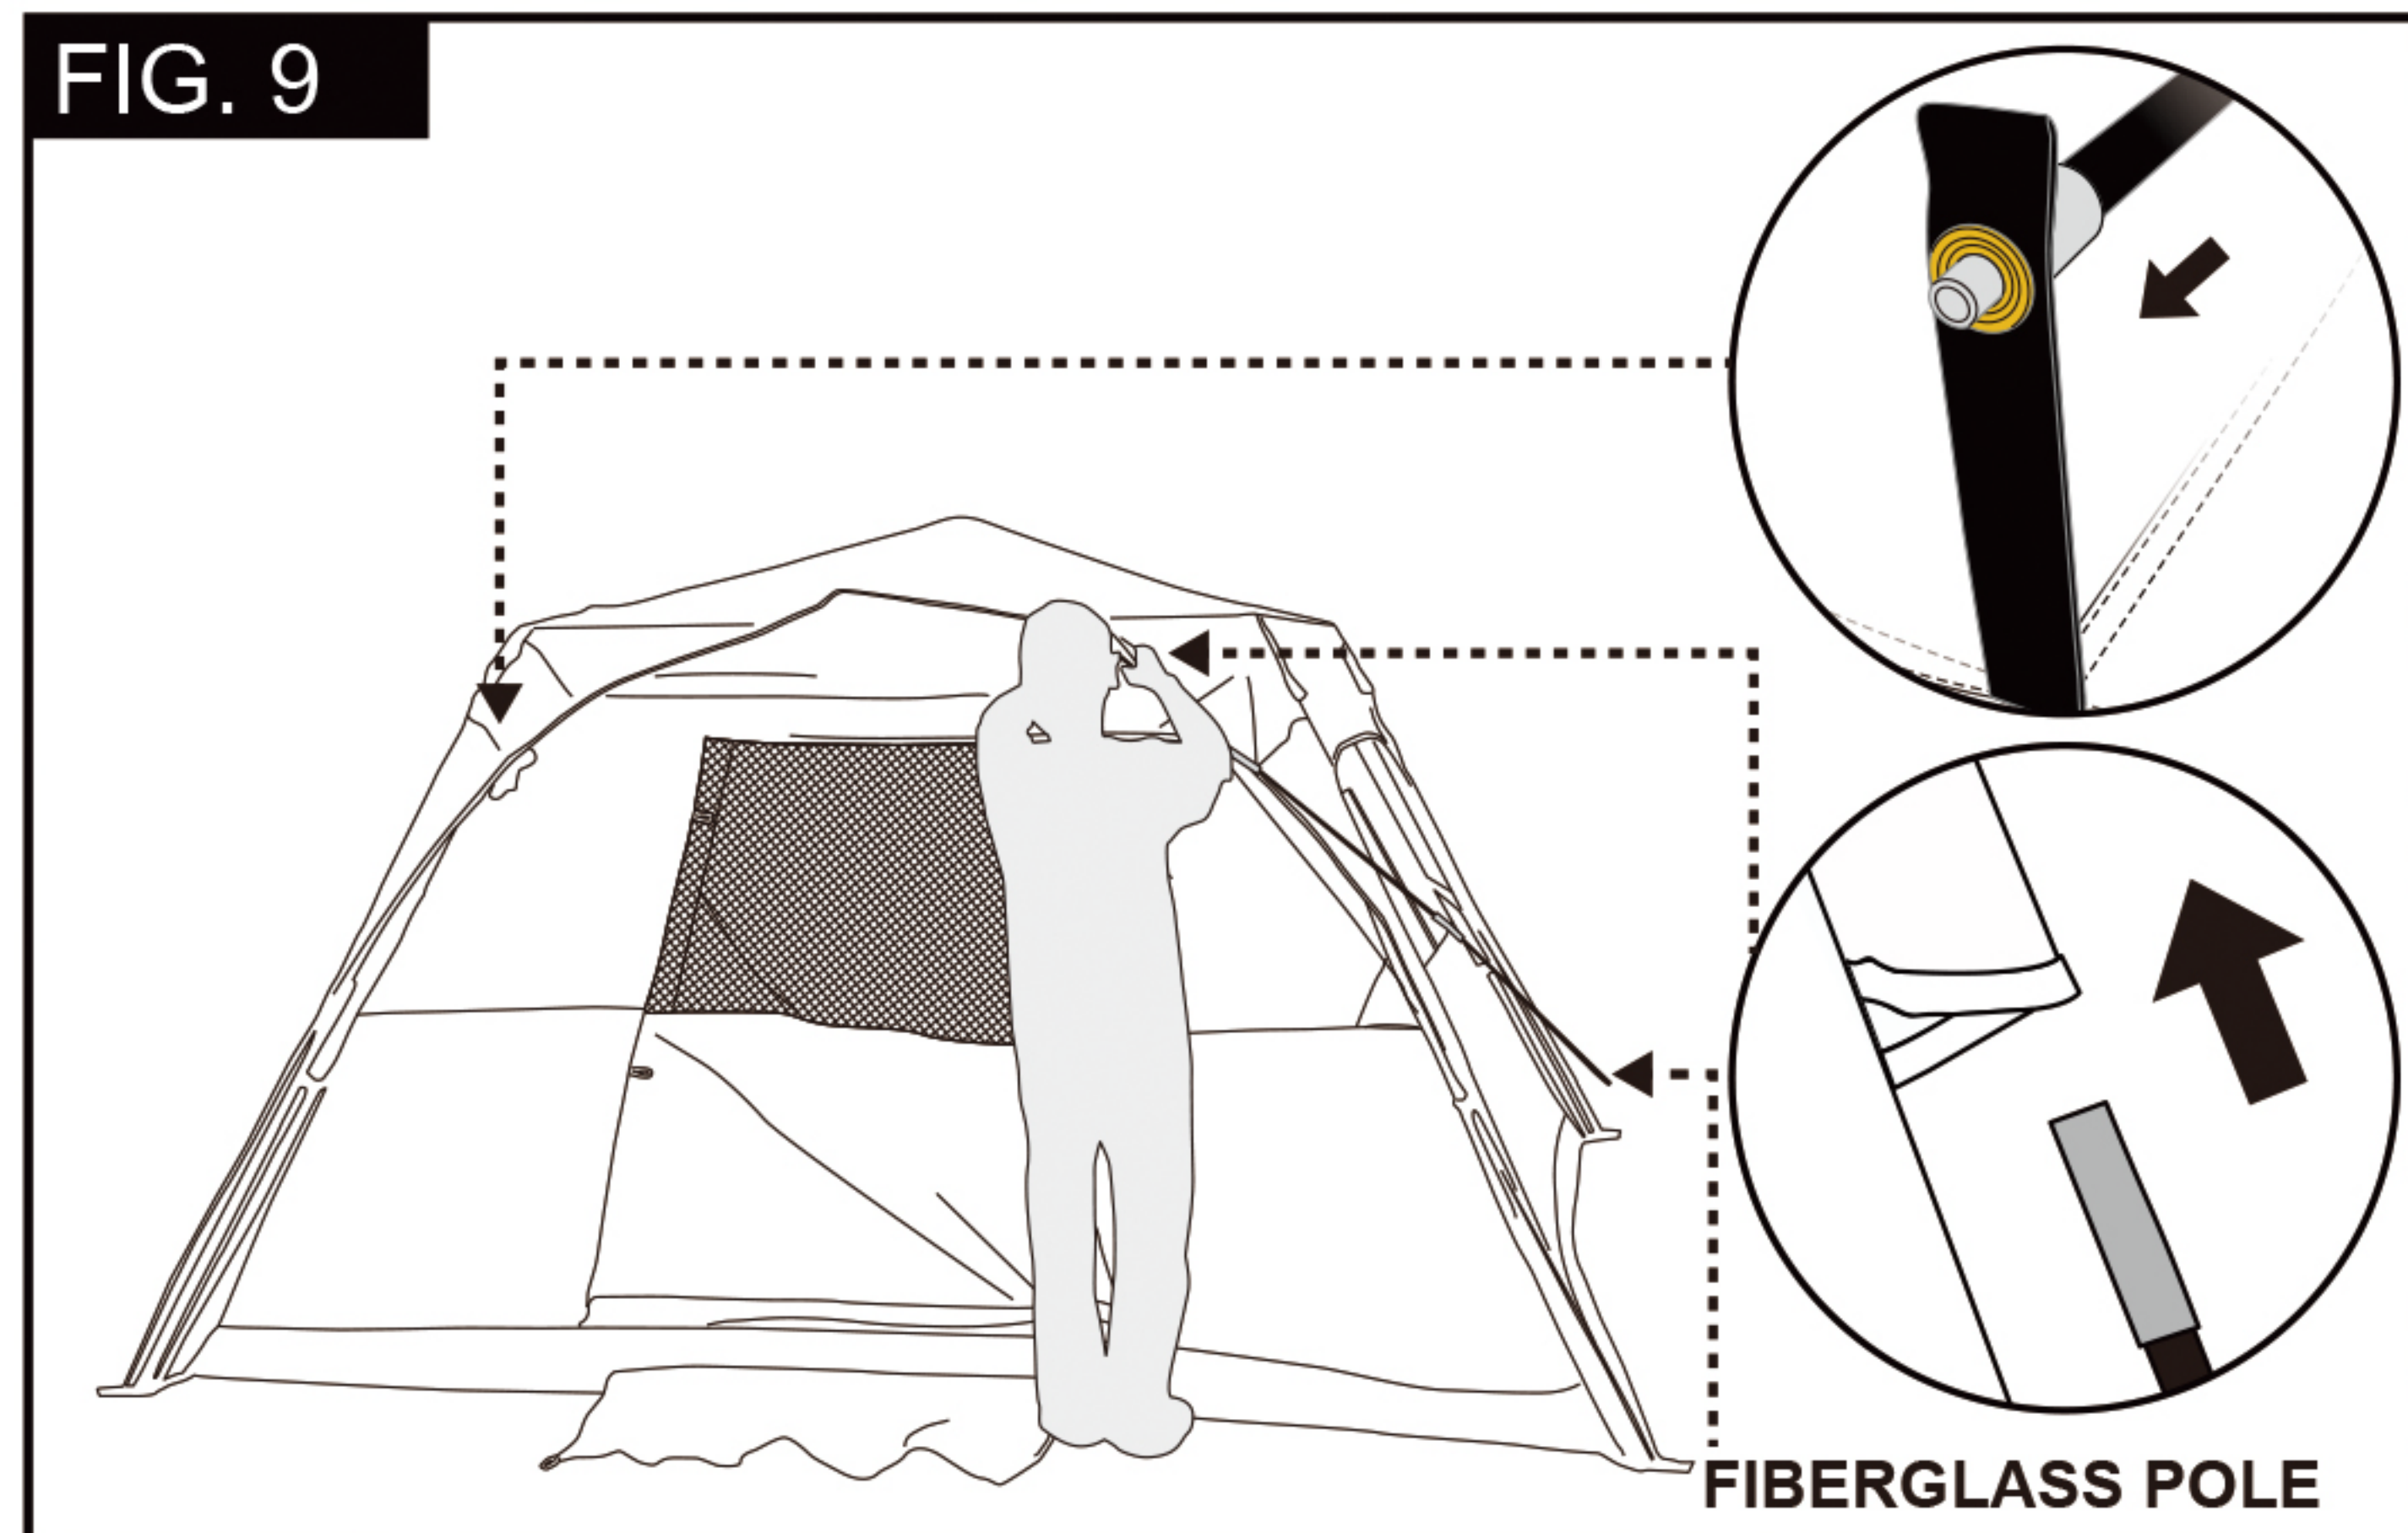

## STEP 10:

Stake out the Guy Lines away from the tent with lines at roughly a 45° angle to the ground. Adjust using the plastic sliders. **See Fig. 10.**

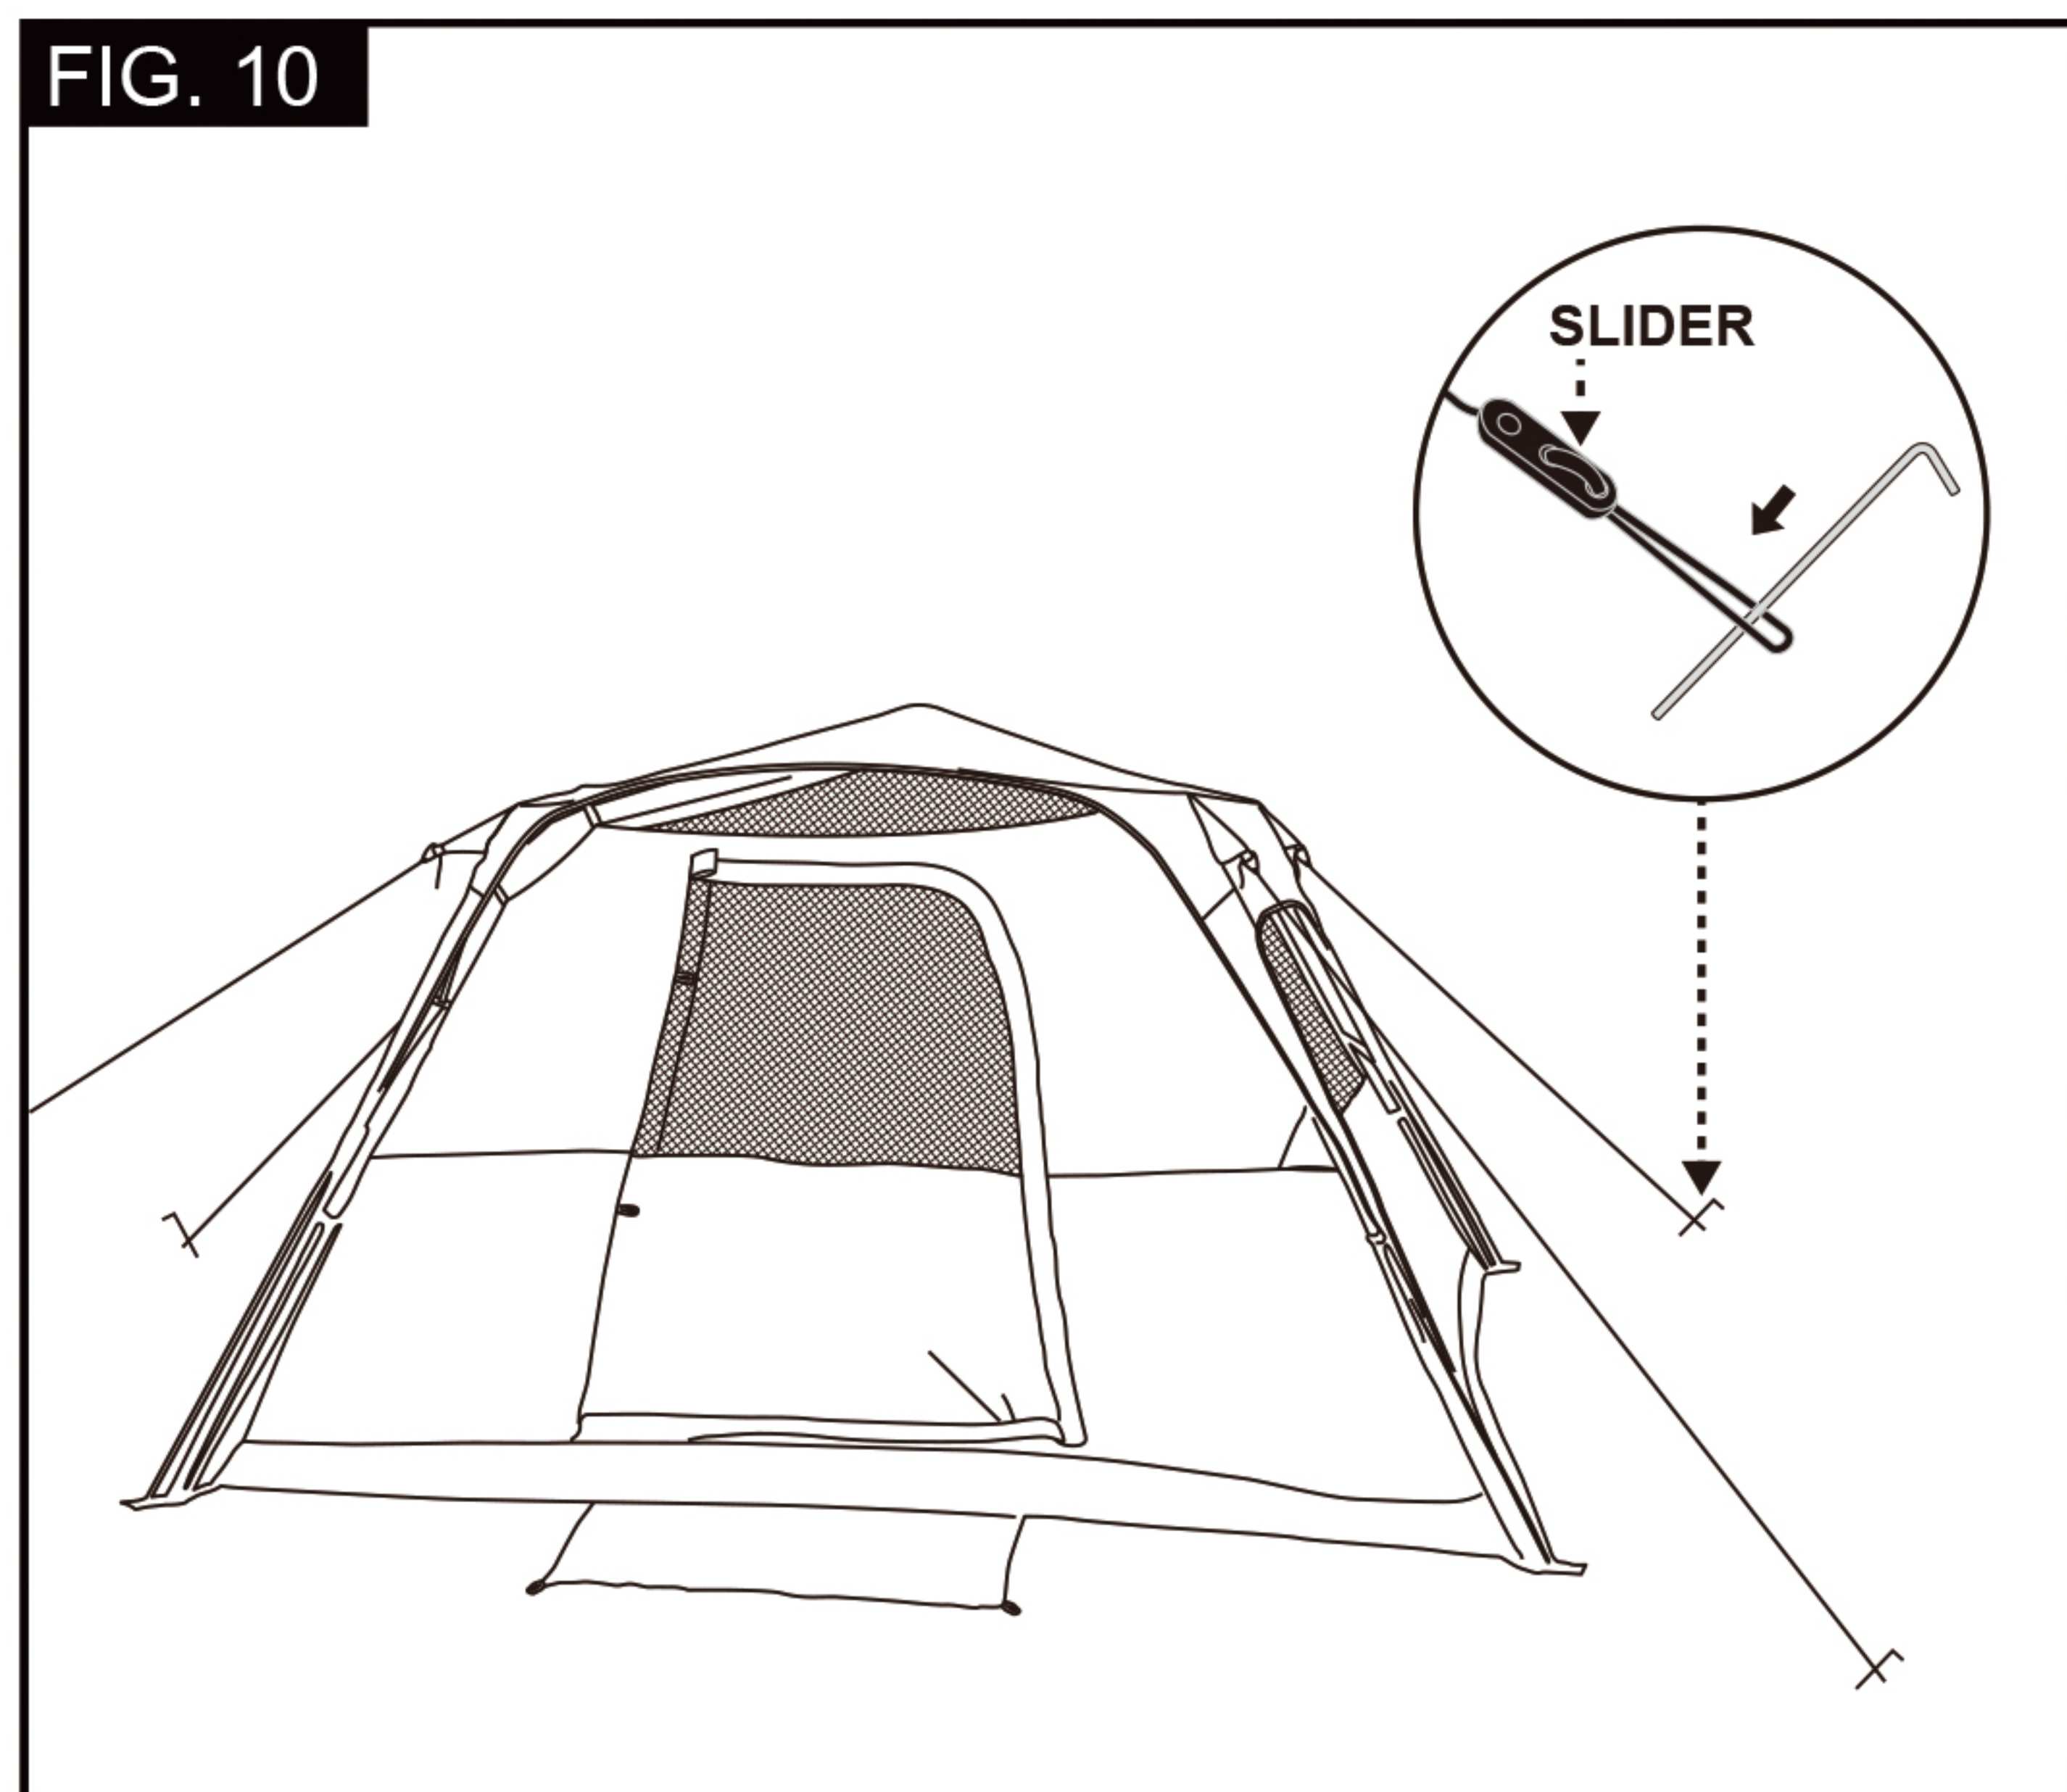


# TENT FOLDING INSTRUCTIONS

## Tent Folding Instructions


### STEP 1:

Remove the stakes and tie down ropes from the outside the tent. See Fig. 11.

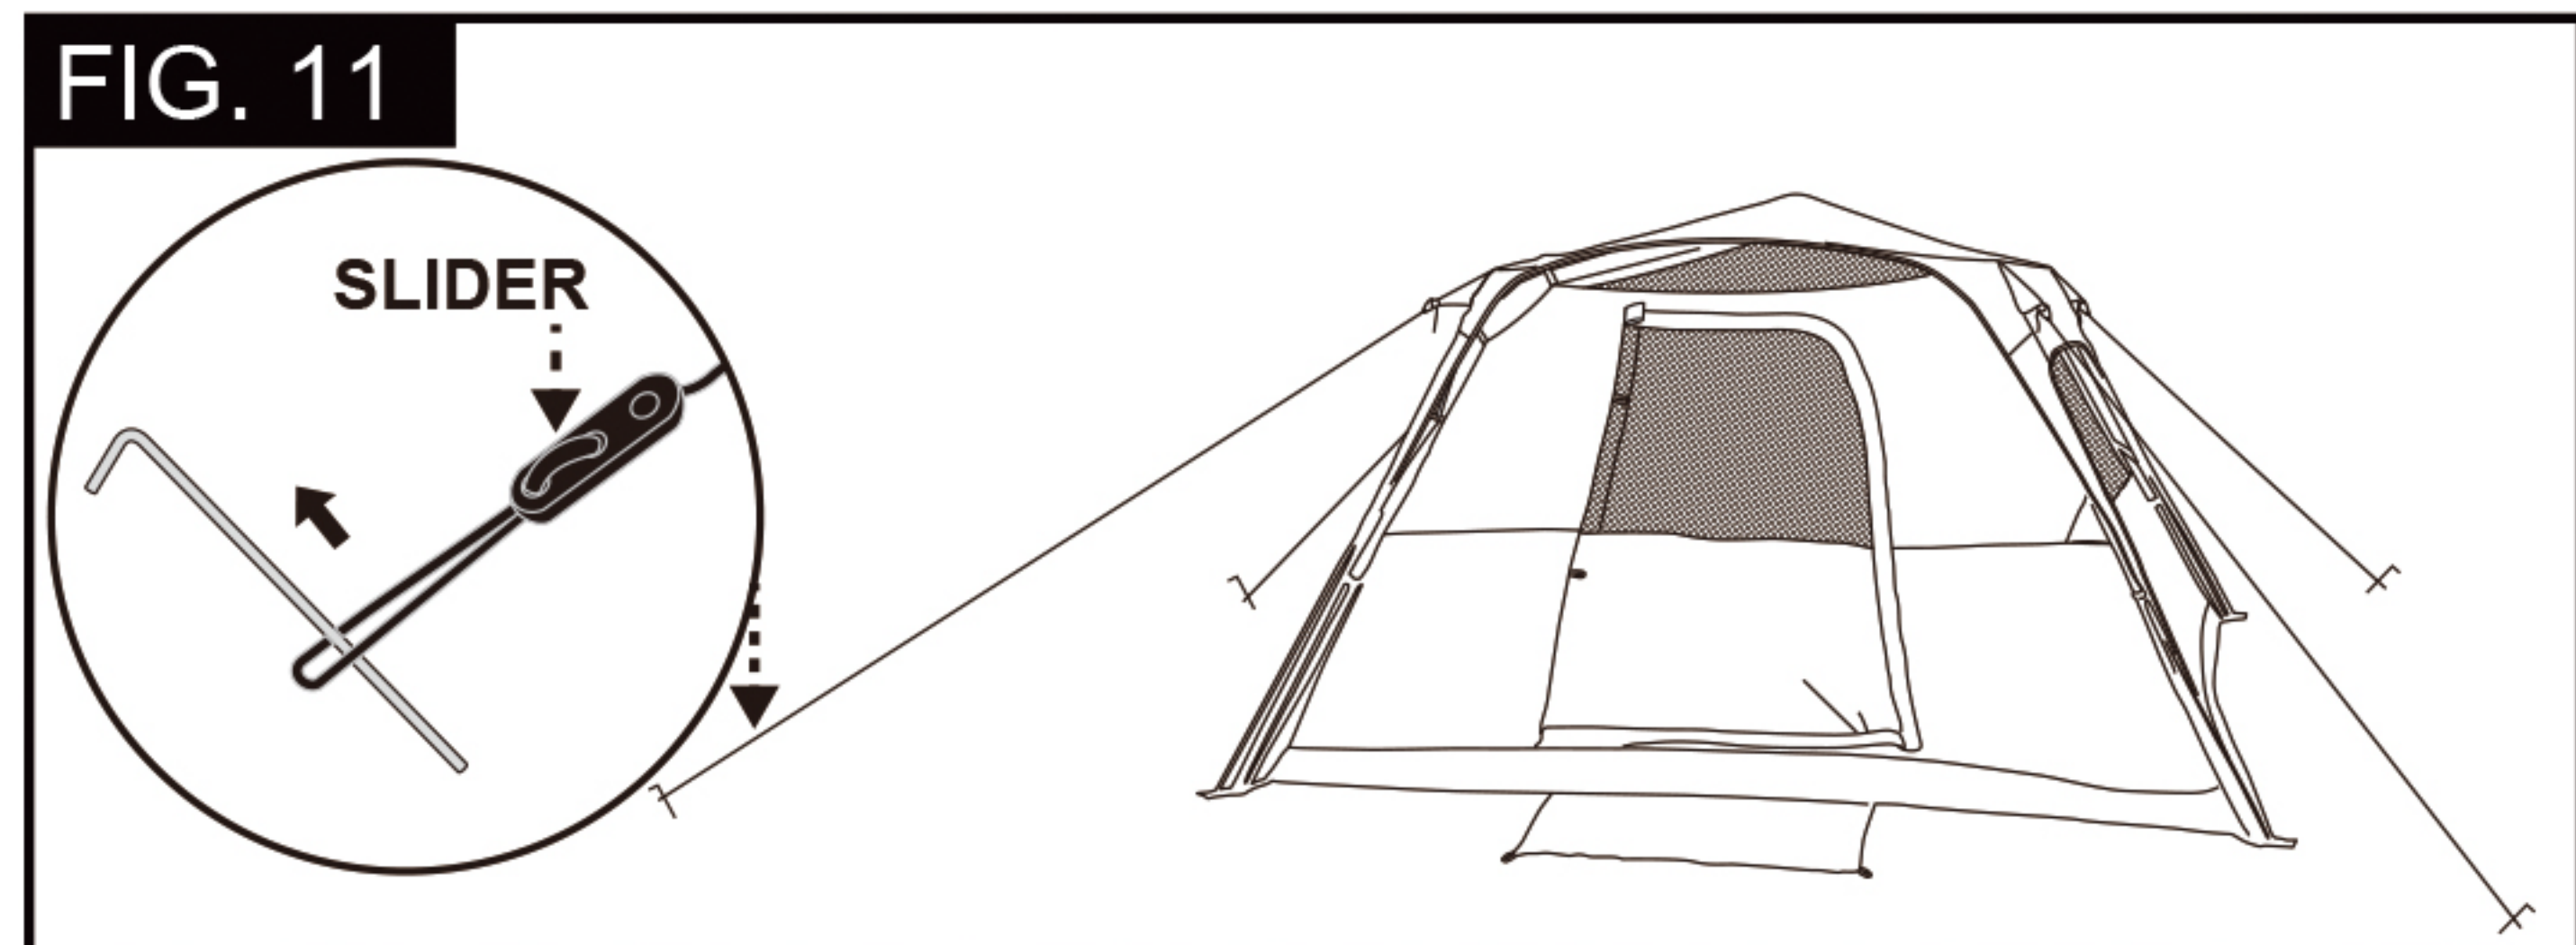


### STEP 2:

Take both ends of the pole out of the grommets and unreeve the rainfly pole from the sleeve under the front rainfly edge. See Fig. 12.

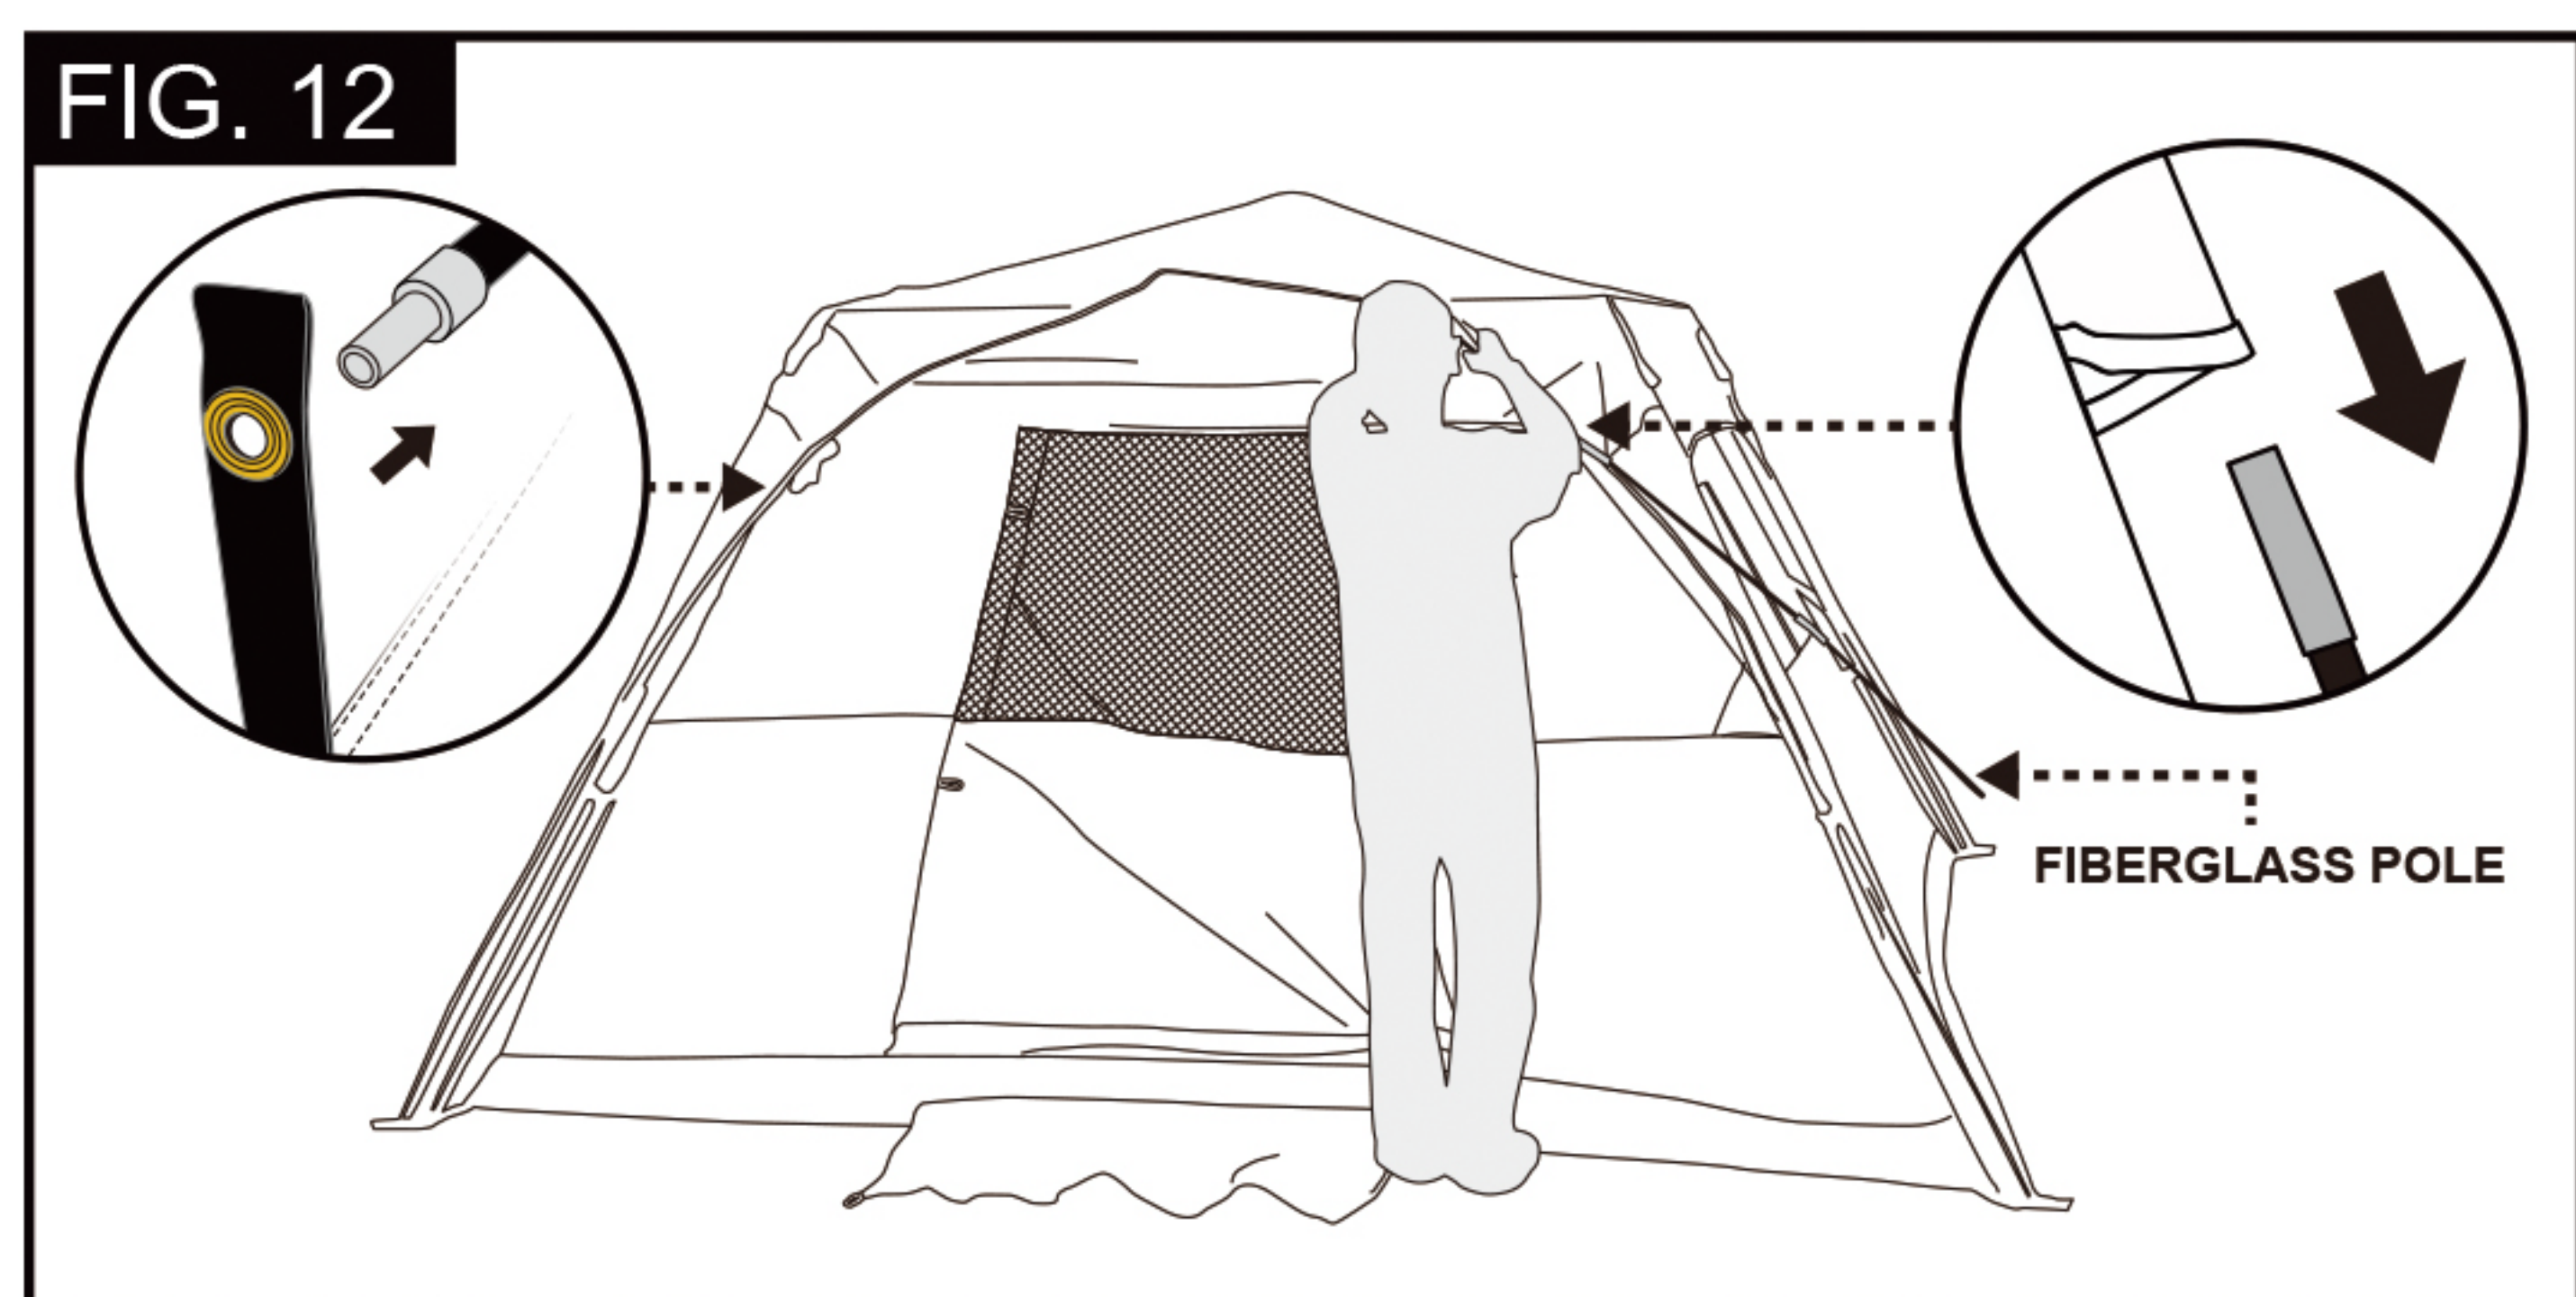


### STEP 3:

Detach the S-hooks which were connected to the D-rings at the base of the tent, and detach the Velcro tabs from the poles of the instant frame. Remove the rainfly from the tent. See Fig. 13.

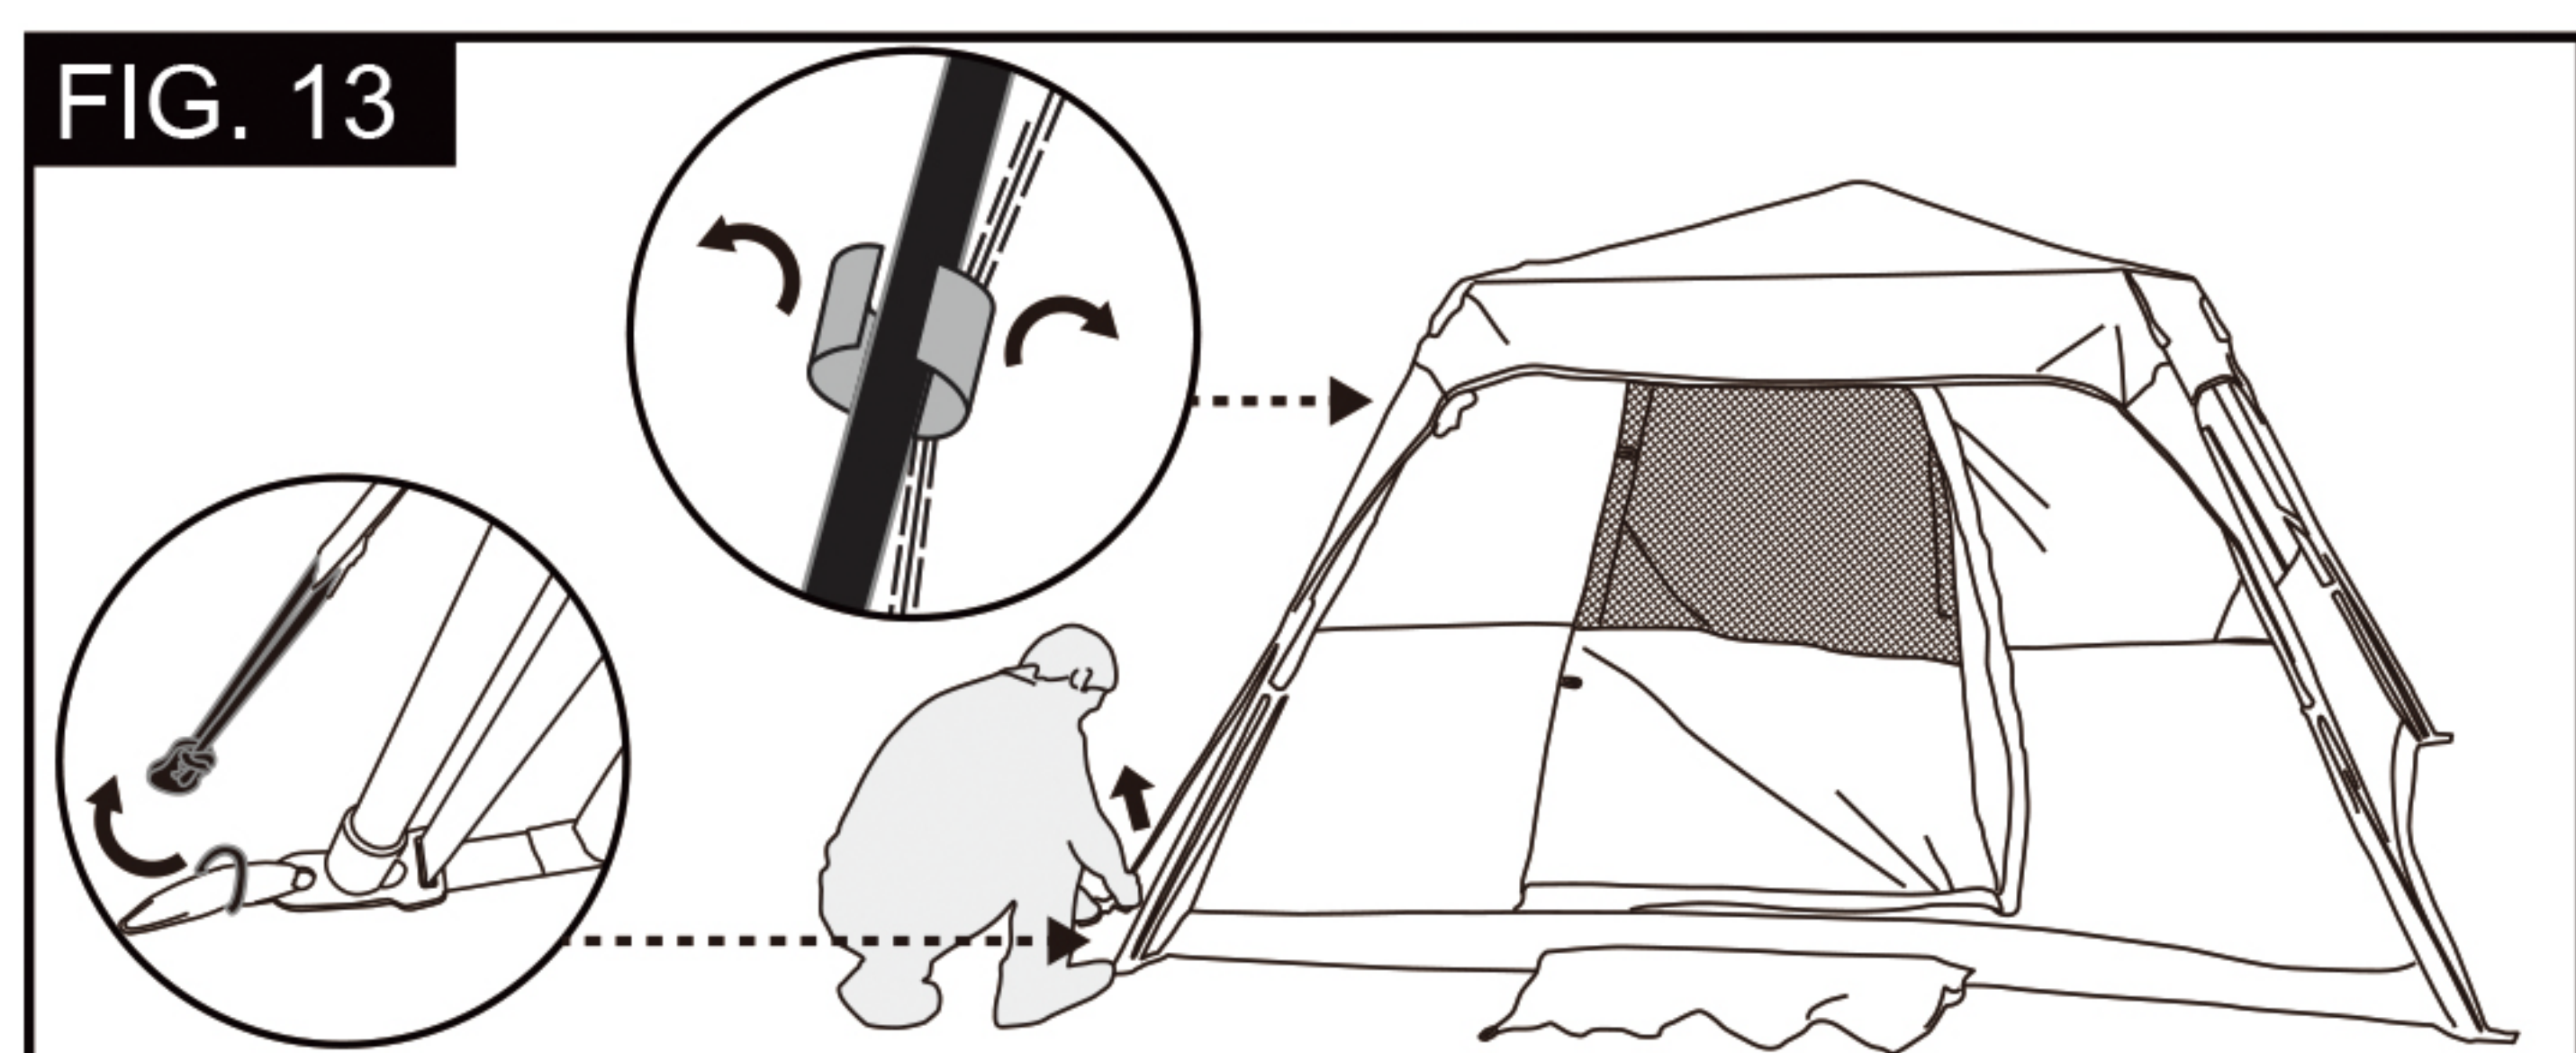


### STEP 4:

Walk into the tent, and loosen the S-hooks of Gear Loft from the fabric loops on the tent ceiling. See Fig. 14.

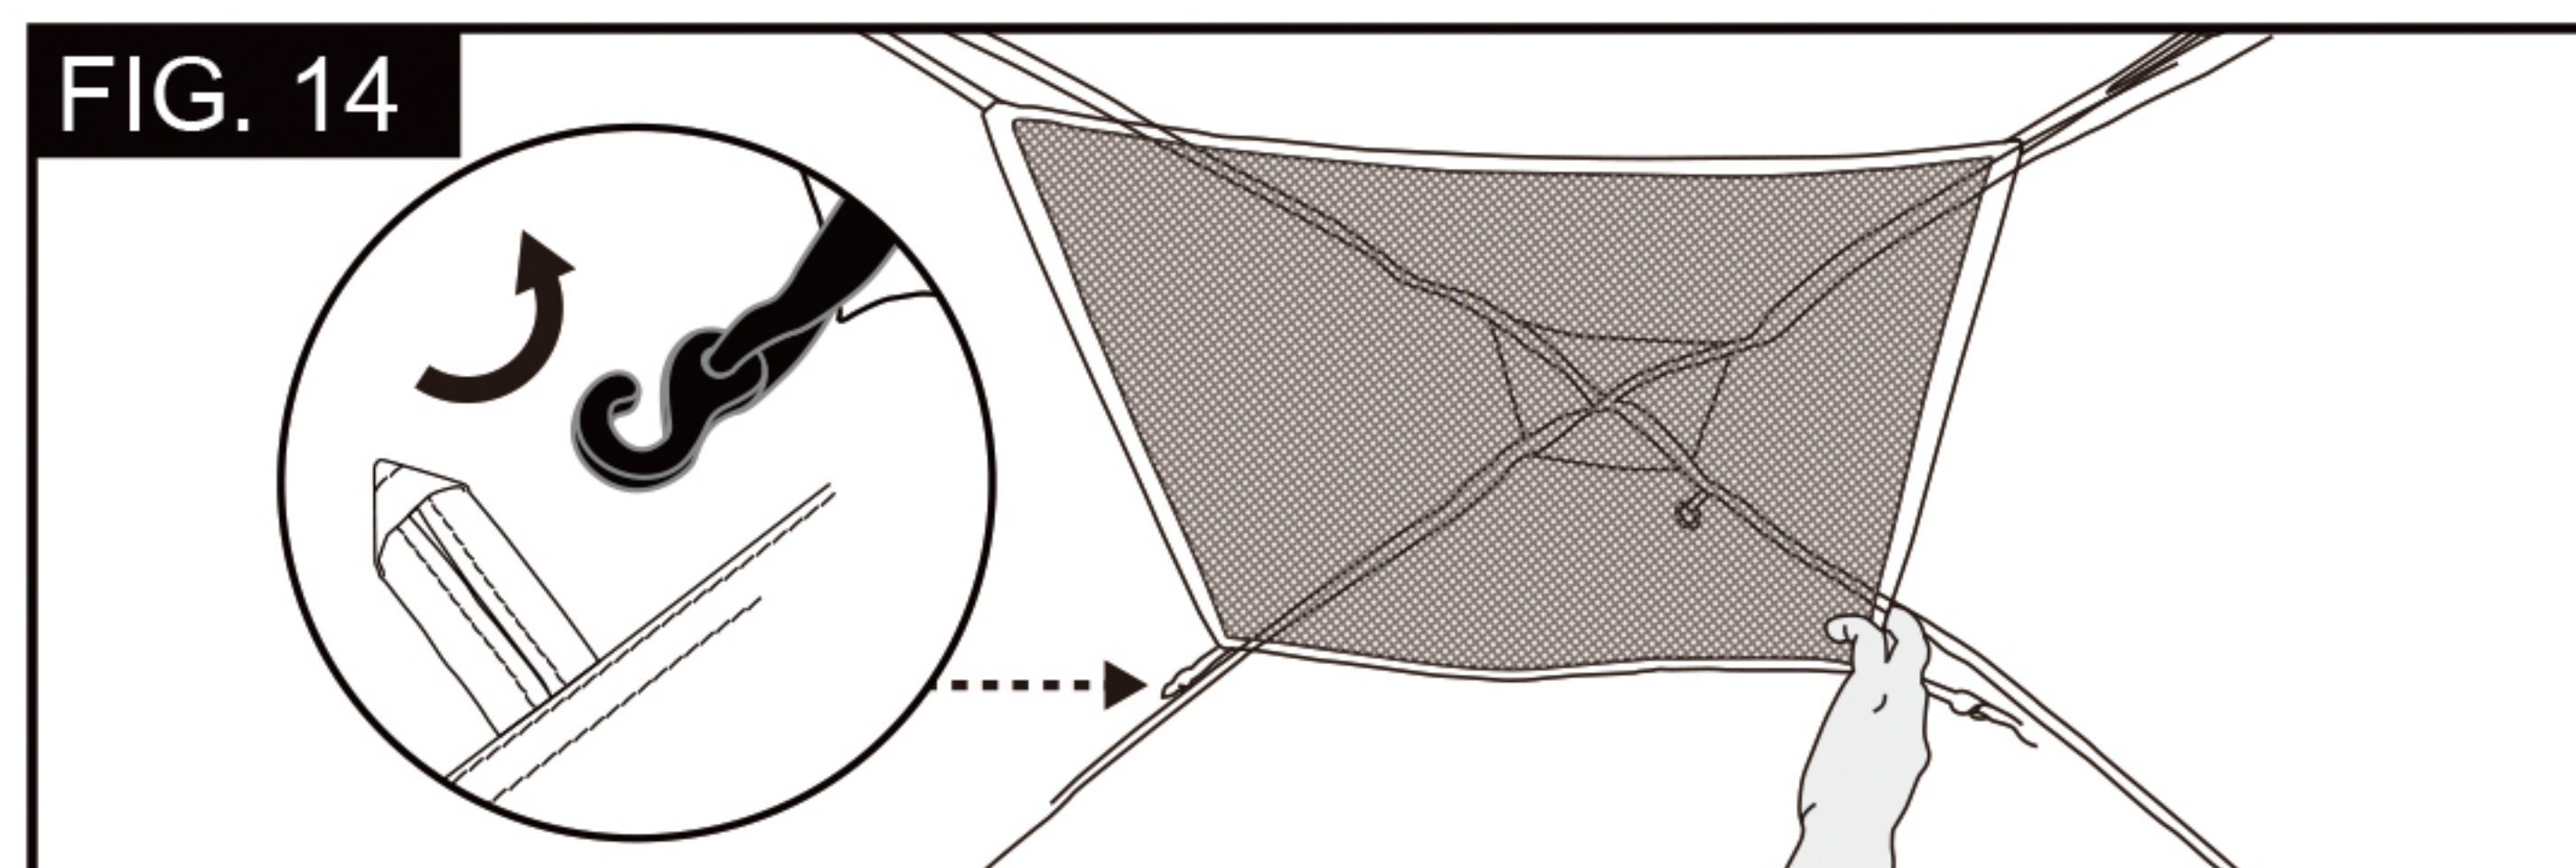


### STEP 5:

Lower the telescopic leg poles by pushing the red buttons, fold the legs toward the center, gather all of the corners together so the hub is at the bottom. See Fig. 15.

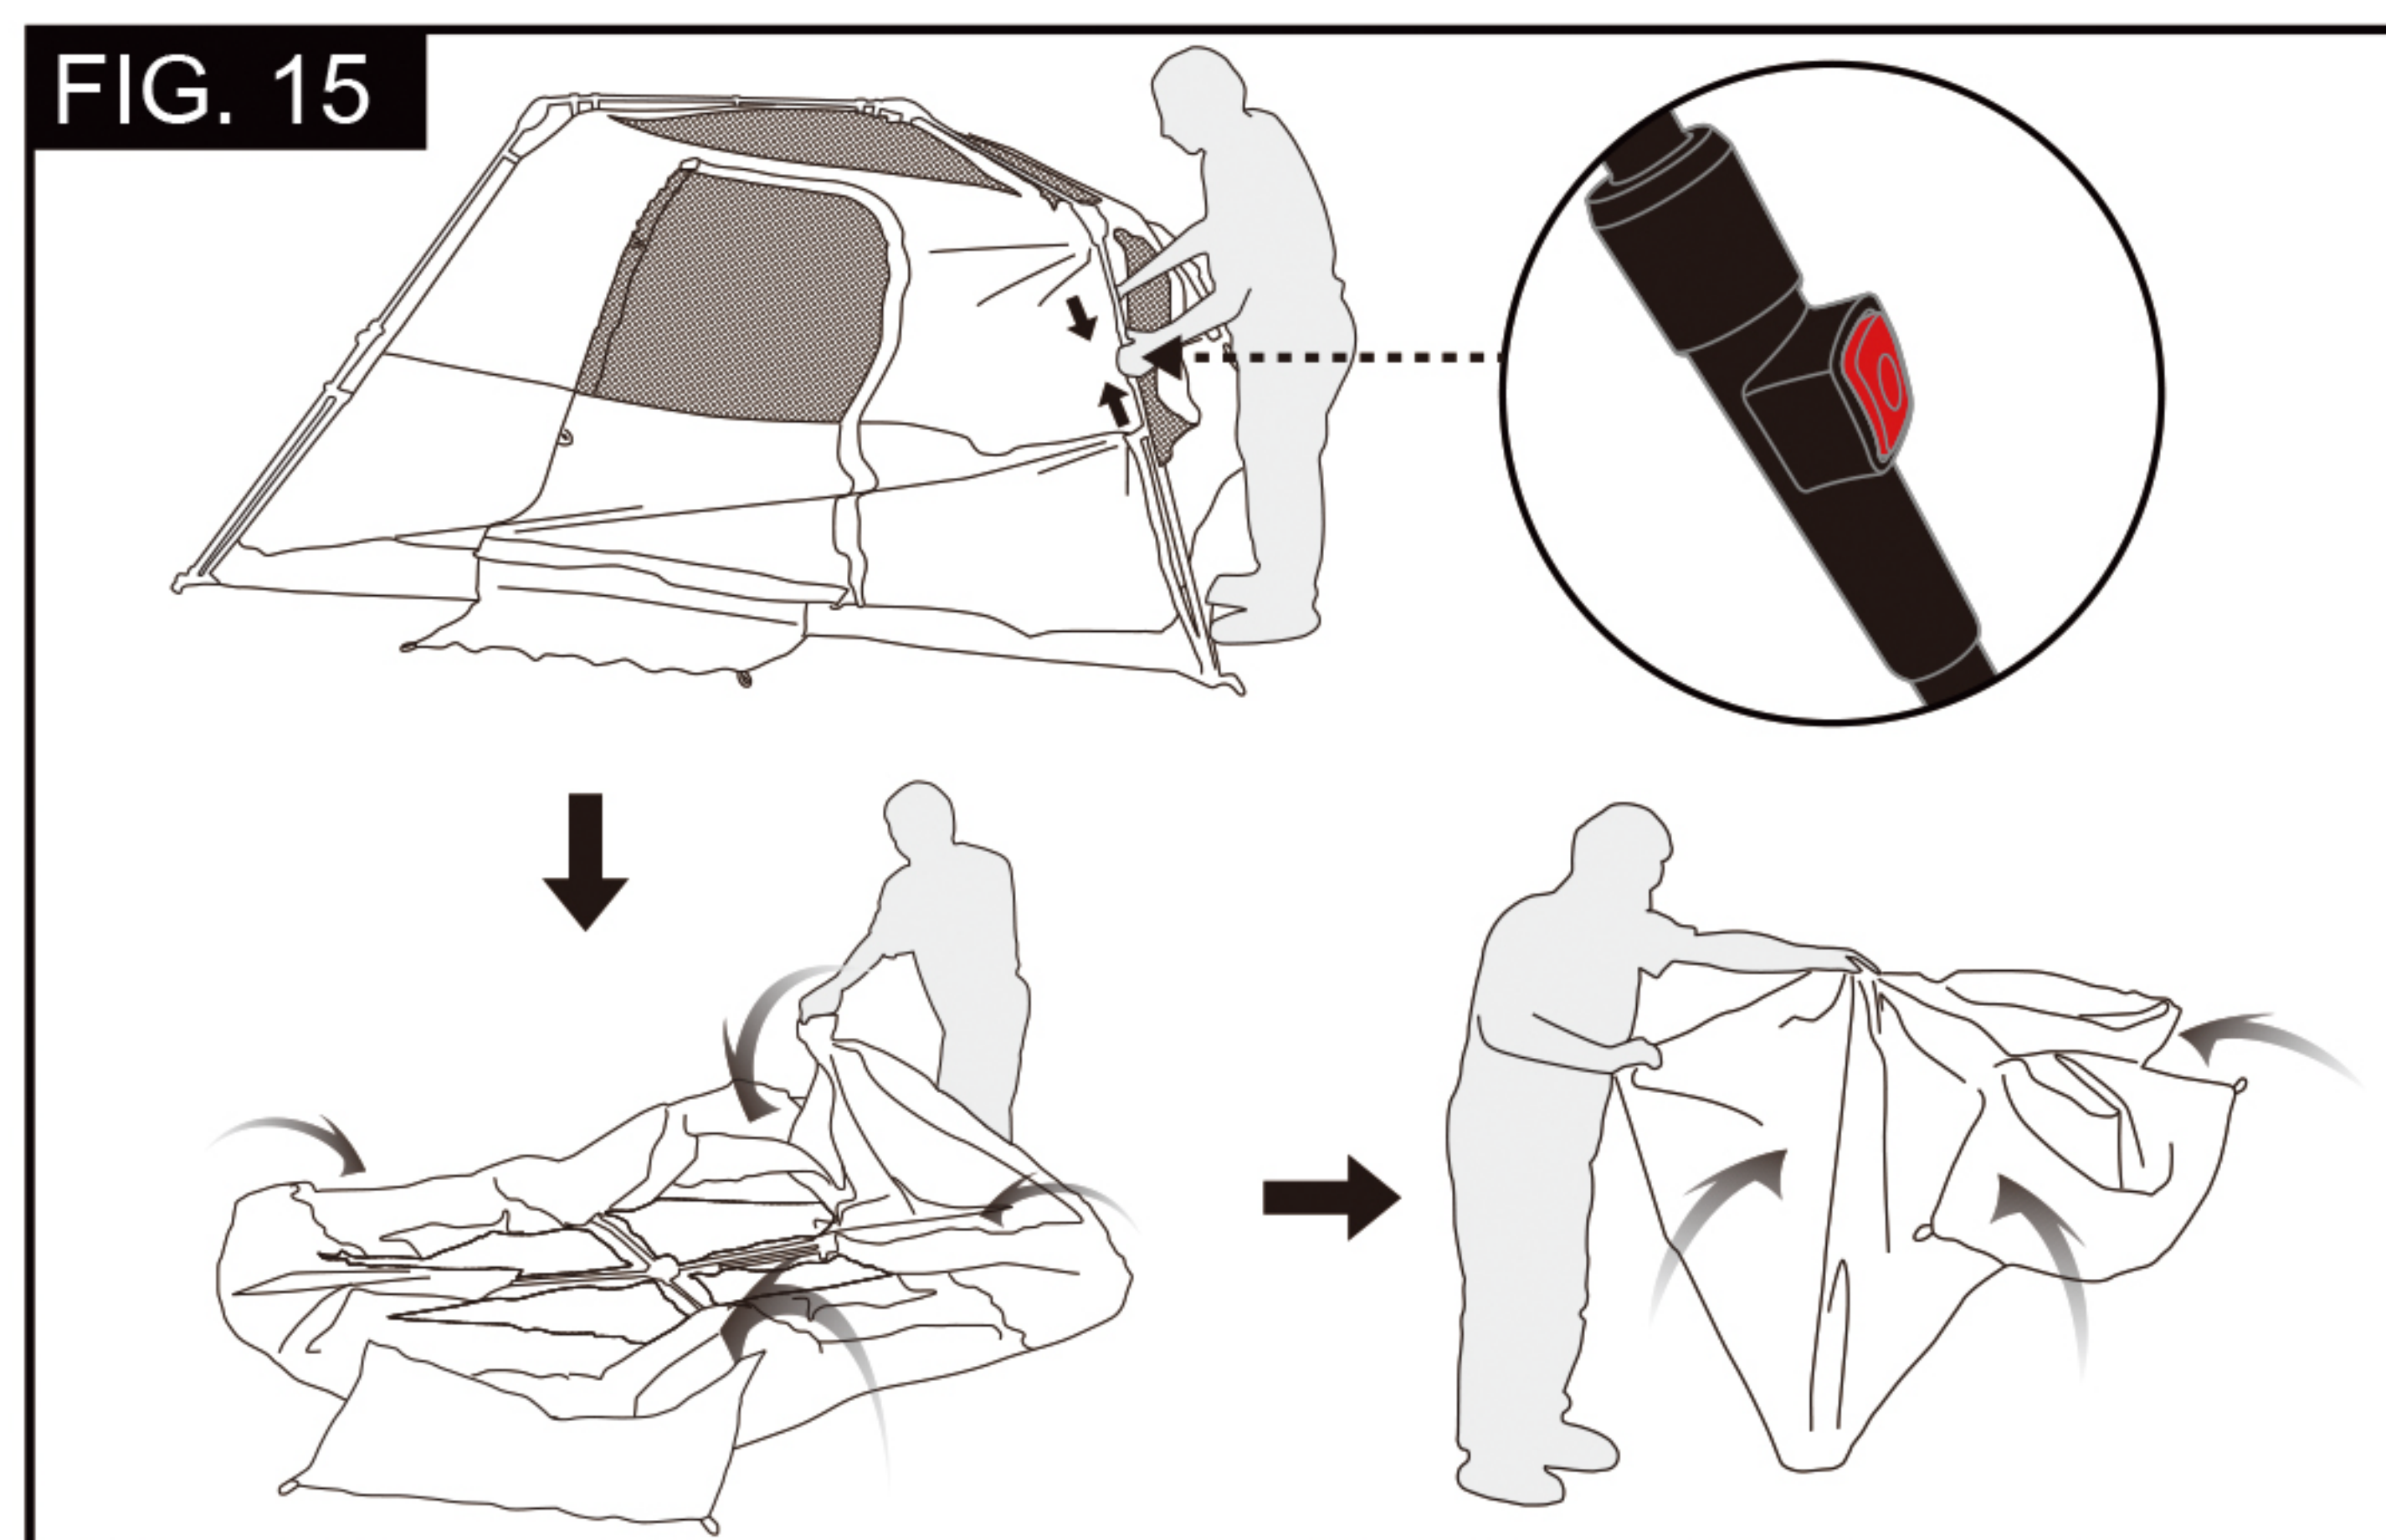

### STEP 6:

Wrap the webbing strap around the folded frame to make slipping it back into the carry bag easier. When inserting the tent into the bag, the hubs should go toward the bottom of the bag. Put the rest of the items (rainfly, rainfly poles, gear loft and stakes) into the carry bag as well. See Fig. 16.

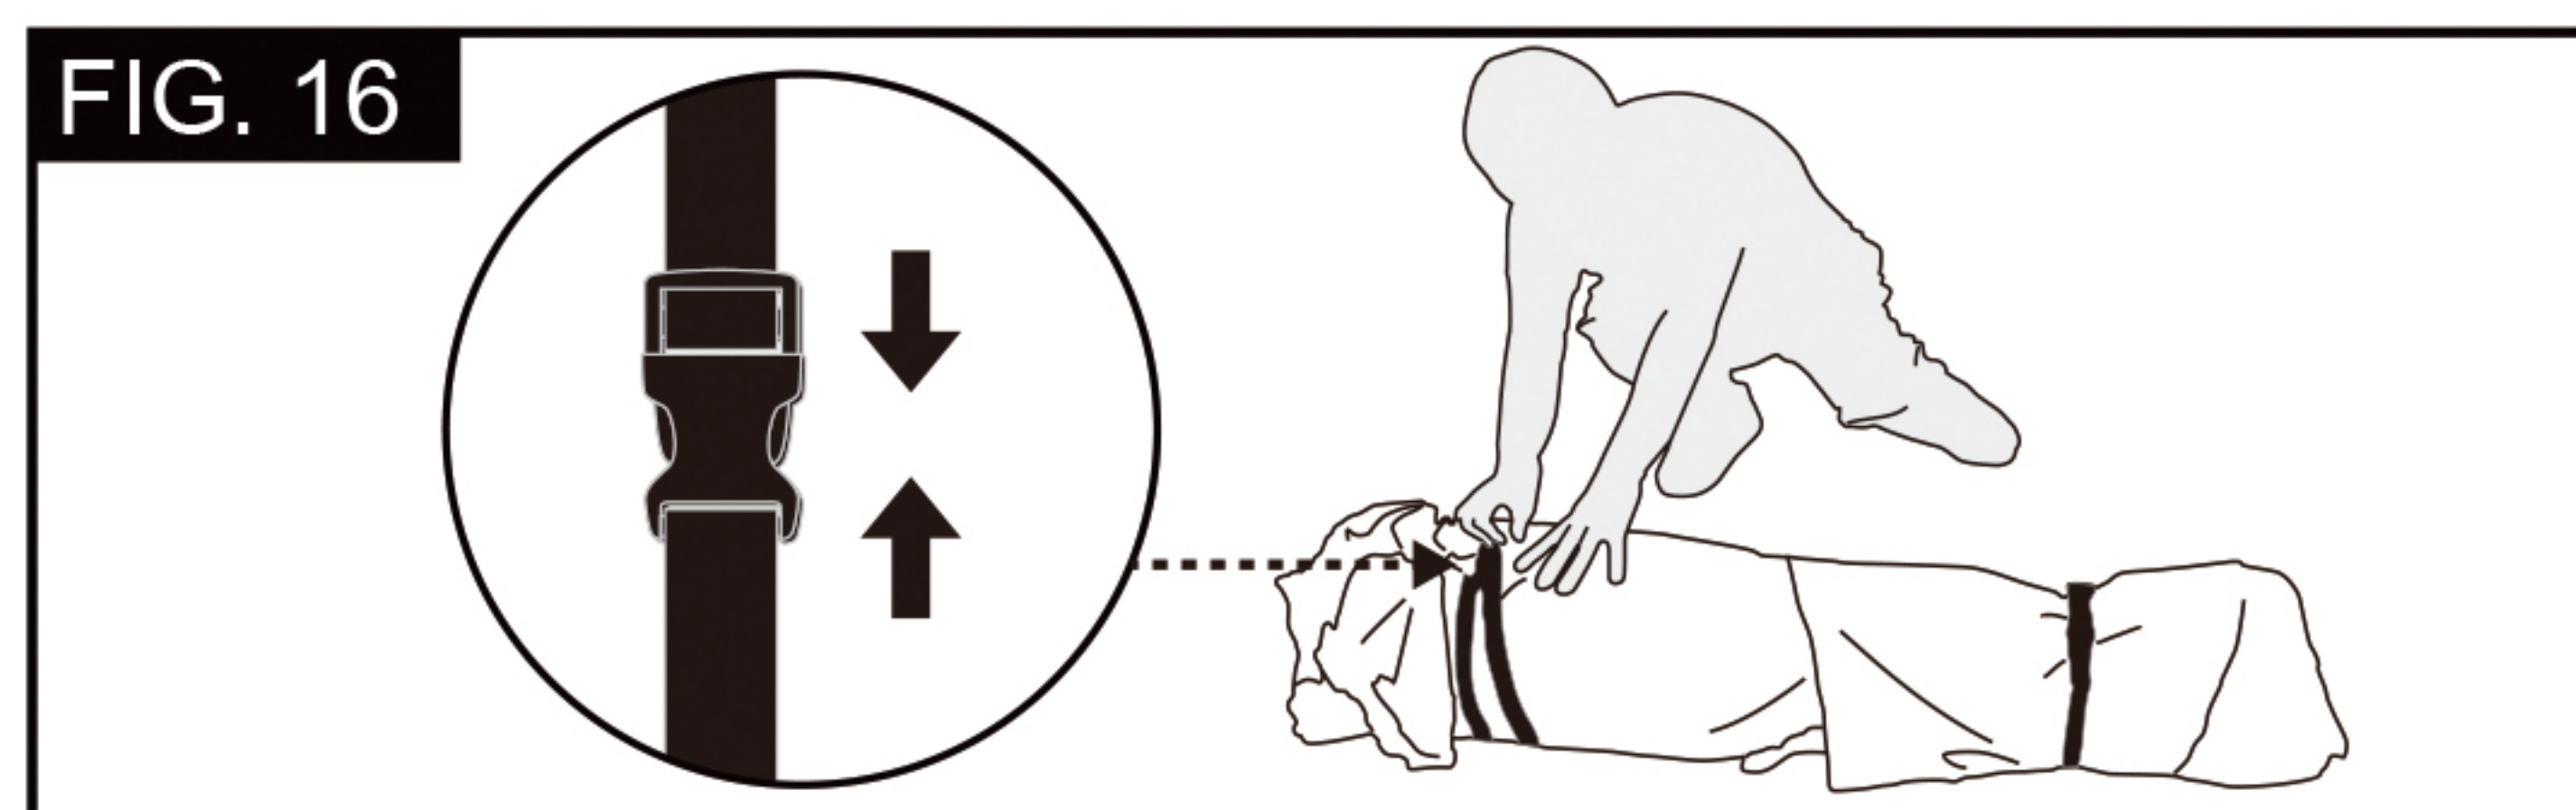

# WARRANTY INFORMATION

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.

## PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

For more information, please refer to:

 Website: [www.everadvanced.com](http://www.everadvanced.com)

 Email: [info@everadvanced.com](mailto:info@everadvanced.com)

 Facebook: [@everadvanced](https://www.facebook.com/everadvanced)

 Instagram: [@everadvanced](https://www.instagram.com/everadvanced)