



**EVER ADVANCED
INSTRUCTION MANUAL**

Camping Tent
(HW-40264)

TABLE OF CONTENTS

SAFETY & CARE	1
PARTS LIST	2
ASSEMBLY	3
FOLD UP	4
WARRANTY	5

SAFETY & CARE

SAFETY WARNING - Do's and Do Not's

EVERYONE WHO USES THIS TENT SHOULD READ THIS MANUAL AND BECOME FAMILIAR WITH ALL SAFETY WARNINGS AND PRECAUTIONS FOR SAFE USE, ASSEMBLY, CARE, MAINTENANCE, AND STORAGE. KEEP THIS MANUAL SO YOU CAN REFER TO IT LATER.

⚠ DANGER CARBON MONOXIDE GAS WILL KILL YOU
Stoves, heaters, grills, lanterns, candles, and other fuel-burning devices that burn propane, natural gas, charcoal, kerosene, coal, or other fuels produce a toxic gas called carbon monoxide. Because carbon monoxide gas is invisible, odorless, and colorless, a dangerous level of carbon monoxide gas can accumulate in a tent which cannot be detected by sight, smell, or taste. For these reasons:

- DO NOT use matches, lighters, stoves, heaters, grills, lanterns, candles, cooking equipment, or other fuel-burning devices inside or near a tent.
- DO NOT build fires inside or near a tent.
- DO NOT leave campfires unattended.
- DO NOT let the motorcycle start in the tent for a long time.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

⚠ DANGER PROTECT YOUR CHILDREN

- DO NOT leave children unattended inside a tent or in camp.
- DO NOT allow children to assemble a tent.
- DO NOT allow children to enter or exit a tent except through the door.
- DO NOT allow children to remain in a closed-up tent on hot days.

Your failure to follow this warning will cause death, serious injury, or permanent disability to your children.

⚠ WARNING FLAMMABILITY WARNING KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent is made with flame resistant fabric which meets CPAI-84 specifications. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

CAMPING DO'S AND DON'TS

DO NOT...

1. Do not pitch the tent near an open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use (other than recommended) water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Do not store the tent on a concrete floor.

DO...

1. Always extinguish the campfire before leaving the area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.

4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy ropes.

5. Take your tent down and store properly after camping.

CARE

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON A CONCRETE FLOOR. DO NOT SPRAY THE TENT WITH INSECTICIDE.



 

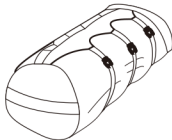




Your tent is water repellent, however, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

EXERCISE CARE WHEN USING ELECTRIC DEVICES IN AND NEAR TENTS.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

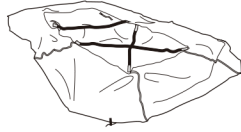IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT. NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED. TO PROLONG THE LIFE OF THE TENT FLOOR, SELECT A LEVEL, CLEAN AREA FOR THE CAMPSITE. TO PREVENT DAMAGE TO THE ZIPPER, UNZIP THE DOORS TO ALLOW AIR TO ENTER THE TENT. TO IMPROVE THE WEATHER RESISTANCE OF YOUR TENT, IT IS ADVISABLE TO USE A SEAM SEALER TO COAT ALL EXPOSED SEAMS. YOU SHOULD APPLY ONLY TO THE INSIDE SEAMS OF THE TENT AND UNDERSIDE OF THE TENT FLY. IF APPLIED TO THE OUTSIDE OF SEAMS, DISCOLORATION OF YOUR TENT MAY OCCUR. SEAM SEALER IS AVAILABLE IN THE CAMPING SECTION OF ANY LOCAL SPORTING GOODS STORE.

PARTS LIST


	Part	Image	Qty
A	Tent Body		1
B	Inner Tent		1
C	Aluminum Pole		3
D	Door Pole		2
E	Carry Bag		1
F	Stake Bag		1
G	Pole Bag		1
H	Stake		15
I	Guy rope		6

ASSEMBLY INSTRUCTIONS

STEP 1:

Remove the tent and poles from the carry bag.


FIG. 1

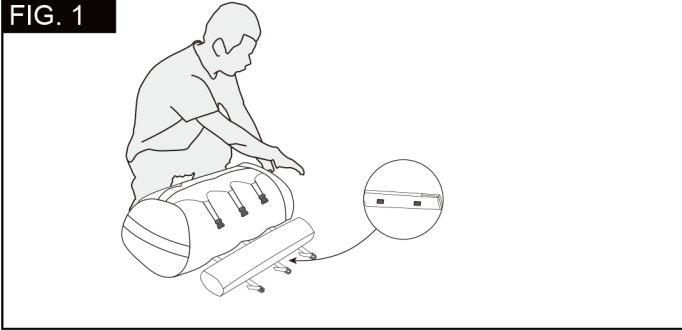

STEP 2:

Take the aluminum pole with pre bending and slide it into roof sleeves. Note: Insert the long part of the aluminum rod through the pipe sleeve above the front door.


FIG. 2

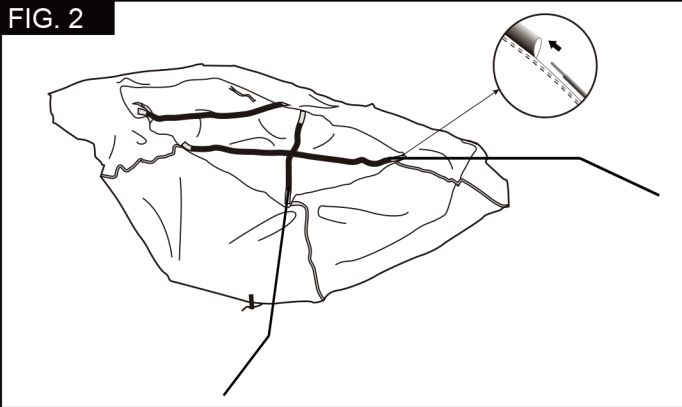

STEP 3:

Finish securing by inserting the pole end onto the pin-rings at base of tent. Hang the G-hook on the aluminum pole.

FIG. 3

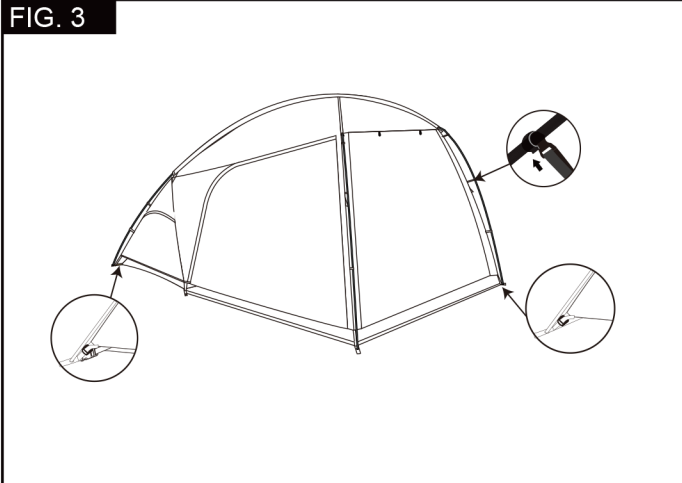

STEP 4:

Insert the last pole. Attach all G hooks to the poles to secure and shape the tent.


FIG. 4



STEP 5:

Put the two-door poles into the O-ring at the front end of the canopy, and adjust the angle of the poles. Put the guy rope on the top of the pole, tighten the rope and secure it with steel stakes.

FIG. 5

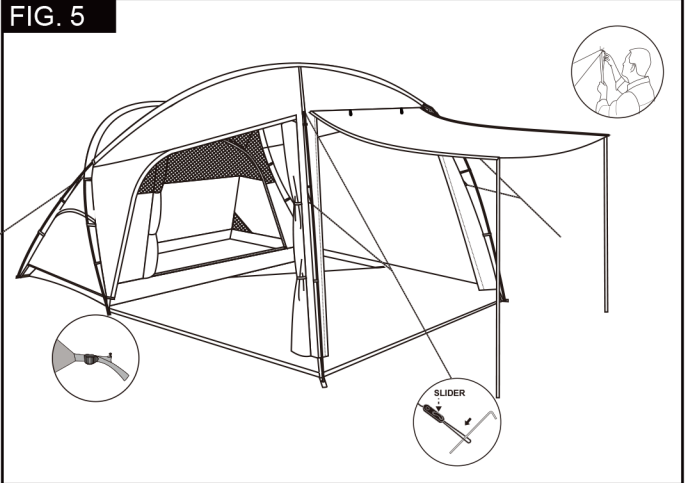

TENT FOLDING INSTRUCTIONS

STEP 1:

Take down the guy lines and stakes on the rainfly door.


FIG. 6



STEP 3:

Put the pole into the pole bag.


FIG. 8

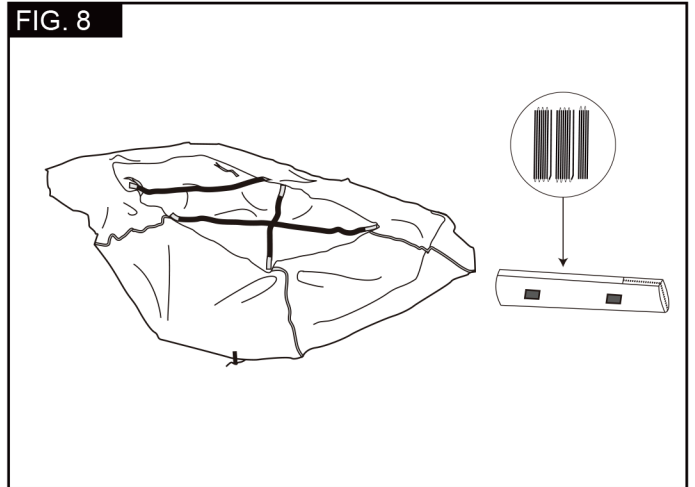

STEP 4:

Fold the tent according to the length of the pole and put it into the carry bag. Put the pole bag on the carry bag, as shown in the figure.


FIG. 9

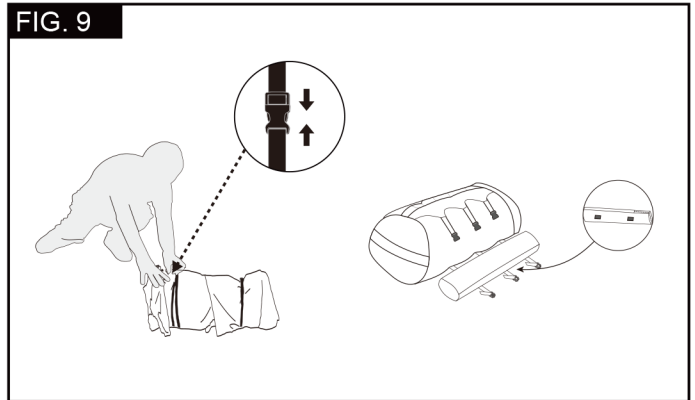

STEP 2:

Unhook the buckles and poles, take down the outer cover and fold it.


FIG. 7

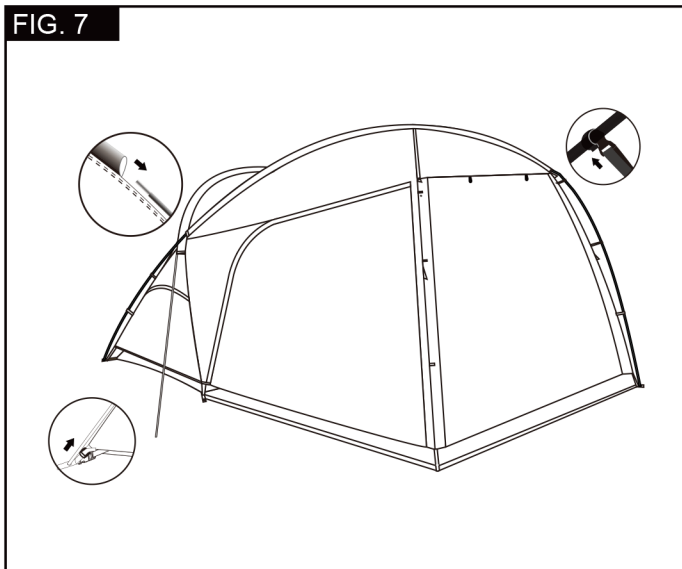

STEP 5:

Tie the carry bag to the bike.

FIG. 10

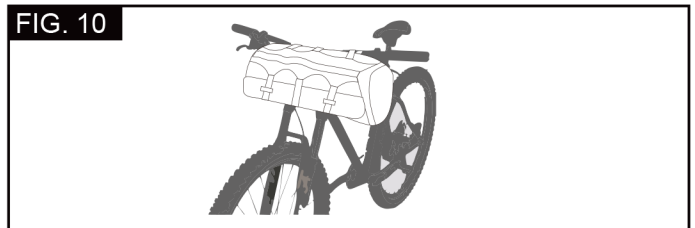

WARRANTY INFORMATION

This product has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for one year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser receipt.

This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for incidental or consequential damage.

PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

For more information, please refer to:



Website: www.everadvanced.com



Email: info@everadvanced.com



Facebook: [@everadvanced](https://www.facebook.com/everadvanced)



Instagram: [@everadvanced](https://www.instagram.com/everadvanced)