


**LP-70086-1
ASSEMBLY INSTRUCTIONS**

IMPORTANT NOTES:


- * Assemble your tent before camping to become familiar with the assembly.
- * Two people are recommended for setup.
- * Select a clean, level area for the campsite, free of debris and sharp objects, away from any natural watercourse.
- * Use of a ground cloth is recommended to prolong the life of the tent floor and provide additional insulation and moisture protection.
- * To prevent damage to the zippers, unzip the doors and windows of the tent prior to disassembly, allowing air to move freely.
- * Seam-seal the inside stitched seams of the tent. This will improve weather resistance. Available in sporting goods departments. Discoloration may occur if applied to outside seams.

1 : Verify Package Contents

☐ Tent : 1 each

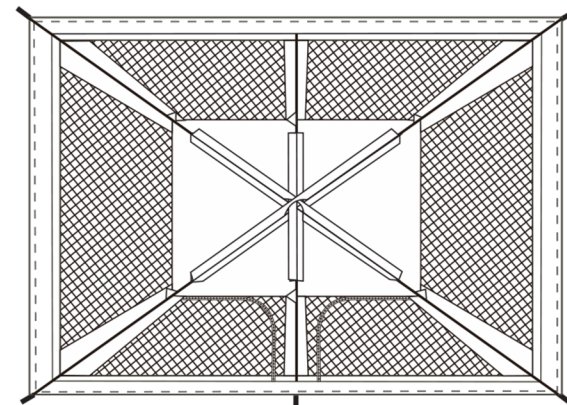

☐ Poles : 9 each (total)

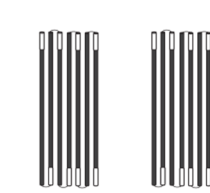

(A) Fiberglass Pole, Black 2 each



(B) Fiberglass Pole, Grey 1 each




(C) Side Steel Leg Pole, Black 4 each




(D) Centre Steel Leg Pole with Grey tape, Black 2 each

☐ Tent Stakes : 14 each

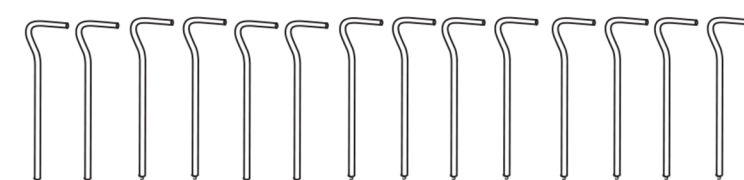


1

- 1) Select a smooth level site and spread out the tent.
- 2) Take a Roof Pole (A) and slide it into its sleeves of corresponding color. Insert one end of pole into ribbed side of Elbow connector at corners. Gently flex poles and secure to opposite corner into ribbed side of elbow connector. Poles will cross at the center.
- 3) Extend poles and sort into groups. Take the Center Roof Pole (B) and slide it into its middle roof sleeves of corresponding color; finish securing by inserting both pole ends into ridge-ends of center elbow connector.

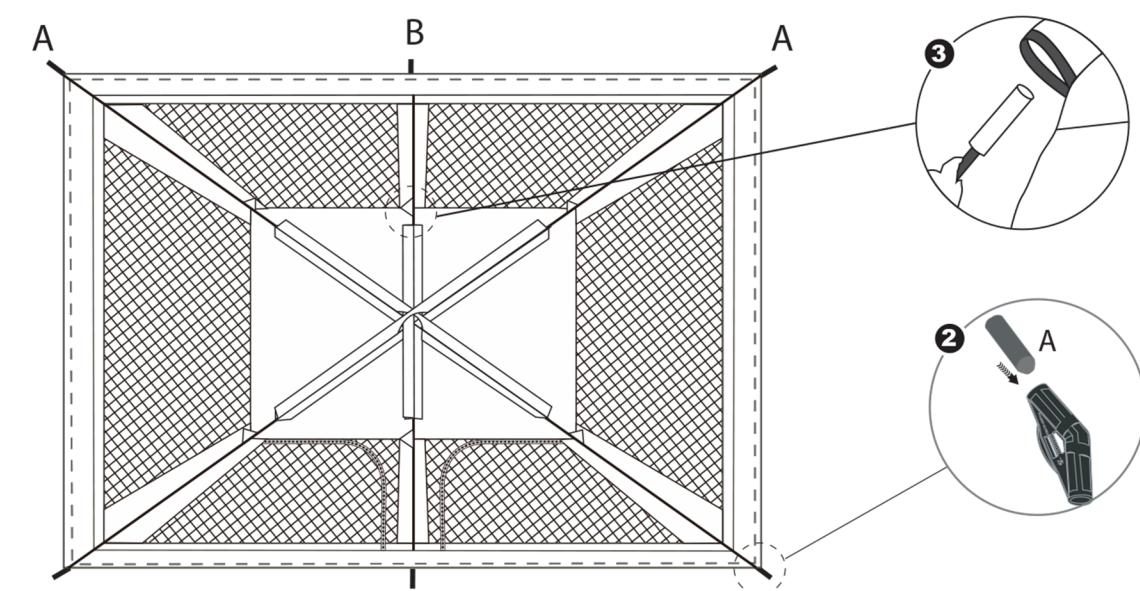


2

- 1) Slide one end of a Side steel leg pole (C) into the smooth end of Elbow Connector, then secure the other end of the leg pole onto the pin-rings at base of tent. Repeat the step for other side leg poles.
- 2) Slide one end of a Center steel leg pole (D) into the smooth end of Elbow Connector, then secure the other end of the leg pole onto the pin-rings at base of tent.
- 3) Attach G-hooks on the fabric to the steel pole.

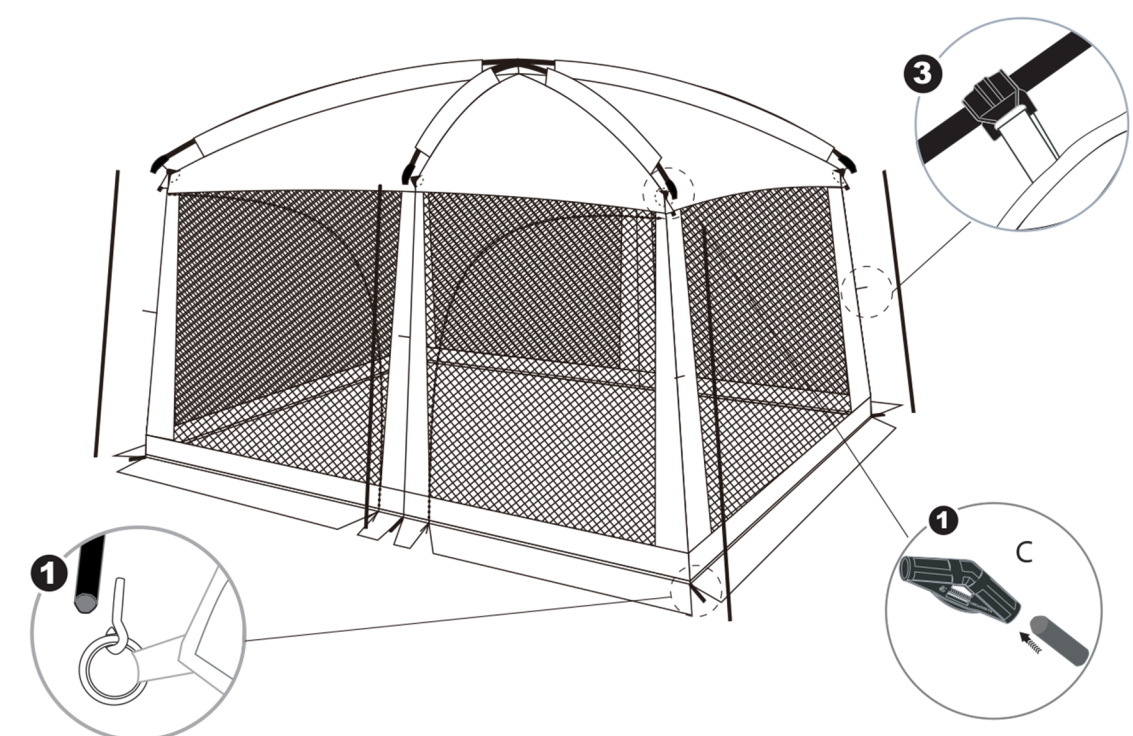


3 : Stake the Tent

- 1) Stake tent by driving stakes through the webbing loops and pin rings on tent base.

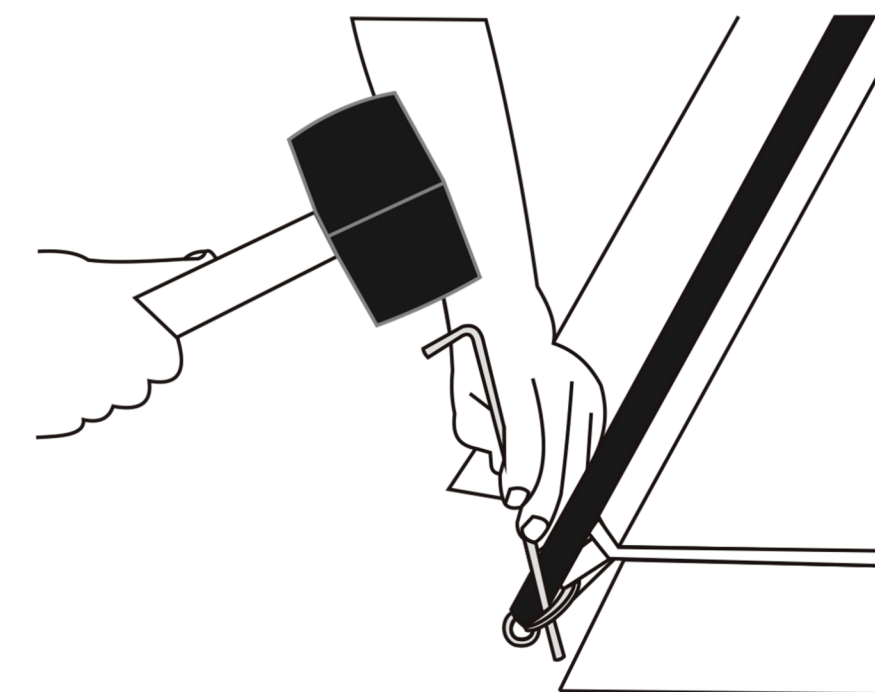

4 : Secure the Tent

- 1) Stake out guy lines away from the tent with lines at roughly a 45° angle to the ground. Adjust using the plastic sliders.

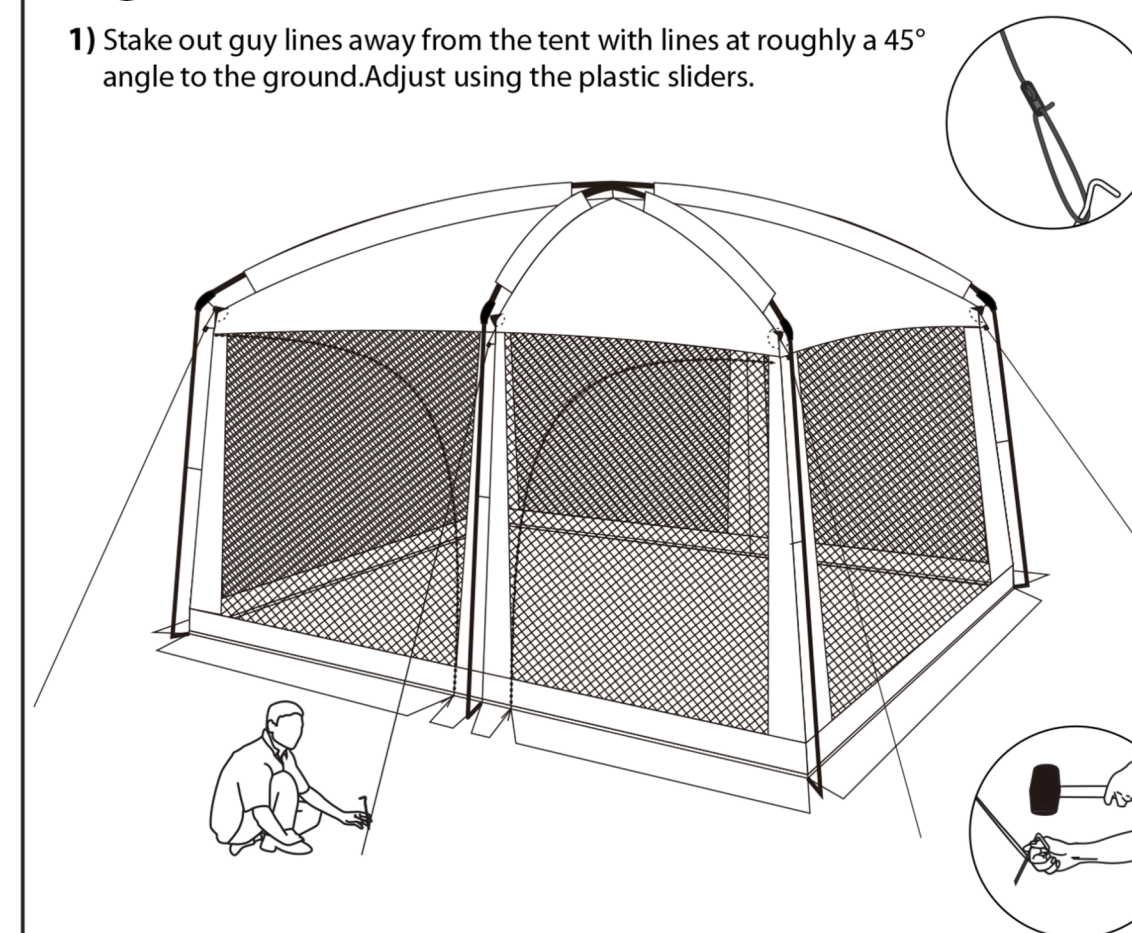


5 : Disassembly

- 1) To take down the tent, disassemble in reverse order.
- 2) Be sure to leave doors unzipped to avoid zipper damage.
- 3) Remove stakes with hammers or stake puller. DO NOT pull on tent.
- 4) Carefully disengage poles from pins. Push poles away from you through the sleeves to minimize risk of damage to tent or poles.
- 5) Keep poles and stakes together in bags provided.

6 : Packing the Tent

- 1) Spread tent flat, distribute evenly.
- 2) Fold into quarters not to exceed the length of pole bag.
- 3) Lay pole bag at opposite end from door. Tightly roll bag, skin and fly forcing air through unzipped door.
- 4) Secure with ties and place in carry bag with stakes and accessories.
- 5) Tent must be clean and dry before storage. Store off concrete floor.

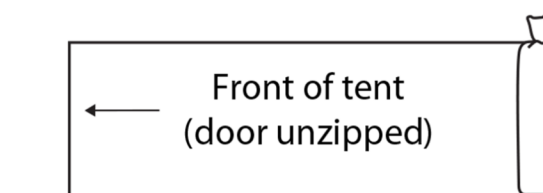

**EVER ADVANCED,
EVER FEARLESS**

Warranty

The EA Screen House Tent is covered by 12-month quality warranty.

Contact Us

Email : info@everadvanced.com Website: www.everadvanced.com

[@everadvanced](https://www.facebook.com/everadvanced)

[@everadvanced](https://www.instagram.com/everadvanced)

Safety Tips:

This recreational item is not intended to be used as a permanent structure this gazebo/screen house has been developed to provide protection from the sun and light rain. Do not use any gas or fire sources under or near this product. This product should be completely disassembled prior to the onset of severe weather such as heavy rain, high winds, lightning, hail, snow, etc.

To avoid permanent damage to product components and to avoid the possibility of any personal injury. Under no circumstances shall this product be used to protect/cover automobiles, marine products or similar valuables. Modifications made by the consumer for extended use, i.e. Permanent fixing to decks and patios and/or failure of the consumer to comply with the prescribed guidelines will void any express or implied warranty.

Important Notes:

- Assemble your tent before camping to become familiar with the assembly.
- Two people are recommended for setup.
- Select a clean, level area for the campsite, free of debris and sharp objects, away from any natural watercourse.
- Use of a ground cloth is recommended to prolong the life of the tent floor and provide additional insulation and moisture protection.
- To prevent damage to the zippers, unzip the doors and windows of the tent prior to disassembly, allowing air to move freely.
- Seam-seal the inside stitched seams of the tent. This will improve weather resistance. Available in sporting goods departments. Discoloration may occur if applied to outside seams.

