

COSTAR WIRELESS DOORBELL

Pebble T300(M508+F11)

(1 Doorbell Chime Receiver + 1 Push Button)

•User Manual•

Please read carefully before using the product


COSTAR WIRELESS DOORBELL

Package Contents


Push Button Device*1
Doorbell Chime Receiver*1
User Manual*1
Double-sided Adhesive Tape*2
Screw Set*1

Features

32 Different Ringtones
4+1 Levels of Adjustable Volume(Including mute)
Memory Function(No need to configure doorbell settings again if unplugged)
Visual LED Indicator
IP44 Dustproof and Waterproof

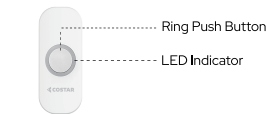

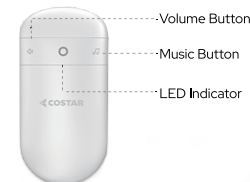

Push Button (F11)




Doorbell Chime Receiver (M508)


How to Install

1.  Remove the battery insulating sheet.

2.  Apply the adhesive tape to affix the push button to your wall

OR

 Use the provided screws to secure it in place.

3.  Plug the doorbell chime receiver into the power socket.

How to Use

Music Setting

Short press the **【↻】** button to switch to the next ringtone. Long press the **【↻】** button to switch the ringtone selection direction.
Press and hold the **【↻】** button of the doorbell chime receiver and plug it into a power socket. When the doorbell chime receiver emits 5 beeps, release the **【↻】** button, and the doorbell chime receiver will return to the first ringtone.

Volume Setting

Short press the **【🔊】** button to set the volume level. When the volume is turned to maximum or muted, the doorbell chime receiver will beep twice. (Tips: After restarting the power, the volume of the doorbell chime receiver is automatically set to the maximum)

Pairing

(Tips: doorbell chime receiver has been paired at the factory and can be used directly.)
If the doorbell chime receiver does not respond after pressing the button, a pairing operation is required. Long press and hold the **【🔊】** button of the doorbell chime receiver until the LED indicator lights up, indicating that it has entered the pairing state. Press the push button and the doorbell chime receiver will emit two beeps. When the LED indicator flashes twice, it means the pairing is successful.

Restore Factory Settings

Press and hold the **【🔊】** button of the doorbell chime receiver, plug it into a power socket and turn it on. When the doorbell chime receiver emits 10 beeps, and the LED white light flashes 10 times, release the **【🔊】** button, and it will restore to the factory settings. The doorbell chime receiver needs to be paired again with a push button before being used.

Warranty

Warranty coverage and limitations:

From the date of purchase, the product enjoys a 12-month warranty for quality issues.

The warranty service is only valid under normal use.

The warranty will be void for improper handling.

The following types of damage are not covered in the warranty:

1. This product's warranty has expired.
2. Dismantling, repairing, or modifying a product without official authorization.
3. Damage caused by force majeure (such as floods, earthquakes, and lightning, etc.).
4. The purchase vouchers (invoices, receipts, etc.) were invalid.
5. Abnormal wear and tear.
6. Issues not related to product quality.

Register Warranty

Scan the QR code to get a warranty.



OR

Send us purchase proof and contact information by any of the following methods:

WhatsApp Number: +919579514004

Mailbox: support@costarcosmos.com

COSTAR WIRELESS DOORBELL

Pebble T300(M508+F11)

(1 Doorbell Chime Receiver + 1 Push Button)

·User Manual·

Please read carefully before using the product