

COSTAR WIRELESS DOORBELL

Pebble T310(M521+F11)

(1 Doorbell Chime Receiver + 1 Push Button)

·User Manual·

Please read carefully before using the product

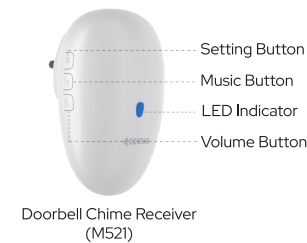
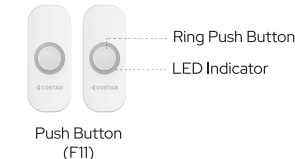
COSTAR WIRELESS DOORBELL

Package Contents




Push Button Device*1
Doorbell Chime Receiver*1
User Manual*1
Double-sided Adhesive Tape*2
Screw Set*1

Features

57 Different Ringtones
4 Levels of Adjustable Volume
Memory Function(No need to configure doorbell settings again if unplugged)
IP44 Dustproof and Waterproof



How to Install

-  Remove the battery insulating sheet.
-  Apply the adhesive tape to affix the push button to your wall
OR
Use the provided screws to secure it in place.
-  Plug the doorbell chime receiver into the power socket.

How to Use

Music Setting

Short press the **【♪】** button to switch to the next ringtone. Long press the **【♪】** button to switch the ringtone selection direction.

Volume Setting

Short press the **【🔊】** button to set the volume level.

Pairing

(Tips: doorbell chime receiver has been paired at the factory and can be used directly.)
If the doorbell chime receiver does not respond after pressing the button, a pairing operation is required. Press and hold the doorbell chime receiver **【🔊】** button for 5 seconds to begin pairing, while the doorbell chime receiver sounds "Di" and the LED indicator is on. Press and hold the push button for 2 seconds, if the doorbell chime receiver sounds "Di" twice and the LED indicator flashes twice, the push button and doorbell chime receiver are paired successfully.
Press and hold any button of the doorbell chime receiver for 1 second or do no operations for 20 seconds to exit the pairing mode.

Restore Factory Settings

Press and hold the **【🔊】** button of the doorbell chime receiver until the continuous beeps cease and the LED light stops flashing., release the **【🔊】** button, and it will restore to the factory settings. The doorbell chime receiver needs to be paired again with a push button before being used.

Warranty

Warranty coverage and limitations:

From the date of purchase, the product enjoys a 12-month warranty for quality issues. The warranty service is only valid under normal use. The warranty will be void for improper handling. The following types of damage are not covered in the warranty:
1. This product's warranty has expired.
2. Dismantling, repairing, or modifying a product without official authorization.
3. Damage caused by force majeure (such as floods, earthquakes, and lightning, etc.).
4. The purchase vouchers (invoices, receipts, etc.) were invalid.
5. Abnormal wear and tear.
6. Issues not related to product quality.

Register Warranty

Scan the QR code to get a warranty.



OR

Send us purchase proof and contact information by any of the following methods:
WhatsApp Number: +919579514004
Mailbox: support@costarcosmos.com