

正面

Mobile Portable TV

Packing List



Screen x1



Base x1



 
Stand x1



AC Power Cable x1



Adapter x1



Remote x1



Cable Outlet Cover x1



HDMI Cable x1



Screwdriver x1




Short Screw x1



Long Screw x4

Need to Know

Button/Interface Function Description:

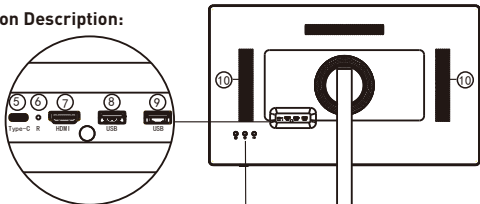

① DC Interface: Connect the power adapter for power supply.

② Power Button: Long press to power on / off.

③ Volume Plus: Adjust to increase volume.

④ Volume Minus: Adjust to decrease volume.

⑤ Type-C Interface: Used for downloading and upgrading.


⑥ Reset: Forces a restart of the device (press the reset button when the device has issues).

⑦ HDMI Interface Input: Supports connection to notebooks, desktop computers, set-top boxes, PS4, Xbox game consoles, etc.

⑧/⑨ USB Interface: Supports USB drives, USB cameras, mice, keyboards, etc.

⑩ Speakers: The audio system has two speakers for playing music.

Need to Know

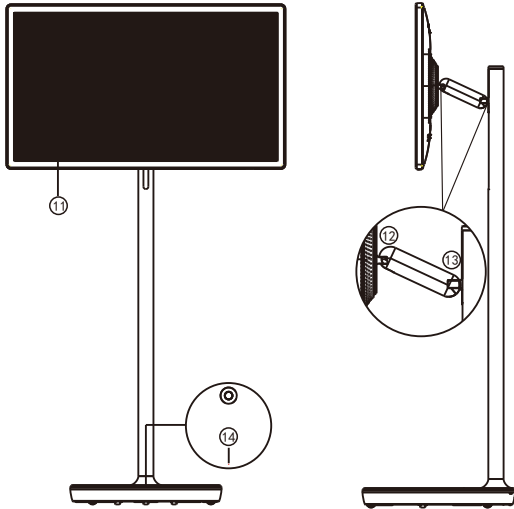

⑪ Display Screen: Touch control functionality for the mobile TV screen.



⑫ Rotation: Supports both landscape and portrait screen orientations, with the ability to rotate the screen left and right.

⑬ Height Adjustment Stand: Adjust the height by up to 20 cm.



⑭ Indicator Light: Indicates the working status of the circuit, with a red light for charging and a green light for a full battery charge.

Installation Steps

1. Open the packaging and carefully remove the vertical pole, base, and display screen.

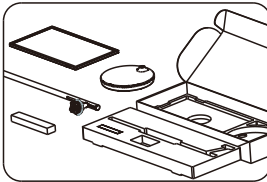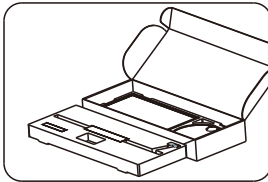


2. Place the base into the designated slot.

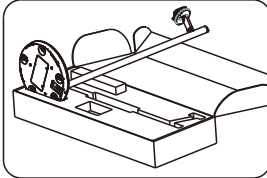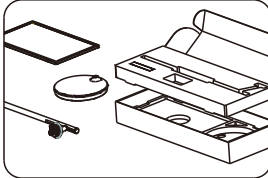


Installation Steps

3. ① Thread the vertical pole power cord through the base.
② Align and insert the vertical pole into the base slot.
③ Plug the vertical pole power cord into the indicated power port.

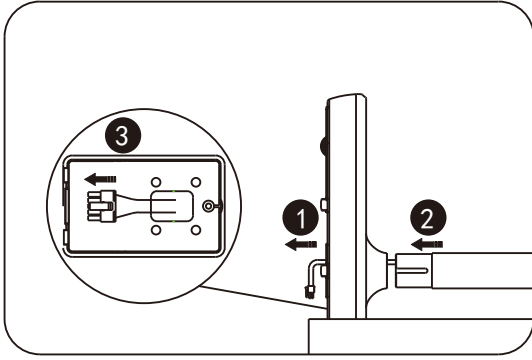


4. ① Secure the four long screws to fix the vertical pole (secure diagonally opposite screws first for stability).
② Close the cover and secure it with the short screw.

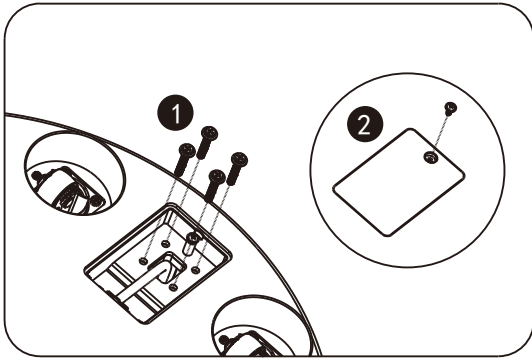


For an enhanced viewing experience, we recommend downloading the **TV version** of the streaming app.

背面

Installation Steps

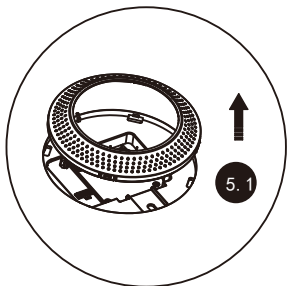


5.1 Remove the round decorative cover from the back of the screen.

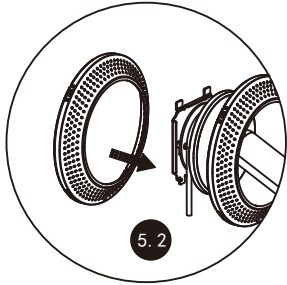


5.2 Slide the round decorative cover over the vertical pole at an angle (place it on the pole first, then install it later).

Installation Steps


6. Tilt the screen upwards and align it with the slot for installation.

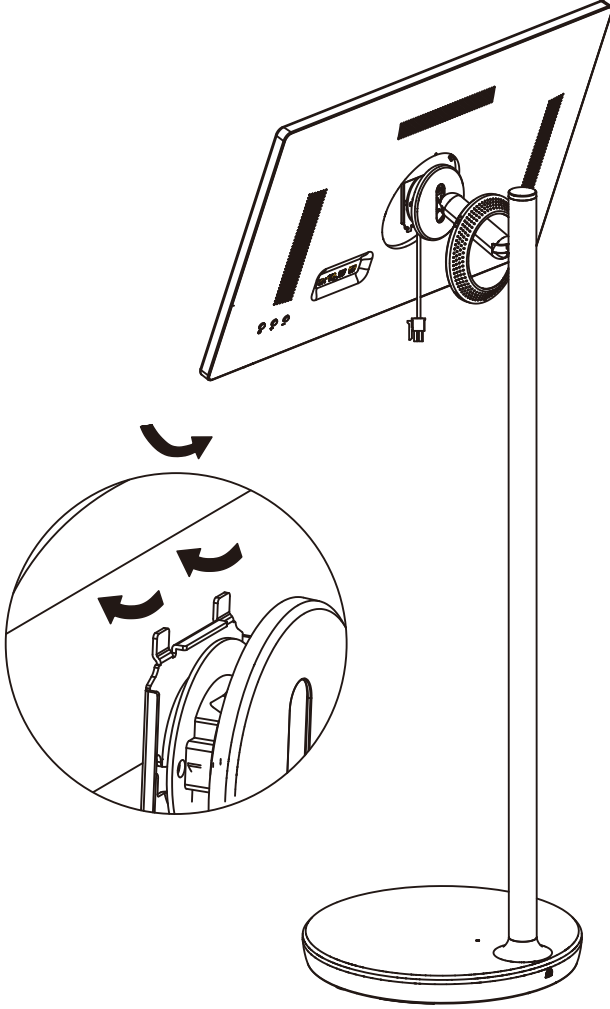


Installation Steps

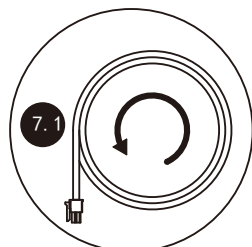

7.1 Wind the power cord counterclockwise.

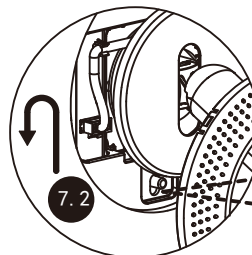

7.2 Secure the power cord and check if the device powers on, as shown in the diagram above.

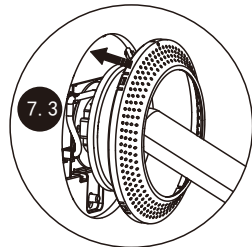

7.3 Align the top slot of the round ring with the top of the screen and press to complete the installation.

During the assembly process, if the latch does not fit properly, you need to press down on the quick-release switch.

For more detailed information, please refer to the user manual.