



RHINO®



TOTE TANK WHEELS


REMOVAL AND INSTALLATION INSTRUCTIONS.

CAREFULLY READ THE FOLLOWING INSTALLATION INFORMATION.

Kit Contains:

Item	Description	Included
1	Wheel Assembly	2
2	Spacer	2
3	Snap Ring*	3
4	Push Nut*	3

*Extra one included.

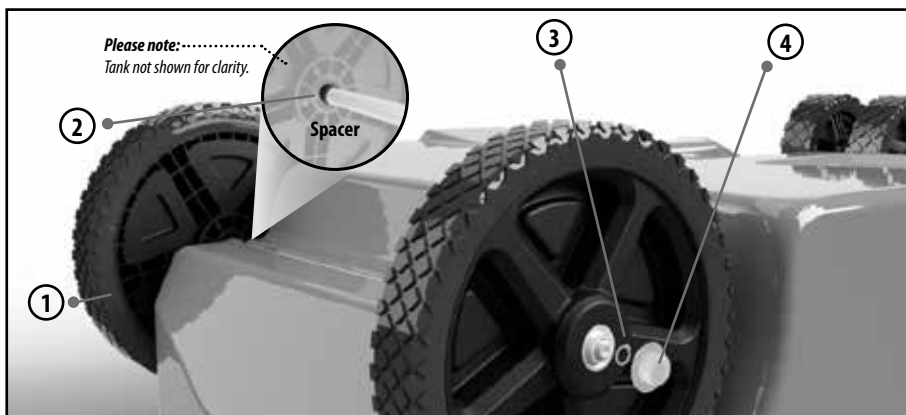

These instructions cover the removal and replacement of the RHINO Tote Tank wheels. Safety glasses should be worn.

Tools needed – large flat-blade screwdriver, hammer, possibly snap ring pliers.

Wheel Removal

Remove push nut by hitting the rim of the push nut next to the locking tab (FIGURE 1). If the axle has a snap ring, pry off with a screwdriver. (FIGURE 2)

Wheel Installation

Step 1:

Install spacer, then wheel, in that order. (FIGURE 3)

Step 2:

Facing the outside edge of the axle, there may be a snap ring groove. Replace snap ring if there is a snap ring groove on axle. If you have snap ring pliers this will be easy, but the task can be done using a flat blade screwdriver. **Note: Please discard previously used snap rings, and replace with new ones provided.**

Step 3:

Center the push nut on the axle and hit squarely with a hammer to engage the push nut until it's seated. Ensure items are secure before towing tank. (FIGURE 4)



FIGURE 1

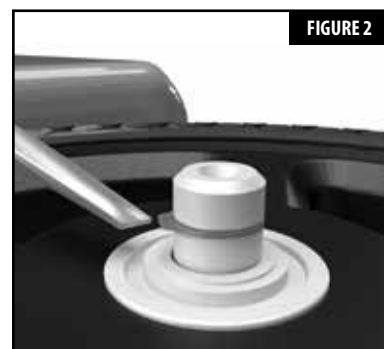


FIGURE 2

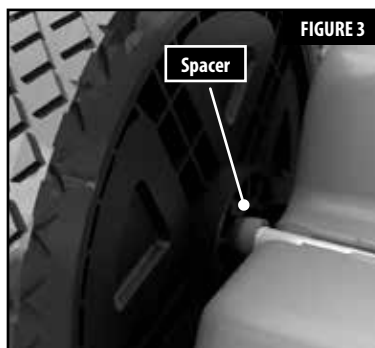


FIGURE 3



FIGURE 4

CAMCO

CAMCO MFG., INC.
121 LANDMARK DRIVE / GREENSBORO, NC 27409 / USA
1-800-334-2004 / WWW.CAMCO.NET

895390 #921