## **CLEANING KIT USE INSTRUCTIONS**

For CK-1100 & CK-1200






MICRO MATIC



Regular cleaning of the faucet, beer line, and keg coupler is extremely important. If this is not performed, the beer will foam. Additionally bacteria, yeast, mold, and beer stone will build up and quickly degrade the quality of draft beer. Routine cleaning is essential to maintain quality and fresh taste.

**Residential Applications:** cleaning should be performed after every keg or at a minimum of every two weeks.

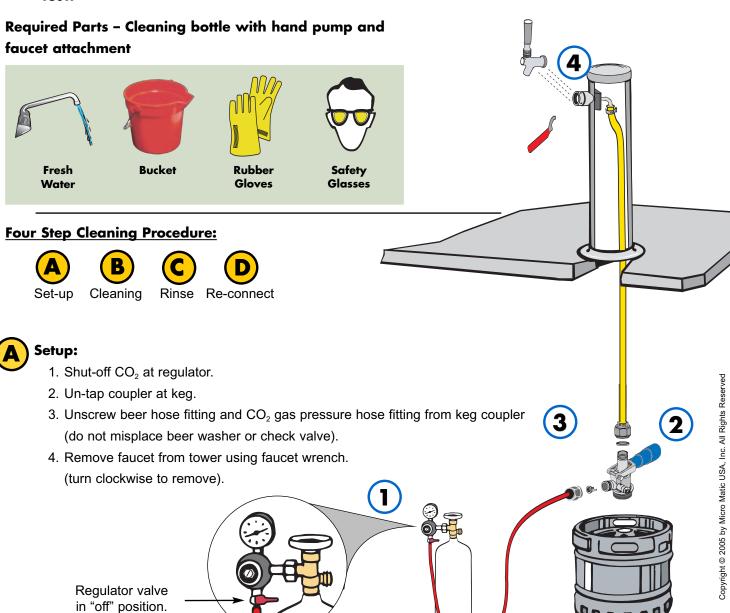

www.MicroMatic.com
Toll Free: 1 (866) 291-5756

60-007/04 06-05


### For CK-1100 & CK-1200





# **Cleaning:**

- 1. Mix warm (not hot) water and detergent per manufacturer's instruction on container.
- 2. Place beer hose, coupler, and faucet in bucket (be sure to remove knob from faucet before placing into bucket).
- 3. Connect cleaning attachment to faucet coupling nut (where faucet was removed).
- 4. Pump cleaning solution through hose into bucket. Allow cleaning solution to soak in hose per chemical manfacturer instructions.

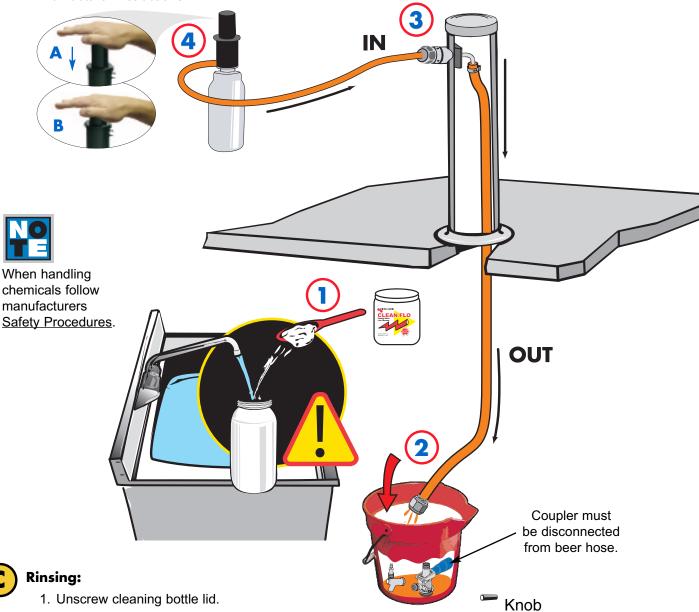



- 1. Unscrew cleaning bottle lid.
- 2. Thoroughly rinse out cleaning bottle and re-fill with cold fresh water.
- 3. Replace bottle lid and pump rinse water to remove cleaning solution from beer line into bucket.
- 4. Continue pumping until all fresh water is pumped through. Disconnect faucet cleaning attachment.
- 5. Dispose of chemical solution and rinse water in accordance with local regulations.
- 6. Rinse bucket before storing.



www.MicroMatic.com

Toll Free: 1 (866) 291-5756

# **CLEANING KIT USE INSTRUCTIONS**

# For CK-1100 & CK-1200 **Re-connect:** 1. Disassemble faucet and keg coupler: thoroughly brush clean. 2. Thoroughly rinse coupler and faucet in fresh water. 3. Reassemble faucet and re-connect turning faucet coupling nut counter-clockwise (make sure sealing gasket is in place). 4. Re-connect beer hose and CO<sub>2</sub> gas hose fittings to keg coupler; (make sure washer and check valve are re-installed). 5. Turn regulator valve to "on" position and re-tap the keg. Regulator valve in "on"

### **Routine Maintenance and Inspection**

position

### **Keg Coupler**

After cleaning it is an excellent opportunity to check the probe o-rings (102-526) and bottom seal (102-521) on the keg coupler are in good condition. Verify the probe o-rings on the keg coupler are properly lubricated (with a food grade lubricant FT101L) to allow the coupler probe to move freely; this prevents wear and tear when the keg coupler is tapped and untapped on the keg.


Faucet


Check the friction washer (4308), coupling washer (4318), and shaft seat (4324) on the faucet are in good condition.



www.MicroMatic.com

Toll Free: 1 (866) 291-5756

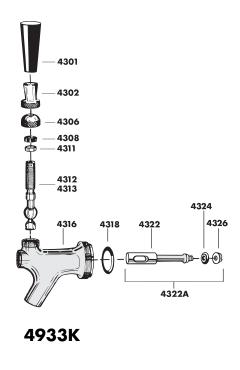

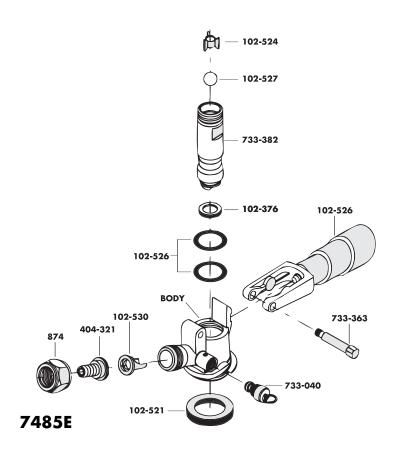

# Please visit us at www.MicroMatic.com

Where you will find information and resources for all your draft dispensing needs.



#### FAQ's

Answers to many commonly asked questions and troubleshooting solutions are presented.



#### **Discussion Forum**

Discuss a wide range of beer dispensing topics in a vibrant online "beer community" where members commercial and private, technical and non-technical find a relaxed platform.

Participation in the Forum is free! Reading the Forum does not require registration. The Forum is moderated by many of Micro Matic's Dispense Institute instructors and knowledgeable staff. Our expert moderators have years of draft system installation experience and look forward to sharing their experience and responding to posted questions. Share an experience, ask a question, and then check back often!

60-007/04 06-05

www.MicroMatic.com

