

Complete Off-Grid Solar Kits
30 to 400 Watts
Installation Manual

Table of Contents

1	Introduction	3
1.1	Safety Precautions	3
1.1.1	Wiring and Connections	3
1.1.2	Environment	3
2	Product Overview	3
2.1	Features	3
2.2	Kit Components	3
2.2.1	Solar Panel	3
2.2.1.1	Monocrystalline – Polycrystalline	4
2.2.2	Solar Charge Controller	4
2.2.2.1	PWM – MPPT	4
2.2.2.2	Models	4
2.2.3	MC4 Connectors	5
2.2.4	MC4 Branch Connectors	5
2.2.5	Solar Panel Cable	5
2.2.6	Solar Panel Mounting Z-Brackets	5
2.2.7	Inverter	5
2.3	Required Tools	6
3	Charge Controller Installation	6
3.1	Mounting	6
3.2	Connect Controller To Battery	6
3.3	Connect Load To Controller (Optional)	7
4	Solar Panel Installation	8
4.1	Location	8
4.2	12 or 24 Volt Battery Charging	8
4.2.1	Layout - Placement	9
4.3	MC4 Connectors	9
4.3.1	MC4 Connector Assembly Instructions	9
4.3.2	MC4 Connector Installation Instructions	9
4.3.3	MC4 Branch Connectors	9
4.4	Interconnect Panels	10
4.5	Connect Solar Panel(s) to Charge Controller	10
4.6	Mounting	11
4.7	Fusing Your System	12
4.8	Grounding	12
5	Panel Placement and Wiring	13
5.1	100W – 12 Volt System	13
5.2	200W (Two 100W Panels) – 12 Volt System	13
5.3	200W (Two 100W Panels) – 24 Volt System	14
5.4	300W (Three 100W Panels) – 12 Volt System	14
5.5	400W (Four 100W Panels) – 12 Volt System	15
5.5.1	1x4 Layout	15
5.5.2	2x2 Layout	15
5.6	400W (Four 100W Panels) – 24 Volt System	16
6	Batteries	16
6.1	Types	16
6.2	Sizing	16
6.3	Wiring Battery Banks	17
7	Troubleshooting and Support	17
7.1	Maintenance	17
7.2	Frequently Asked Questions (FAQ)	18
7.3	Support	19
7.1	Limited Warranty	19
7.2	Restrictions	19
7.3	Warranty Claims & Return Procedures	19
7.4	Disclaimer	20
7.5	Limitation of Liability	20

1 INTRODUCTION

Congratulations on purchasing a high quality renewable energy product where building your own off-grid solar system has never been easier. Although installation is quick and professional using the materials included in your kit, it is important to read this manual and understand all the mechanical and electrical requirements prior to beginning installation. If there are questions or concerns of any sort, please contact us at info@windynation.com for further assistance.

The installer must be familiar and conform to all the safety precautions cited in this manual as well as any local jurisdictions that must be adhered to.

1.1 SAFETY PRECAUTIONS

CAUTION:

Working with and installing electrical equipment is dangerous. Potential hazards include, but are not limited to, electrocution and electrical fires. Always consult a licensed electrician when installing any electrical equipment.

CAUTION:

When solar panels are placed in sunlight or other light sources, they produce electrical energy and a voltage will appear on the output terminals. To avoid a shock hazard, keep the panel covered with a dark material during installation and avoid contact with the output terminals. Before handling the solar panel, test the voltage output of the solar panel with a voltmeter to confirm it is not outputting voltage.

1.1.1 Wiring and Connections

- Wiring size and installation must comply with the National Electrical Code (NEC).
- Observe correct polarity with all inter-connections between the solar panel, charge controller, and the battery. Reverse polarity may cause damage.
- Make sure all wire connections are tight and secure, loose connections may cause sparks and intermittent behavior.

1.1.2 Environment

- Do not perform installation in the presence of any flammable materials.
- Make sure you work in a well-ventilated area
- Use properly insulated tools and remove metal items such as rings, bracelets, and watches.

2 PRODUCT OVERVIEW

Windy Nation offers many varieties of preconfigured off-grid solar kits designed to be modular and easily expandable. Each kit is capable of a wide variety of power production needs from simply trickle charging batteries to fully supporting the power needs of a cabin or RV.

2.1 FEATURES


- Auxiliary power for RV's and boats. Popular with commercial RV retrofitters
- Great for camping or remote cabins. Power devices in remote back country locations
- Easy way to provide power for sheds, light poles and gates without the need for trenching and laying cables
- Two or more panels can provide back-up power for critical appliances like a refrigerator during a power outage.

2.2 KIT COMPONENTS

IMPORTANT: Not all of the components listed are included with each kit. The quantity and exact model of each item will vary depending on the kit ordered.

2.2.1 Solar Panel

The solar panel is a set of solar photovoltaic modules that generate electricity and are available in powers of 30W, 60W, and 100W; with either Monocrystalline or polycrystalline solar cells. For kits sized 200W and larger, the use of multiple 100W panels is utilized.

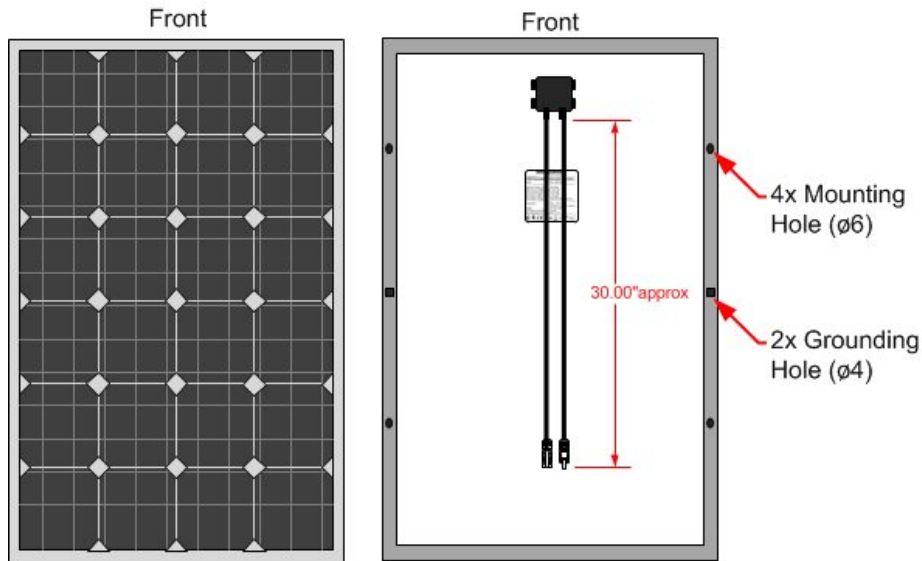

2.2.1.1 Monocrystalline – Polycrystalline

Monocrystalline solar cells are manufactured using a single crystal of silicon and are dark black in color. Polycrystalline, on the other hand, are blue in color and are manufactured by using multiple silicon crystals that are melted and poured into a cast.

2.2.2 Solar Charge Controller

The solar charge controller regulates the battery charge and prevents overcharging of the batteries thus increasing battery performance and lifespan.

2.2.2.1 PWM – MPPT

PWM (Pulse Width Modulation) Controllers use a FET switch to rapidly connect a power source, to a battery. The switch "opens" and "closes" many times a second, to control the charge.

MPPT (Maximum Power Point Tracking) Controllers dynamically convert the power source (PV panels) via an efficient DC-DC conversion process, to a suitable charging voltage for the battery, with very low losses, and about 95% efficiency.

MPPT controllers are more efficient than PWM and will produce roughly 20% more power than PWM by using the V_{mp} of the solar panel (Voltage at Max Power) to create additional power.

2.2.2.2 Models

Windy Nation has several controllers available; please consult the individual manuals for the controller provided with your kit.

	SKU	DESCRIPTION	
1	CHC-1224-10	10A PWM Solar Controller	
2	CHC-1224-30	30A PWM Solar Controller	
3	CHC-TRMX-40	TrakMax 40 MPPT Controller	
4	CHC-LCD-30	P30L 30A LCD Controller	


2.2.3 MC4 Connectors

Single-contact connector used to connect solar panels; See Section 4.3 for additional information



2.2.4 MC4 Branch Connectors

Splitter/Combiner connector used to easily interconnect solar panels

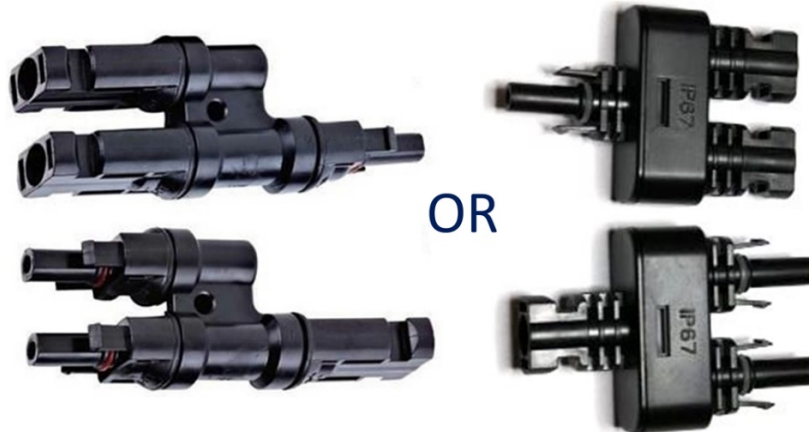

2.2.5 Solar Panel Cable

Assembly of copper electrical conductors available in 12AWG or 10AWG sizes



2.2.6 Solar Panel Mounting Z-Brackets

Mounting brackets used to secure panel to a flat surface. There are four (4) brackets used for each solar panel and include the following fasteners used to secure the bracket to the panel:


- a. 1/4" diameter stainless steel bolts (1/2" long)
- b. Stainless Steel flat washers and lock washers
- c. K-Lock stainless steel nuts (will not vibrate loose)



2.2.7 Inverter

An electronic device that converts the battery DC voltage (Direct Current) provided from the solar panel/battery to an AC voltage (Alternating Current).

The inverter, if included, will connect directly to the 12V battery and will provide three 120VAC outlets used to power typical household items.

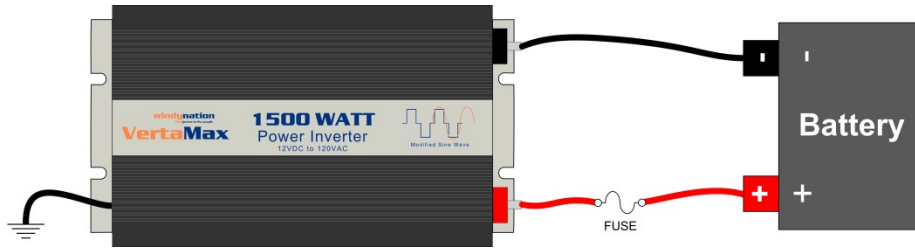

2.3 REQUIRED TOOLS

- Two adjustable wrenches
- Wire crimping tool
- Wire stripper
- Philips head screwdriver
- Bolt to secure Z-Bracket to mounting surface (4x per panel); e.g.: lag bolt, carriage bolt, etc.
- Batteries (Deep Cycle preferred)
- Fuses

3 CHARGE CONTROLLER INSTALLATION

NOTE: The charge controller you receive depends on the kit ordered. Please refer to the controller instructions specific to the model you received.

Insure all terminating connections are clean and tight to prevent arcing and overheating.

The controller must be installed in an area that satisfies all of the following conditions:

1. Dry: Avoid any location where water can contact the controller
2. Cool: Ambient air temperature between 30°F and 105°F (0°C and 40°C)
3. Ventilated: Allow at least 2 in (50 mm) of clearance above and below and at least 1 in (25 mm) on each side for proper air flow.

CAUTION: All electronic circuits may be damaged by static electricity. To minimize the likelihood of electrostatic damage, discharge yourself by touching an electrical ground (e.g.: copper pipe) prior to handling the unit.

3.1 MOUNTING

Mounting is optional but for best results, locate the charge controller as close as possible to the batteries and the batteries and charge controller as close to the panels as practical. The controller can be mounted on a vertical or horizontal surface. Be sure to orient the controller so that any open end of the controller (if applicable) is at the top. This will prevent foreign material from settling into the unit.

Securely fasten the controller to ensure it cannot slide in any direction.

IMPORTANT: Loose connectors result in excessive voltage drop and may cause over heated wires and melted insulation, which can lead to solar system failure and electrical fires.

3.2 CONNECT CONTROLLER TO BATTERY

The wire included in your kit is to be used primarily to connect the solar panels to the controller. It is important to adequately size your battery cable according to your system size, taking into account any future expansion that may be implemented. For additional information regarding wire size, please refer to the Windy Nation website or contact us directly. Two lengths of cable will be required, a positive (+) and a negative (-). It is recommended to identify each cable or use a different colored cable for each connection (eg: black and red). Connect the wire designated as positive (+), usually red, to the BATTERY terminals on the charge controller labeled 'BAT +' and tighten the terminal with a screwdriver. Connect the wire designated as negative (-), usually black, to the BATTERY terminals on the charge controller labeled 'BAT -' and tighten the terminal with a screwdriver.

NOTE: The polarity should be identified on the screw-down terminals of the charge controller; however, the naming convention of the terminals may differ slightly, depending on the model of the solar controller that came with your Kit.


Once the connections are made to the battery terminals on the charge controller, make sure the battery post terminals are clean and free from corrosion.

IMPORTANT: A properly sized fuse needs to be placed in the positive wire connecting the charge controller to the battery; See Section 4.4.4 for assistance.

It is recommended to use a battery cable lug appropriately sized to fit the post of your battery. Connect the remaining loose end of the wire designated as positive (+), to the positive post/terminal of the BATTERY. Connect the remaining loose end of wire designated as negative (-), to the negative post/terminal of the BATTERY.

As soon as the battery is connected to the charge controller, the controller will power automatically and should indicate a battery voltage is applied (eg: green LED).

The diagram below shows the connection for controller to battery

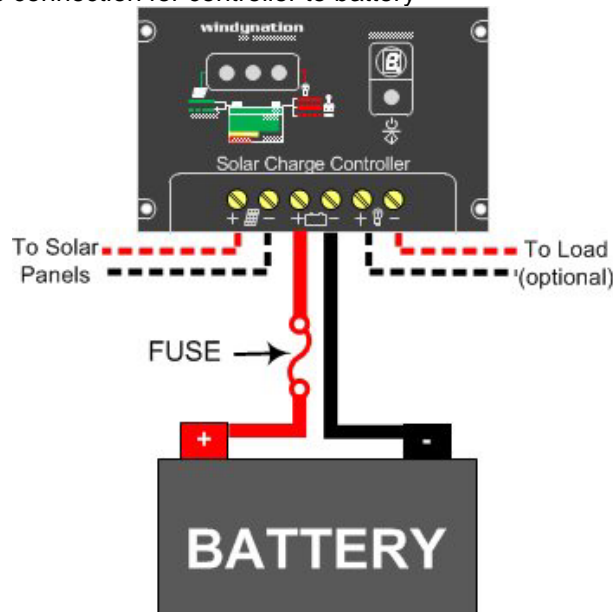

3.3 CONNECT LOAD TO CONTROLLER (OPTIONAL)


The connection of a DC load is optional and most applications will not utilize this connection. It is designed to be used with 12VDC lighting or small 12VDC appliances.

CAUTION: A Power Inverter (if used) should never be connected to the LOAD terminals of the controller. The inverter will be connected directly to the BATTERY posts.

If desired, connect your small 12VDC light or appliance to the LOAD terminals on the controller. For most light bulbs the polarity doesn't matter. However, if your Bulb or small appliance has Positive (+) and Negative (-) leads, make sure to connect them to the corresponding terminals on the charge controller.

IMPORTANT: A properly sized fuse needs to be placed in the positive wire connecting the load (e.g. light, etc) to the charge controller.

The diagram below shows the connection for controller to load

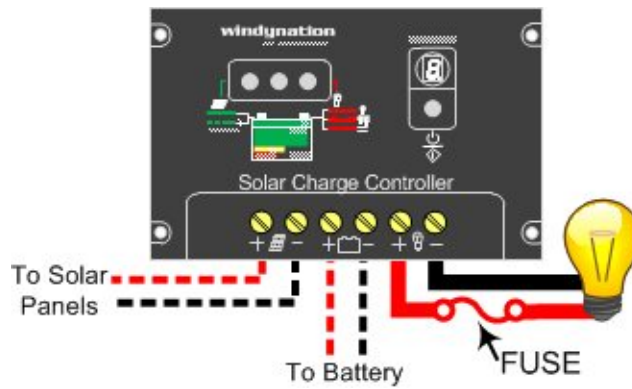


4 SOLAR PANEL INSTALLATION

4.1 LOCATION

Determine a location for the solar panel that is in direct sunlight and clear of any shading by adjacent obstacles such as trees, roof overhangs, etc. Ideally, the panels will be positioned to minimize the wiring distance between the solar panel and the charge controller and will have sufficient space to access the panel for servicing should it be required.

For Northern Hemisphere installations, the solar panels should be mounted at angle facing true south (true north for Southern Hemisphere installations). The mounting angle should be equal to the latitude location of where you are installing the solar panels. For example, the latitude of Miami, Florida, USA is 25 degrees. Therefore, solar panels installed in this area should ideally be facing true south at a tilt angle of 25 degrees.

Due to design constraints in many installations, you will not be able to mount the solar panel facing true south at the ideal tilt angle. In these cases, try to come as close as possible to the ideal mounting configuration as this will maximize the power output from the solar panels.

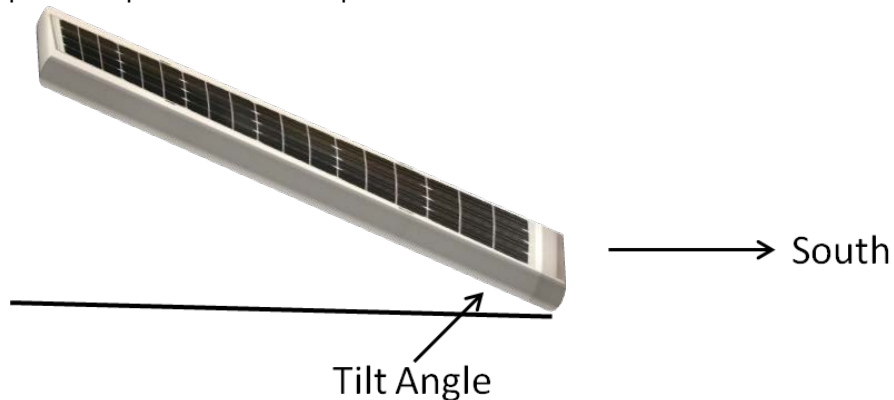

For Northern Hemisphere installations, face the solar panel true south at a tilt angle equal to the geographical latitude of where the solar panel is installed.

4.2 12 OR 24 VOLT BATTERY CHARGING

All of Windy Nation's Complete Off-Grid Solar Kits can be configured for 12 volt battery bank charging. Windy Nation's Complete Off-Grid Solar Kits that contain an even number of solar panels can be configured for 12 or 24 volt battery bank charging. See Table below:

Size of Solar Kit	# Solar Panels Included	Battery Bank Compatibility
100W	One (1)	12 volts
200W	Two (2)	12 or 24 volts
300W	Three (3)	12 volts
400W	Four (4)	12 or 24 volts

Wiring diagram instructions on how to wire the solar panels in each kit for 12 or 24 volt battery charging are shown in [Section 5](#)


4.2.1 Layout - Placement

For systems using more than one panel that will connect together, the 36" connection cable may limit the possible orientation of the inter-connected panels. Proposed orientations are located in [Section 5](#) but user applications may not have the necessary space available to achieve this layout. In these cases, the use of MC4 extension cables may be required to connect panels together. These are available through Windy Nation in multiple lengths to accommodate your installation.

4.3 MC4 CONNECTORS

The output wires from the junction box of the solar panel are terminated with MC4 connectors. The Positive (+) wire is terminated with a MC4 Female Connector (marked "+") and the Negative wire is terminated with a MC4 Male Connector (marked "-").

Windy Nation's MC4 connectors are compatible for use with AWG #10, AWG #12, or AWG #14 wire/cable with an outer insulation diameter between 2.5 and 6.0 mm. The MC4 connectors provide a reliable and water resistant way for conveniently making electrical connections between solar panels and the extension cable.

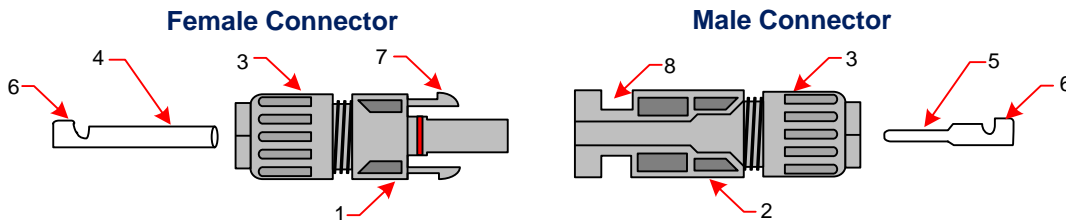

ITEM #	DESCRIPTION
1	Female Insulated Connector Housing
2	Male Insulated Connector Housing
3	Housing Nut with internal rubber bushing/cable gland (seals wire entry)
4	Female Mating Contact
5	Male Mating Contact
6	Wire Crimp Area
7	Locking Tab
8	Locking Slot - Unlock Area (press to release)

4.3.1 MC4 Connector Assembly Instructions

- 1) Strip 1/4" of the insulation from the cable end to be terminated with the MC4 connector using a wire stripper. Be careful not to nick or cut the conductor.
- 2) Insert the bare conductor into the crimping area (Item 6) of the metallic mating contact and crimp using a special purpose crimping tool. If a crimping tool is not available the wire may be soldered into the contact.
- 3) Insert the metallic mating contact with the crimped wire through the Housing Nut and rubber bushing (Item 3) and into the insulated housing, till the metallic pin fits snug into the housing.
- 4) Tighten the Housing Nut (Item 3) onto the connector housing. When the nut is tightened, the internal rubber bush is compressed around the outer jacket of the cable and thus, provides water-tight sealing.

4.3.2 MC4 Connector Installation Instructions


Push the Two Connector pairs together such that the two locking tabs on the MC4 Female Connector (Item 7) align with the two corresponding locking slots on the MC4 Male Connector (Item 8). When the two connectors are coupled, the locking tabs slide into the locking slots and secure.

To uncouple the two connectors, press the ends of the locking tabs (Item 7) as they appear in the open locking slot (Item 8) to release the locking mechanism and pull the connectors apart.

CAUTION: Make sure that no current is flowing when uncoupling is attempted.

4.3.3 MC4 Branch Connectors

MC4 Branch Connectors are used to interconnect solar panels together. There are two different branch connectors, one type accepts two male MC4 connectors on the input side and has a male MC4 connector for its output. The other type accepts two female MC4 connectors and has a female MC4 connector for its output.

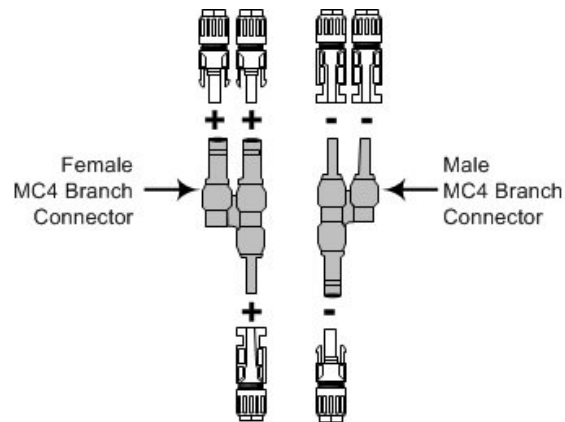


MC4 Branch connectors do NOT require any preparation. The metal female and male pins are pre-installed at the factory inside the MC4 Branch Connectors. This means that the MC4 Branch Connectors can simply be snapped into place.

4.4 INTERCONNECT PANELS

Before you proceed, you must avoid exposing the solar panel to direct sunlight. This will avoid any electrical shock hazard during installation. Make sure that the solar panel/array is covered with an opaque (dark) material to block solar irradiation. **Test the voltage output of the solar panel with a voltmeter to confirm it is not outputting voltage.**

Once you have determined to use 12V or a 24V system and the relative placement of the panels, you must now wire the solar panel(s) together using the wiring diagram and required components shown in [Section 5](#) as a guide. Once this is complete, there will be one PV positive cable and one PV negative cable coming from the solar panel(s).

You will need to make two extension cables (one positive and one negative) using the supplied PV cable and MC4 connector pair. Each cable will need to be long enough to reach the charge controller and will have an MC4 Connector on one end and the other wire end will be stripped approx. 0.2" (5mm) as shown below. Instructions were provided in Sec 4.3.1 on how to assemble the MC4 connectors.

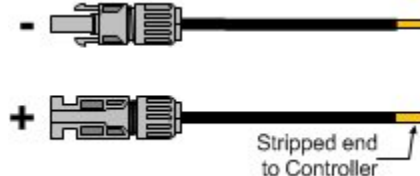

Label or mark the stripped end to identify whether it is Positive (+) or Negative (-) and connect each cable to the corresponding PV positive cable and one PV negative cable coming from the solar panel(s). Make sure the MC4 Connectors are completely connected and the locking tabs are 'snapped' in place as stated in Sec 4.3.2.


4.5 CONNECT SOLAR PANEL(S) TO CHARGE CONTROLLER

IMPORTANT: Do NOT connect the solar panels to the solar charge controller until the solar charge controller has been completely connected to the 12 or 24 volt battery as stated in Sec 3.2.

CAUTION:

High voltages may be present on the solar panel output wiring. Solar panels produce electricity when exposed to light. Use caution and avoid touching any conductors in the system circuit to avoid electric shock.

Insert the stripped ends of the extension cable from Sec 4.4 into the appropriate terminal on the charge controller. Positive PV lead is connected to the positive terminal (marked "PV +") of the charge controller and the negative PV lead is connected to the negative terminal (marked "PV -") of the charge controller.

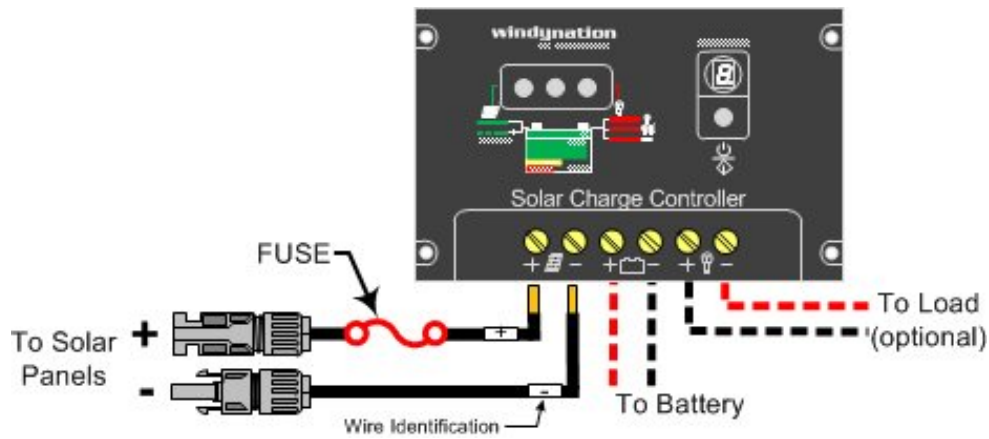

Use a Philips screwdriver to tighten the terminals on the charge controller and secure the connections.

Once you connect the solar extension cables into the charge controller PV terminals, you may remove the covering of the solar panels. The controller should indicate a charging solar panel if there is enough sunlight.


IMPORTANT: A properly sized fuse needs to be placed in the positive wire connecting the solar panels to the charge controller.

4.6 MOUNTING



You may now secure the solar panels to their permanent structure. The solar panels should be mounted to a flat surface that is strong enough to handle the weight bearing load of the solar panels. If the panels will be mounted on a roof, make sure the material is strong enough to provide support to the solar panel including wind loading. To minimize wind loading effects in an RV or mobile application, place the panel's longest edge parallel with the direction of wind travel.

Use the included Z-Brackets and fasteners (four Z-Brackets per solar panel) to attach the solar panel to the flat mounting surface.

2. Attach the Z-Brackets to the four oval shaped holes on the backside of the solar panel using the included fasteners.

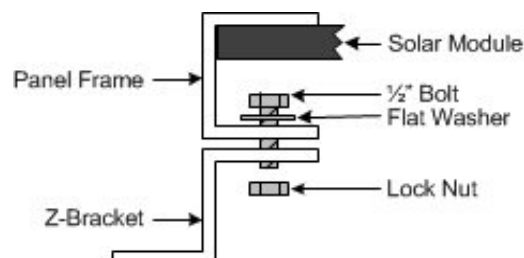

3. Secure the solar panel to the mounting surface by bolting the four Z-brackets to the mounting surface. Note: The bolt to secure the Z-Bracket to the mounting surface is not included in this kit. This is because the bolt type (lag bolt, carriage bolt, etc) and bolt length will depend on the mounting surface type (metal, wood, and fiberglass) and thickness; See image below.

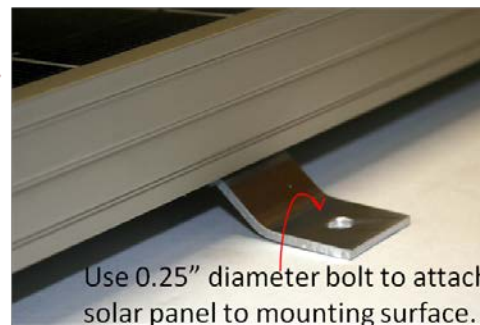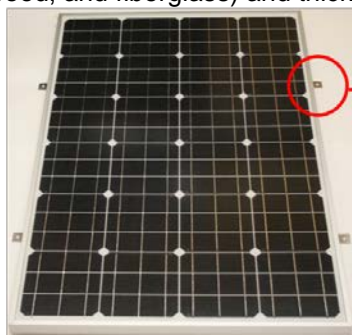


4.7 FUSING YOUR SYSTEM

It is necessary to add fuses or circuit breakers to the Complete Off-Grid Solar Panel Kits. While the systems will function without fuses or circuit breakers, fusing protects the system from accidental short circuits, power surges, and accidental incorrect wiring. An ATC fuse can be used (available at auto parts stores) or a circuit breaker can be purchased at most hardware stores. The table below shows the recommended fuse/breaker size for each system based on 12 or 24 volt configurations.

Solar Kit Size	12 Volt System Breaker Size	24 Volt System Breaker Size
100W	10 Amps	N/A
200W	20 Amps	10 Amps
300W	30 Amps	N/A
400W	40 Amps	20 Amps

The figure below shows where the fuses or circuit breakers should be placed.

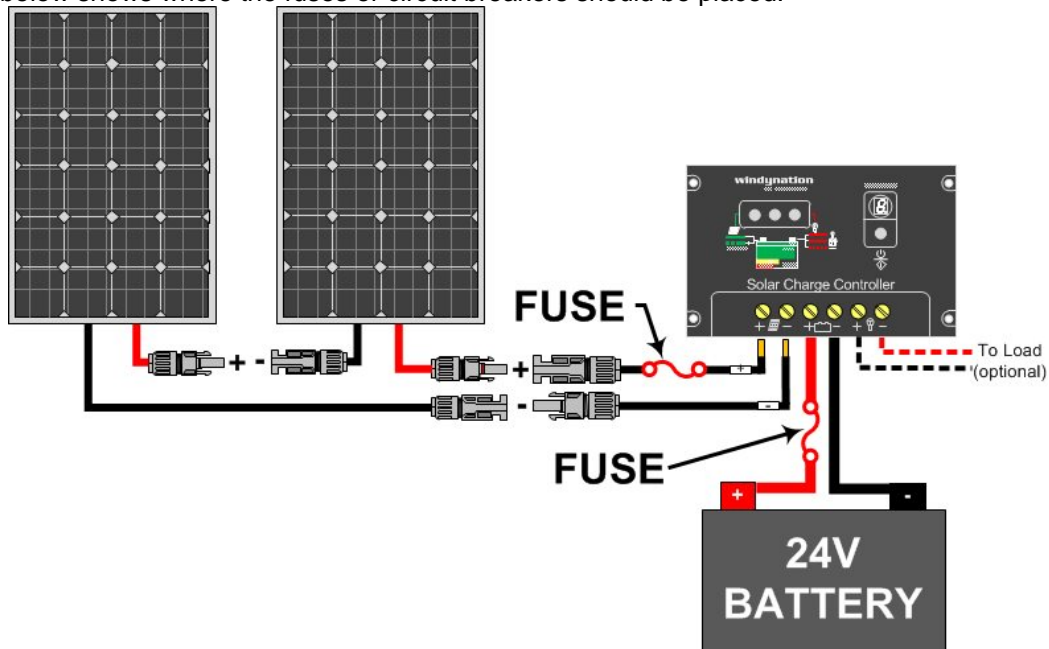


Wiring diagram example of two 100 Watt solar panels wired for 24 volt battery charging showing the fuse/breaker locations.

4.8 GROUNDING


Although not required for low voltage, the panel can be grounded by connecting a conductive wire the frame.

5 PANEL PLACEMENT AND WIRING


5.1 100W – 12 VOLT SYSTEM

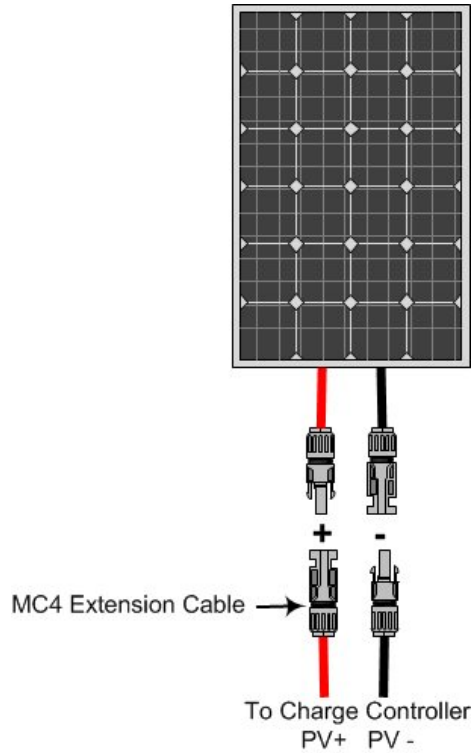


5.2 200W (TWO 100W PANELS) – 12 VOLT SYSTEM

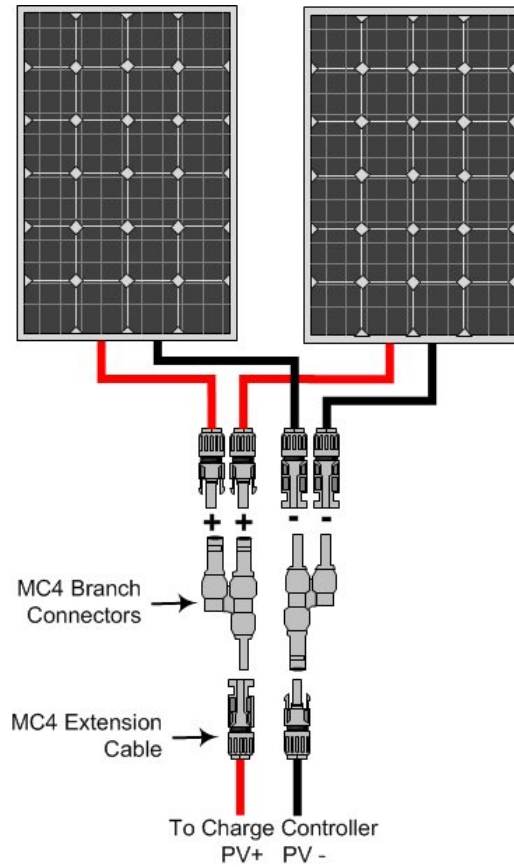

5.3 200W (TWO 100W PANELS) – 24 VOLT SYSTEM

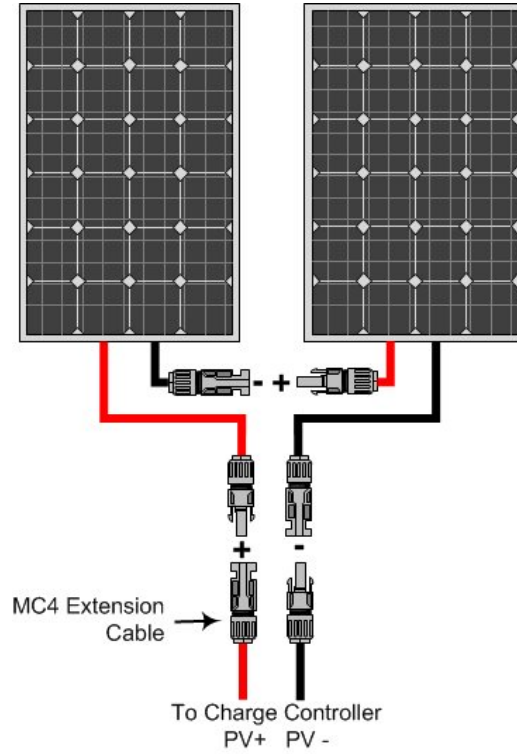


5.4 300W (THREE 100W PANELS) – 12 VOLT SYSTEM

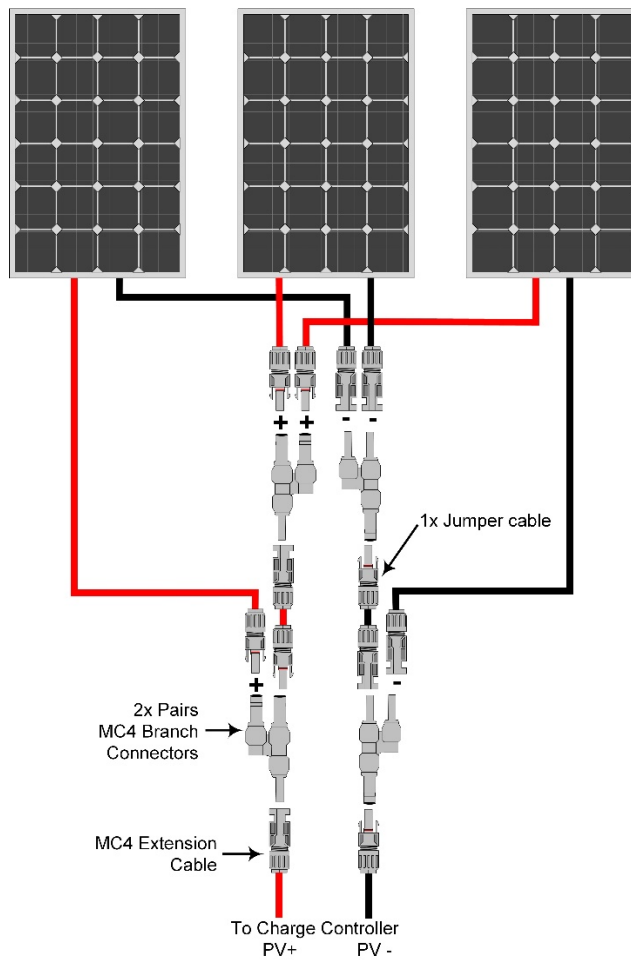


5.5 400W (FOUR 100W PANELS) – 12 VOLT SYSTEM


5.5.1 1x4 Layout

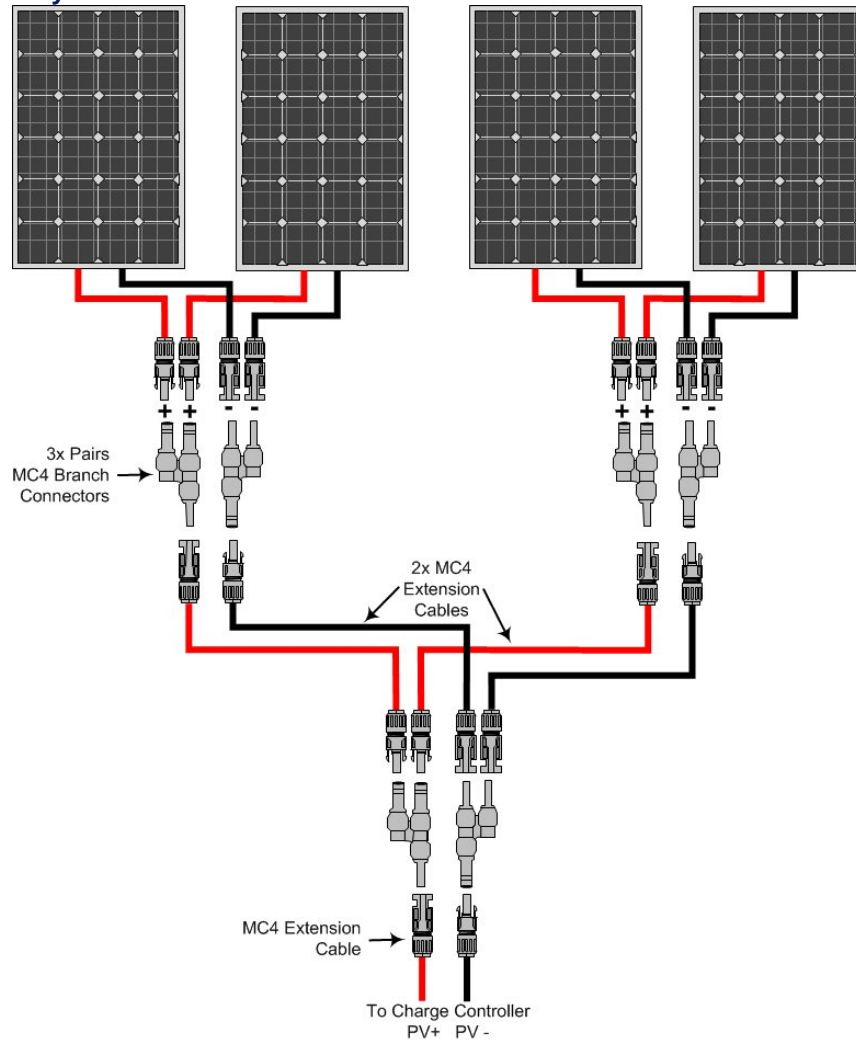

5.5.2 2x2 Layout

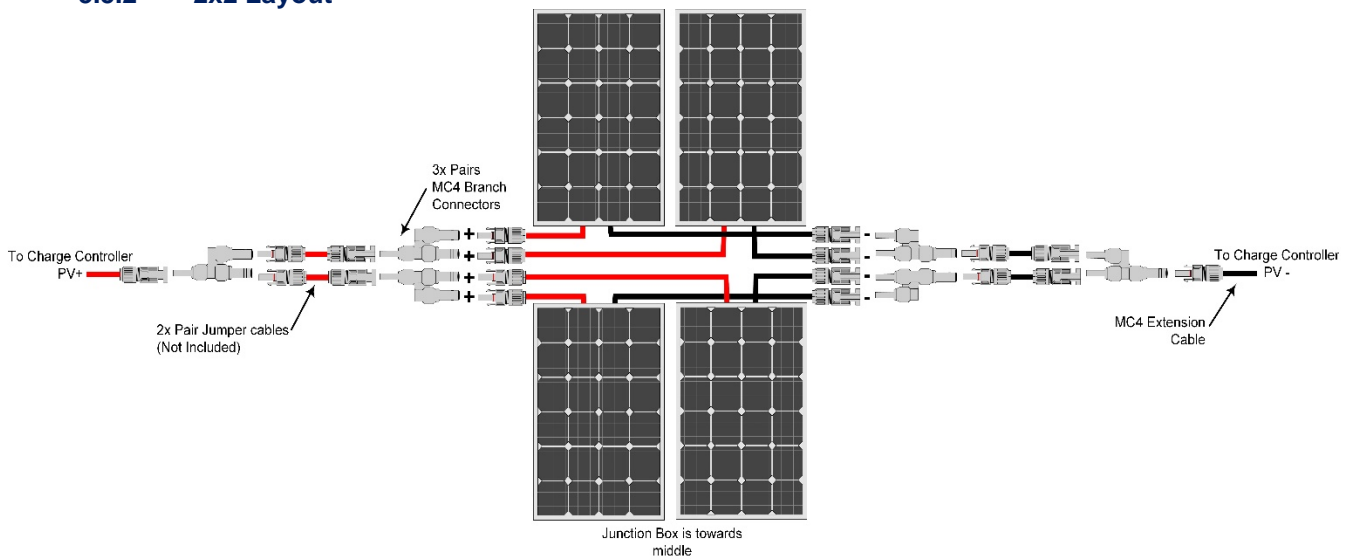

5.6 400W (FOUR 100W PANELS) – 24 VOLT SYSTEM

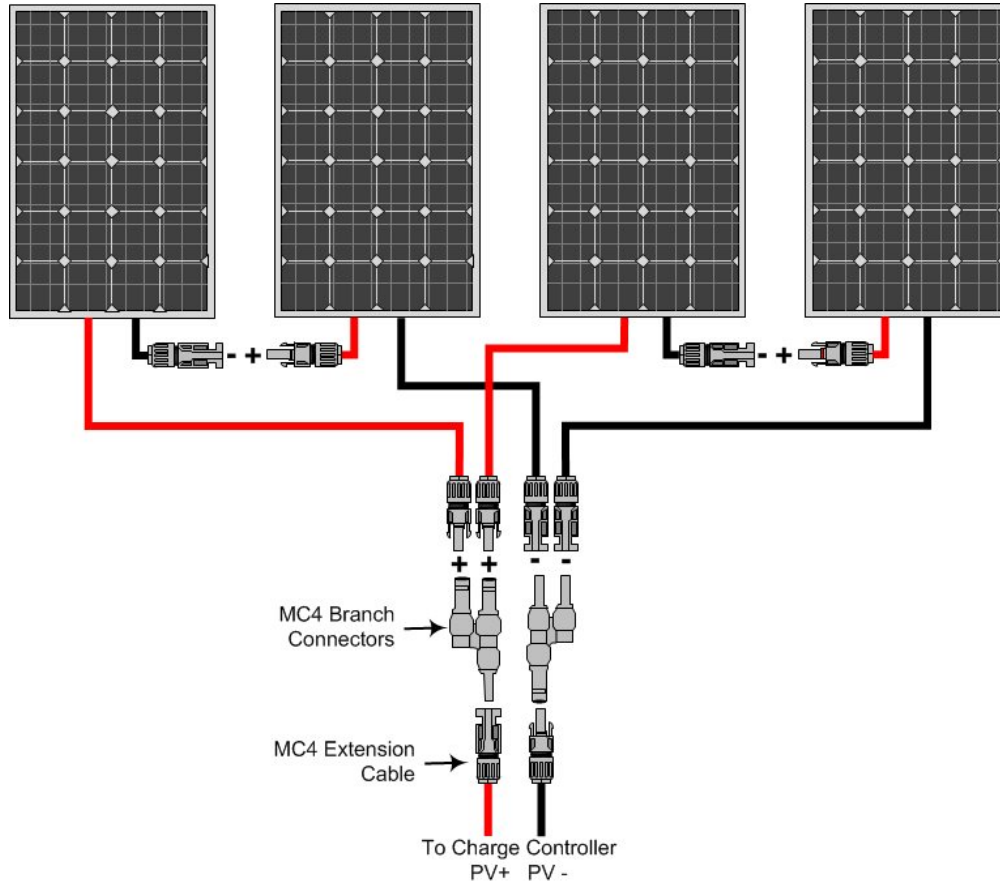

6 BATTERIES

The battery is a critical component in your renewable energy system to store the power generated by your solar panels and provide a relatively constant source of power when the grid is down, or during periods when your photovoltaic system is not producing power. Although batteries are not one hundred percent efficient, they are predictable and stable enough for reliable long-term service.

Windy Nation recommends Deep Cycle lead-acid batteries and discourages the use of car or marine batteries. This is because car and marine batteries are designed to give a large burst of energy when starting a vehicle and are not made for deep discharges. However, golf cart batteries are a less expensive acceptable alternative.

6.1 TYPES

There are three main types of batteries that are commonly used in renewable energy systems, each with their own advantages and disadvantages.

1. Flooded or “wet” batteries are the most cost efficient and the most widely used batteries in photovoltaic applications. They require regular maintenance and need to be used in a vented location.
2. Gel Cell uses a silica additive in its electrolyte solution that causes it to stiffen or gel, eliminating some of the issues with venting and spillage.
3. Absorbed Glass Mat (AGM) construction method suspends the electrolyte in close proximity with the plate’s active material.

Gel Cell and AGM batteries are both sealed, requiring virtually no maintenance. They are more suitable for remote applications where regular maintenance is difficult, or enclosed locations where venting is an issue.

6.2 SIZING

All deep cycle batteries are classified and rated in amp-hours. Amp-hours is the term used to describe a standardized rate of discharge, measuring current relative to time. It is calculated by multiplying amps and


hours. The generally accepted rating time period for most manufacturers is 20 hours. This means that the battery will provide the rated amperage for about 20 hours until it is completely discharged.

To determine the number or charge size of batteries you need, you must first determine how much energy storage you need in Watt-hours (Wh). If you are connected to the utility grid, you can use your monthly utility bill to calculate your average energy usage or you can multiply the wattage of the appliances you use (or intend to use) by the number of hours you use them in a day. Because Watts = Amps x Volts, and you want to know the number of Amp-hours, you would divide the number of Wh by the voltage of your system.

As an example: you calculate your usage to be 1,000 watt-hours (or 1 kWh) per day and your system is on a 12-volt battery bank, then you need 83 amp-hours of useful storage (1000/12). However, lead-acid batteries cannot be fully discharged so the battery bank should be double the useful storage capacity. For this example, your battery bank should be 166Ah or larger.

6.3 WIRING BATTERY BANKS

Batteries can be wired together and configured in ‘banks’ to achieve the desired battery bank voltage, such as 12V or 24V, or to achieve the relevant size for your system needs. This can be done with series, parallel, or series/parallel connections as shown below.

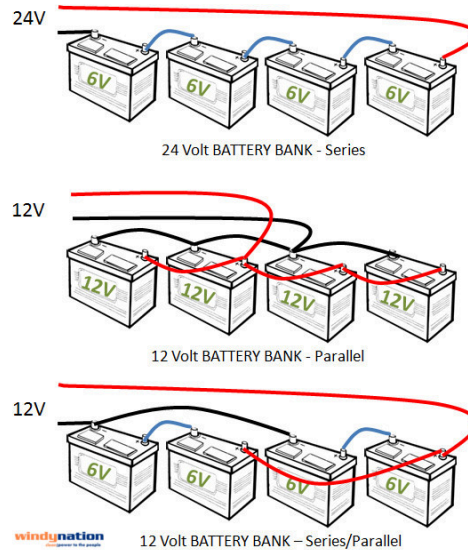

7 TROUBLESHOOTING AND SUPPORT

Problem	Possible Remedies
There is no current or voltage produced by the solar panel(s)	(1) It is too dark outside for the solar panels to produce power or the solar panel(s) are in the shade. (2) Check for loose, broken or corroded connections in the solar panel cable. (3) Check fuses/breakers.
The charge controller is not working. The charge controller is not turning “on”.	(1) Check for loose, broken or corroded connections in the cables between the charge controller and battery bank. (2) Check fuses/breakers. (3) Verify battery voltage is sufficient to power up the charge controller.
Everything is hooked up correctly. The sun is shining directly onto the solar panels but no charge is going to the batteries.	Check the voltage of the battery bank. The battery bank is most likely fully charged and the solar charge controller has disconnected the solar panels from the battery. The solar charge controller will reconnect the solar panels to the battery bank when it once again requires charging.
My equipment is connected correctly but I’m barely getting any current,	Check the voltage of your battery bank. If it is over 13V the charge controller may be reducing the flow to prevent over charging the battery. This means your system is working perfectly. If the battery voltage is low, the battery may be damaged.

7.1 MAINTENANCE

The following maintenance is recommended to ensure optimum performance and longevity of the solar system:

- Clean the glass surface of the solar panel when necessary. Always use water and a soft sponge or cloth for cleaning. A mild, non-abrasive cleaning agent can be used to remove dirt.
- Check the electrical and mechanical connections every six months to verify that they are clean, secure and undamaged.
- Inspect the solar panels and make sure the surfaces are free from dust, dirt, and other debris; clean with a wet cloth or glass cleaner if necessary.
- Check to make sure all structural components, mechanical fasteners, and electrical connections are secure, clean, and corrosion-free.
- Check and maintain the battery electrolyte levels at regular intervals as per the battery manufacturer's recommendations if flooded wet cell lead acid batteries are used.
- Check and replace damaged components if necessary.

7.2 FREQUENTLY ASKED QUESTIONS (FAQ)

1. What size battery should I use?

The battery size depends on how much power storage your system needs regardless of how much generation capacity you have. You can have ten 100W solar panels charging a 50Ah battery or you could have one 100W panel charging 1000Ah of batteries. The more panels, the faster the batteries will charge and when the battery bank is fully charged the charge controller will prevent over charging.

Each 100 Watt solar panel is capable of charging up to a 125 amp hour 12 volt battery under normal conditions. Two 100 Watt solar panels wired for 24 volt battery charging are capable of charging up to a 125 amp hour 24 volt battery bank.

2. What size inverter should I use with my solar panels?

In an off-grid battery backup system, the inverter is connected to a battery bank and the panels feed power into the battery bank through a charge controller. Since the inverter isn't directly connected to the panels, you can use any size inverter you want as long as it is compatible with your battery bank and the devices you plan to power. You can have 10kW of solar panels in the same system as a 450W inverter or you could have one 100W panel in the same system as a 7kW inverter. The size of the inverter just limits the size of the devices that your system can power, which affects how quickly the battery bank is drained. Inverter size has nothing to do with panel count.

Inverter size has almost nothing to do with the power output of the solar panels. The DC to AC inverter is connected directly to the battery and, therefore, is powered by the battery bank (the solar panels charge the battery). Any size inverter can be connected to the battery bank as long as the battery bank is suitably sized for the inverter.

You could have 1000 Watts of solar connected to your battery bank and only use a 100 Watt inverter. Or you could have only 100 Watts of solar connected to the battery bank and have a 1000 Watt inverter.

Inverter size depends on the power requirements of the loads you will run. For example, if you are only going to use a 100 Watt light bulb, then a 150 Watt inverter will easily provide the power. But, if you want to run a 1500 Watt vacuum cleaner, then you should get a 2000 Watt inverter.

3. Are the solar panels included in my kit 12 volt, 18 volt, or 24 volt solar panels?

Without going into detail, the Maximum Power Voltage (abbreviated V_{pm}) of a solar panel should be rated at about 1.5 times the nominal battery voltage. For example, a solar panel used for 12 volt battery charging needs to have a V_{pm} of about 18 ($1.5 \times 12 = 18$).

The Windy Nation 100 Watt Solar Panels included in these kits have a V_{pm} of 18. Therefore, these solar panels are typically referred to in the solar industry as "12 volt solar panels" because they are designed for 12 volt battery bank charging.

A solar panel designed for 24 volt battery bank charging needs to have a V_{pm} of about 36 ($24 \times 1.5 = 36$). When two solar panels with a V_{pm} of 18 are wired in series, the two V_{pm} 's of each solar panel add together. Therefore, two Windy Nation 100 Watt Solar Panels wired in series have a V_{pm} of 36. The 24 volt wiring diagrams shown in Section 5 show how to wire two solar panels in series for 24 volt battery charging. Therefore, we can say that two Windy Nation 100 Watt Solar Panels wired in series is a "24 volt solar panel".

7.3 SUPPORT

If you are experiencing technical problems and cannot find a solution in this manual, please contact Windy Nation Inc. for further assistance.

- Call: (805) 323-6445
- Email: info@windynation.com
- Write: 1082 Front Street, Unit B, Ventura, CA 93001

For challenging issues or to just ask a question, consider using our FREE Community Forums! Consult our community of DIYers for fast answers to all your questions.

Post on our Forums: <http://www.windynation.com/community/>

7.1 LIMITED WARRANTY

Windy Nation warrants that Solar Panel Off-Grid Kit (the “Product”), will be free from manufacturing defects in materials and workmanship under normal authorized use consistent with product instructions for a period of one (1) year from the date the original purchaser (“Customer”) receives the Product (the “Warranty Period”). This warranty extends only to the original purchaser. The Customer’s sole and exclusive remedy and the entire liability of Windy Nation, its suppliers and affiliates for breach of the warranty is, at Windy Nation’s option, either (i) to replace the Product (or defective component part(s)) with a new or reconditioned Product (or component part(s)); (ii) to repair the reported problem; or (iii) to refund the purchase price of the Product. Repaired or replaced products are warranted for the remainder of the original warranty period only. No employee, agent, dealer or other person is authorized to give any warranties on behalf of Windy Nation not expressly set forth in this limited warranty.

7.2 RESTRICTIONS

No warranty will apply if the Product (i) has been altered or modified except by Windy Nation; (ii) has not been installed, operated, repaired, or maintained in accordance with instructions supplied by Windy Nation; (iii) has been subjected to abnormal physical, thermal or electrical stress, misuse, negligence, or accident. If Windy Nation determines that the problem with the Product is not due to a manufacturing defect in Windy Nation’s workmanship or materials, or otherwise does not qualify for warranty repair, then the Customer will be responsible for the costs of all necessary repairs and expenses incurred by Windy Nation.

7.3 WARRANTY CLAIMS & RETURN PROCEDURES

To be eligible for service under this warranty, the Customer must submit a service request within the Warranty Period by contacting Windy Nation in writing or via telephone and obtaining a Returned Materials Authorization (“RMA”) number. This RMA must be obtained before returning any product under this warranty. Notification must include a description of the alleged defect, the manner in which the Product was used, the serial number, and the original purchase date in addition to the name, address, and telephone number of the Customer. Within five (5) business days of the date of notification, Windy Nation will provide the Customer with an RMA number and the location to which the Customer must return the defective Product. Any Product returned for warranty service shall be shipped at the expense and risk of the Customer. The Customer must return the entire Product kit (or, if authorized by Windy Nation, the defective component parts), within fifteen (15) days after issuance of the RMA number. Windy Nation will be under no obligation to accept any returned Product that does not have a valid RMA number. Customer’s failure to return the Product within fifteen (15) days of its receipt of an RMA number may result in cancellation of the RMA. All parts that Windy Nation replaces shall become Windy

Nation's property on the date Windy Nation ships the repaired Product or part back to the Customer. Windy Nation will use all reasonable efforts within thirty (30) days of receipt of the defective Product to repair or replace such Product. If a warranty claim is invalid for any reason, the Customer will be charged at Windy Nation's then-current rates for services performed and will be charged for all necessary repairs and expense incurred by Windy Nation. If Windy Nation determines that a warranty claim is valid, it will ship the repaired or replaced Product to Customer at Windy Nation's cost.

7.4 DISCLAIMER

Windy Nation Inc. ("Windy Nation") is not assembling the Complete Solar Panel Off-Grid Kit, or any other product offered by Windy Nation. Windy Nation, and its directors, officers, and employees disclaim, and by purchasing a Windy Nation product you accept all liability and responsibility for damage to property, injury, or death arising out of or related to the use or misuse of any product offered by Windy Nation.

EXCEPT FOR THE EXPRESS LIMITED WARRANTY SET FORTH IN THE PREVIOUS PARAGRAPH, WINDY NATION DISCLAIMS ALL WARRANTIES, EXPRESS, IMPLIED AND STATUTORY INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ANY PRODUCTS PROVIDED BY WINDY NATION. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY WINDY NATION, ITS DEALERS, DISTRIBUTORS, AGENTS OR EMPLOYEES SHALL IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. WINDY NATION DOES NOT WARRANT THAT THE QUALITY OR PERFORMANCE OF THE PRODUCTS WILL MEET YOUR REQUIREMENTS OR THAT YOU WILL BE ABLE TO ACHIEVE ANY PARTICULAR RESULTS FROM USE OR MODIFICATION OF THE PRODUCTS. Some jurisdictions do not allow the limitation or exclusion of implied warranties or how long an implied warranty may last, so the above limitations may not apply to you. In any such jurisdiction, the warranty shall be limited to the minimum warranty and period required by law.

WINDY NATION EXPRESSLY DISCLAIMS ALL LIABILITY FOR BODILY INJURIES OR DEATH THAT MAY OCCUR, DIRECTLY OR INDIRECTLY, BY USE OF THE PRODUCT BY ANY PERSON.

7.5 LIMITATION OF LIABILITY

UNDER NO CIRCUMSTANCES WILL WINDY NATION OR ITS AFFILIATES OR SUPPLIERS BE LIABLE OR RESPONSIBLE FOR ANY LOSS OF USE, INTERRUPTION OF BUSINESS, LOST PROFITS, LOST DATA, OR INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND REGARDLESS OF THE FORM OF ACTION, WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE, EVEN IF WINDY NATION OR ITS AFFILIATE OR SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you. Neither Windy Nation nor its affiliates or suppliers will be held liable or responsible for any damage or loss to any items or products connected to, powered by or otherwise attached to the Product. The total cumulative liability to Customer, from all causes of action and all theories of liability, will be limited to and will not exceed the purchase price of the Product paid by Customer. This warranty gives the Customer specific legal rights and the Customer may also have other legal rights that vary from state to state.