

Firmware update

If there is a new version of firmware published from the ENTINA website or wiki website [X40 Firmware Update](#), you can download it to the TF card. The file type is .wfm and name: flash.



Go through with 'Printer Setting' – 'Update'



Click update it will update firmware automatically.

Please restore the factory settings after the firmware update.

Edit

UI Update

1. If there is a new version of UI published from the ENTINA website or wiki website [X40 Firmware Update](#), you can download it to the TF card.

2. Download these two files:



3.Format your TF card with FAT32 4096 version.

格式化 U 盘 (I:) ×

容量(P):
3.68 GB

文件系统(F)
FAT32 (默认)

分配单元大小(A)
4096 字节

还原设备的默认值(D)

卷标(L)


格式化选项(O)
 快速格式化(Q)

开始(S) 关闭(C)

4.Copy these two files into TF card root directory

 DWIN_SET	2020/8/27 18:25
 WEEDOU	2020/8/27 18:39

5. When the printer is off, insert the TF card into the card slot at the back of the display screen, then power on, and the firmware upgrade interface will appear on the display screen.

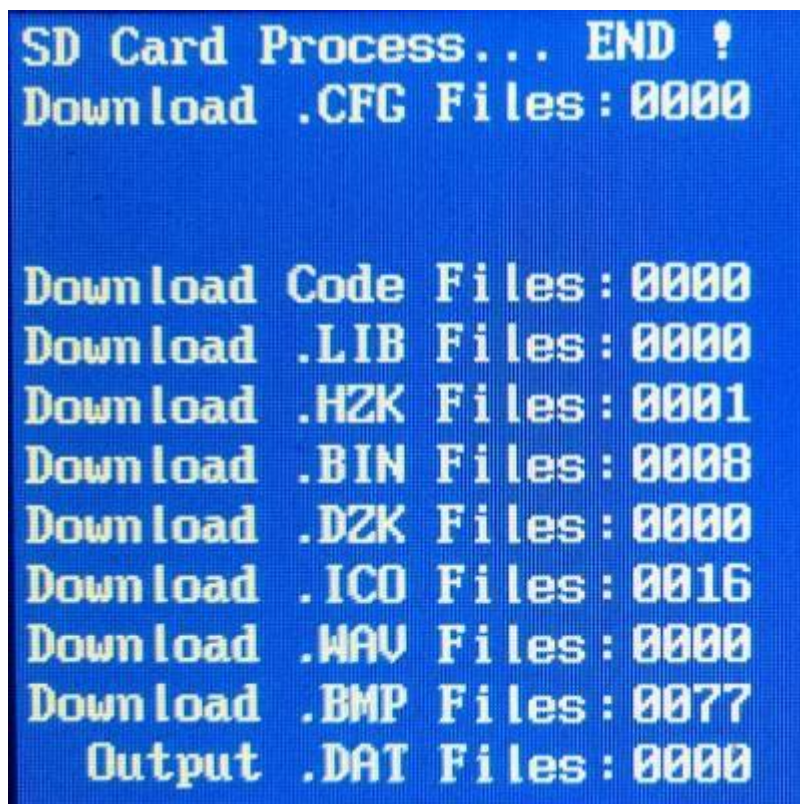

Wait about 1 minute, SD Card Process is displayed on the screen. END! After that, the upgrade is complete. Turn off the power and remove the TF card.

If the following picture appears on the screen after the power is on, turn off the power and power on again, the upgrade interface shown in the image above will appear.

