

## How to update firmware

**Step1:** Download the firmware you need to update.

Firmware ←

- How to update firmware
- WiFi firmware
- machine firmware
- Motherboard motor firmware

**Step 2:** Rename the name of the firmware file you downloaded.

TINA2BKWIFI\_V1.4.0\_TF → "flash"

TINA2S\_22ETV6\_V1.4.3 → " wifi "



**Step 3 :** Save them to TF card. Insert the TF card into the 3D printer

**Step 4 :** Turn on the 3D printer, click "Control" - "Firmware Update" .



**Step5 :** Click "control" - "WififirmwareUpdate" ,and restart.

