

Set Wi-Fi for the printer with Wiibuilder(Windows)



You can also use the Wiibuilder to set the IP for your printer.

Notice:The device does not support 5G network.


Steps are as below:

Step1: After the computer is connected to the network, open the Wiibuilder.

Step2: Click “ WL AN Connection ” , click “ WiFi Profile ”

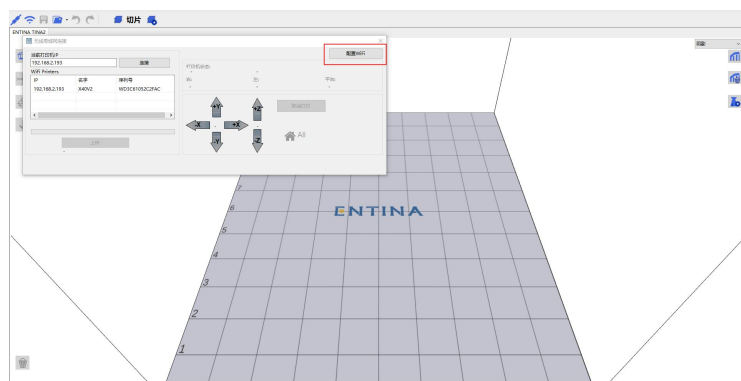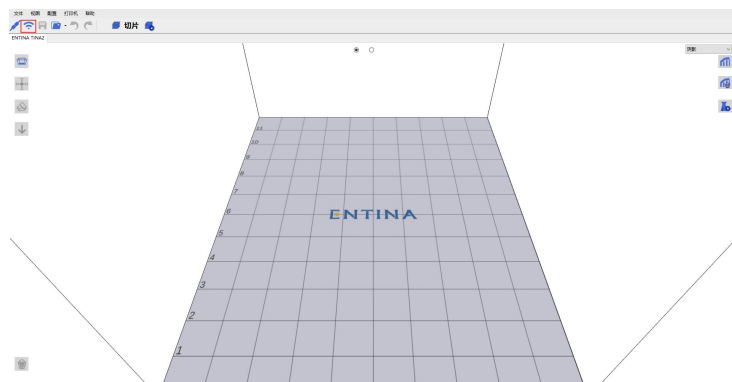

Step3: Enter your network password, click “Save”, save to TF card.

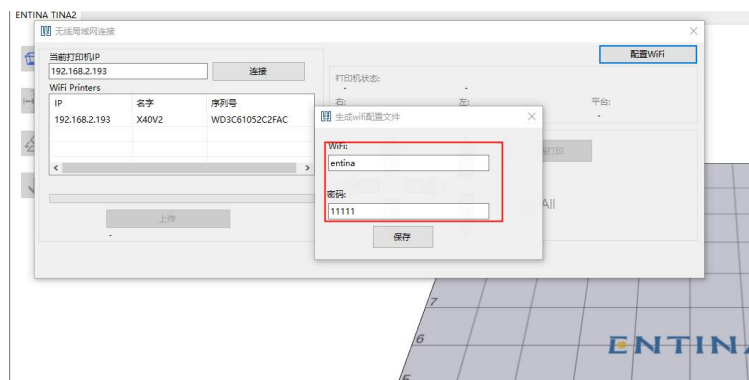

Step4: Turn on the 3D printer, print "wifi.gcode"



Step5: After WIFICAM is connected the Internet, the obtained IP address will be displayed on the printer screen.