

# ***TERRANS INDUSTRY***

Please complete the ONSTEP Init setting before using this software.



Stellarium PLUS Instruction  
(Basic)



Please complete the ONSTEP Init setting before using this software.

## 1.1 GOTO Wireless Connection and GOTO



1. Click the Setting and Instruct to open the telescope function.



1. Setting your **longitude and latitude**




1. Connect the mobile phone to the WIFI hotspot of ONSTEP. Select the network type. Please check the figure.
2. Open the link switch. After the connection is successful, three green hooks are displayed.

Please complete the ONSTEP Init setting before using this software.


## 1.2 GOTO Wireless Connection and GOTO



1. This button can adjust the direction of your telescope.

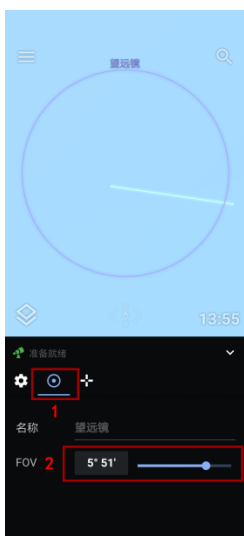

1. This button can adjust the field of view of the telescope.
2. To see the current viewable range.

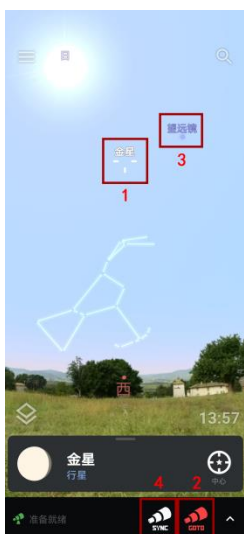

1. Select your GOTO target.
2. Click the GOTO button to GOTO, the telescope start to move.
3. If the telescope is a little offset from the target, you can first adjust the telescope pointing through the fine-tuning interface to make the target in the center of the field of view, and then click SYNC for calibration
4. The actual pointing position of the telescope is shown in real time.