

 


Dessiz[®]

USER MANUAL

Clothes Dryer

Model: DTD10-WHITE
DTD10-GREY

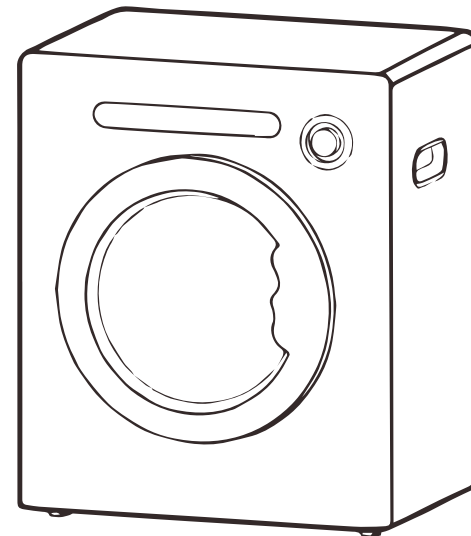

If you have questions, please send email to
contact@dessiz.com


CONTENTS

Notes before use (very important).....	01
Tumble dryer installation.....	02
Tumble dryer maintenance.....	03
Tumble dryer operating instructions.....	05
Tumble dryer common troubleshooting.....	08

Dessiz

DTD10-WHITE/GREY Clothes Dryer

 Rated Power: 970W Voltage: 110-120V
Rated Frequency: 60Hz
Waterproof Rate: IPX4

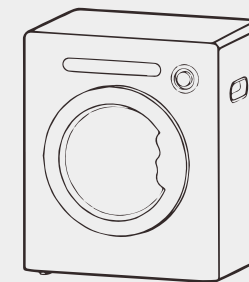

1 Notes Before Use (Very Important)

1 Electrical Safety

1. Plug the power cable into a socket with single-phase three-pole 110V AC power supply .
The grounding cable of the socket must be grounded reliably. It is best to use a leakage protector.
2. Do not place flammable and volatile substances (such as gasoline and alcohol) close to the dryer when the dryer is running to avoid fire.
3. Do not install the dryer in the bathroom and other wet place or may be wet by the rain, to avoid electric shock and leakage accidents.
4. When the dryer is in use, the power plug should be easy to plug and remove. When the power is cut off, moved, not used or cleaned, the power plug must be removed. Please do not plug and remove the plug with wet hands.
5. If the power cord is damaged, it must be replaced by professionals from the manufacturer, maintenance or similar department to avoid danger.
6. It is strictly prohibited to put the dryer on the packaging foam, otherwise it will cause fire due to the heat distribute problem or other external factors.
7. When the inside or outside of the roller is dirty, wipe with a soft wet towel, do not wash directly with water, do not use volatile oil (such as alcohol, gasoline, etc.) wipe.
8. Tumble dryers should not be used if chemicals are used to clean clothing.
9. Cotton shavings are not allowed to accumulate around the tumble dryer.
10. Adequate ventilation must be provided to avoid backflow of gases from appliances into the space igniting other substances, including open fires.
11. It is not allowed to exhaust gas into the flue of appliances for burning gas or other materials.

2 Use Requirement

1. Clothes should be fully dehydrated before drying in the dryer. (Hand-wringing clothes should be avoided due to the presence of a large amount of moisture, warm water possible to increased drying time.
2. Before drying, please carefully check the clothes, take out the pockets of lighters, matches and other inflammable materials and coins, hairpins, paper clips, keys and other sharp metal objects.
3. Zipper and button clothes, turn the clothes inside out to dry. (This can reduce the sound of collision with the drum).
4. Labels indicated "do not wash with water" or "dry clean, do not dry in the dryer."
5. Wool fabric, wool clothes, leather materials do not use for drying dryer, plush, leather will be damaged, wool clothing will shrink deformation.
6. Clean the lint on the air inlet filter and air outlet filter cotton after each drying.
7. It is best to dry clothes of the same or similar texture at one time.
8. Do not dry the clothes with following requirements: no roller drying, hanging dry, drip dry, flat drying, drying in the shade.
9. During the normal operation, the surface of the machine is not allowed to cover by any textile material. During the operation, the surface temperature of the machine will be slightly higher than human body, which is a normal phenomenon.

2 Tumble Dryer Installation

Dryer should be placed on the horizontal and solid ground, desktop or special support. Dryer installation should be 10-15cm away from the back wall. If used in a narrow space, you can install a ventilation fan or exhaust pipe in the outlet to exhaust hot and humid air outside. Exhaust pipe length should not exceed 2 meters.

1 Exhaust Pipe Joint Installation

Adjust the joint direction of the air outlet according to the actual needs, and turn the buckle clockwise.



2 Dryer Installed Horizontally

This dryer cannot stand on its head. When the dryer is placed on the ground or table, should ensure that the ground, the table solid and not tilt, keep the dryer horizontally.



 
3 Tumble dryer maintenance

In order to ensure the normal use of the dryer, it is necessary to clean the air outlet and air intake filter in time, and clean the dryer regularly. Please remove the power plug from the socket before cleaning.

1 Air Outlet Filter Cleaning

Clean the air outlet filter after each use


A. Remove the filter: put your hand into the inner tub of the dryer, insert it into the four holes next to the center of the air outlet cover, and pull out the filter.

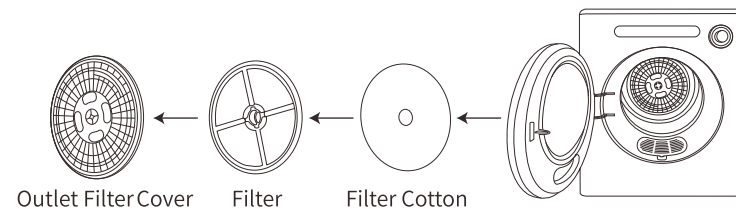

B. Clean the lint: Remove the air outlet cover, filter cotton, and filter net respectively. Use a soft brush or vacuum cleaner to clean the lint from the air filter and filter cotton. Be careful and do not damage the filter cotton.



 C. Filter installation: After cleaning, assemble the filter in the order of filter net, filter cotton and air outlet cover, put the filter into the inner cylinder, align the central of the filter net with the central convex part of the drum, and ensure them installed in place.

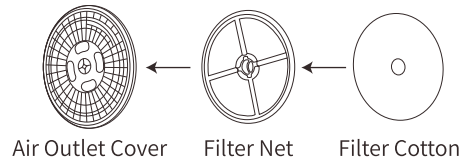

2 Clean the Intake Filter Once a Month

1. Push the outer middle end of the air intake filter cover upwards slightly, hold it and remove it outwards.
2. Use a soft brush or vacuum cleaner to clean the dust and foreign bodies.
3. Put it back on the dryer after cleaning.



3 Body Cleaning


Use wet soft cloth to clean the inside of the drum or the outside of the dryer, if dirty is difficult to remove, can use a little kitchen cleaning agent to wipe, and then clean with a clean cloth.

NOTE: Do not use diluent, gasoline, alcohol wipe the dryer body




4 Tumble Dryer Operating Instructions

 Wait 5-10 seconds after power-on and enter the selection mode, the current item is flashing status.

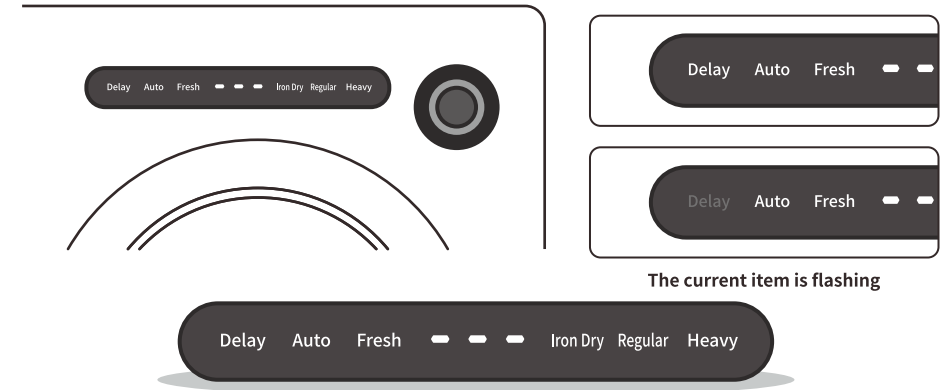

<p>Delay</p> <p>Select the delay wash, turn the knob to select 1-24 hours, and press the knob</p>	<p>Auto</p> <p>This function will dry and cool clothes. In this mode, the dryer will dry clothes in the form of smart judgment, and will stop after dry clothes.</p>	<p>Fresh</p> <p>The operation of this function is cool air, which is mainly to remove the odor on clothes. For example, the odor caused by clothes stored for too long is only blown by cold air for 10 minutes. You can also use cool air instead of hot air to cool newly dried clothes, thus easy for users to take out from dryer.</p>
<p>Iron Dry</p> <p>This function is applying to clothes that are difficult to iron, such as fabric shirts and linens. Set drying times according to the amount of clothing. When the time runs out and the dryer stops running, the clothes will still contain moisture, and easy to ironing.</p>	<p>Regular</p> <p>Normal function: This function dries and cools clothing, mostly for clothing that does not wrinkle (depending on the material). The drying time is fixed at 110 minutes.</p>	<p>Heavy</p> <p>This function dries and cools clothes, and is used to dry larger sizes or many clothes (clothes that exceed half of the dryer's rated capacity). The drying time is fixed at 170 minutes.</p>

 Note: In intelligent mode H indicates the current temperature C indicates the current temperature

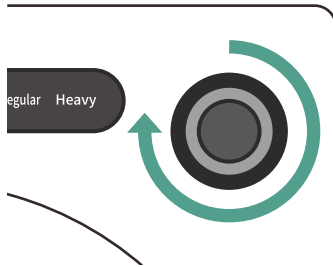

Rotate the button for selection, the current selected item is flashing status. (manual version rotate button to select the corresponding time), close the door, press the button to enter the operation.

Anti-winding: Every 10 minutes during the operation of the dryer, stop for 10 seconds, turn over for 1 minute, stop for 10 seconds, the normal process continues until the dryer stop working.

 
Power on: Plug in the power cord, and the dryer will start automatically. In the power-on status, press twice, first time is wake up, second time to enter the power-on status.

Shutdown: when dryer in standby status, it will automatic shutdown after standby for 5 minutes, long press the knob for more than 3 seconds to shut down.

When the door is open or in standby status, the lighting will be on. When the ultraviolet sterilization lamp or blue light on, the lighting will be off.

Pause: When the door is opened or the knob is pressed, dryer will enter the pause status during dryer operation.


Status: Pause status, current item flashing, knob side light flashing. The running status knob side light is steady on, and each light is 15 minutes.

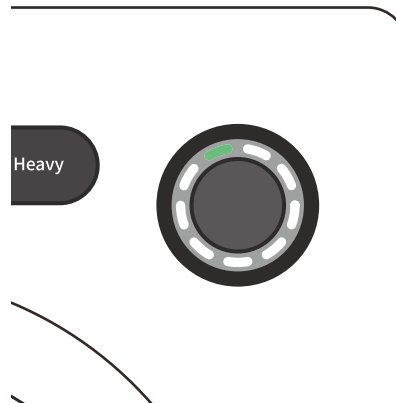

NOTE:

When drying clothes, dehydrate the clothes, prohibit liquid, alcohol lamp, flammable and explosive items volatile into the dryer. The machine should be placed more than 10cm away from the wall. In order to ensure the good performance of the dryer, please replace the front dust screen and filter cotton in drum regularly, so as not to cause air duct blockage, thus affecting the drying efficiency.

 Control Panel Instruction

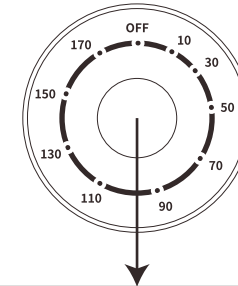


Dryer Program Selection

Off: When the knob pointer points to "Off", the dryer will disconnect the power. Once the pointer points to the desired dryer program, the dryer will start working.

Fresh: This function is used for the last 20 minutes of the drying procedure. It uses cool air instead of hot air to cool clothes that have just been dried so that users can take them out easily.

 Heavy: This function dries and cools clothes, and is used to dry larger sizes or many clothes (clothes that exceed half of the dryer's rated capacity). The drying time normally will be more than 110 minutes.

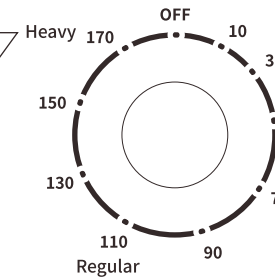

Regular: this function dries and cools clothing, mostly for clothing that does not wrinkle (depending on the material). The drying time is fixed at 110 minutes.

Iron Dry: Used for those difficult ironing clothes such as fabric shirts and linen. According to the number of clothes and set drying time, generally set 30-50 minutes. When the time runs out and the dryer stops running, the clothes will still contain moisture, and easy to ironing.

5 Tumble Dryer Common Troubleshooting

If the dryer is faulty, disconnect the power cable from the power supply then check it. Sometimes the following situations are not faults, please confirm again before repair, if it is a fault, please call the company's national service hotline and contact the company's after-sales service department, do not repair by yourself.

Problem	Possible cause	Remedy
Dryer does not work	<ul style="list-style-type: none"> • Whether there is power failure or trip. • Whether the power supply link is tight or not. • Whether the drying clothes are overloaded. • Whether the temperature controller is disconnected. 	<ul style="list-style-type: none"> • Use after power repair. • Check the power connection to ensure that it is securely fastened. • Loading clothing must be dehydrated (the weight of wet clothing) should not exceed 5.0kg • Ask maintenance staff to replace the temperature controller
The outside of the dryer is hot or can smell hot	<ul style="list-style-type: none"> • The filter screen of the lint filter is blocked by lint. • The air outlet or exhaust duct is blocked 	<ul style="list-style-type: none"> • Before and after each use, the lint filter should be cleaned. • Remove blockages.
Unsatisfied with the drying result	<ul style="list-style-type: none"> • The drum is too full of clothes. • The filter is blocked, affecting the inlet and outlet air. • Clothing too full, winding. • The dryer is installed and placed in narrow and unventilated place. 	<ul style="list-style-type: none"> • Dry clothes multiple times. • Clean the inlet and outlet air filter regularly. • Dry clothes again after shaking them out. • Rearrange the dryer.
Over wrinkled clothing	<ul style="list-style-type: none"> • The drum is too full of clothes. • Failed to take out clothes in time after finishing. • Clothing is not properly sorted. • Humidity is set too high 	<ul style="list-style-type: none"> • Don't pack clothes too full. • Take out the clothes immediately after finishing. • Dry clothes after sorting. • Follow the maintenance instructions on the clothing label

Problem	Possible cause	Remedy
Clothing shrinkage	<ul style="list-style-type: none"> • Excessive dryness 	<ul style="list-style-type: none"> • Follow the maintenance label instructions on clothing. If the garment tends to shrink, check it frequently when drying. Remove clothing when it is still damp to avoid over-drying, then hang or lay it flat to dry completely.
The clothes have hair ball	<ul style="list-style-type: none"> • Synthetic fibers and non-scalding fibers produce normal hair ball. This is due to normal friction. 	<ul style="list-style-type: none"> • Soften fibers with fabric softener. When ironing clothing, spray styling glue onto necklines and cuffs. Or turn the inside out to reduce friction.
The dryer cannot be started after running for a long time	<ul style="list-style-type: none"> • After the dryer runs for a long time, the starting temperature in the barrel is protected from overheating. 	<ul style="list-style-type: none"> • The dryer will automatically restore to normal after about 30 minutes of automatic protection.

The display boardv communication fails	One LED light on
The NTC sensor fails	Two LED lights on
T/H sensor fails	Four LED lights on

