



# MAXFIT81 FROST WIRELESS

## MODULAR MECHANICAL KEYBOARD

### What's included in the box

1. FANTECH MAXFIT81 FROST WIRELESS Mechanical Keyboard
2. Switch Puller
3. Keycaps Puller
4. Detachable Type-C Cable
5. User Manual

### System requirements

1. Operating systems: Windows XP/7/8/10/11, MacOS (Software only works with windows)
2. One USB 2.0/3.0 port

### USER MANUAL

## Instruction manual

Thank you for purchasing FANTECH MAXFIT81 MK910 Mechanical Keyboard.

MAXFIT81 features hotswappable sockets which are compatible with Cherry, Gateron, Kailin and other switches, as well as featuring a premium macro knob for easy control of your PC. The exploded layout design allows for easy typing. MAXFIT81 also features interactive OLED, as well as BT5.0 + 2.4Ghz + USB connection modes. Get your game on with MAXFIT81!

## Technical specification

- Number of keys: 81 keys
- Switch type: Mechanical
- Anti-Ghosting: All keys
- Connection: Wired, 2.4Ghz, BT5.0 (Up to 5 devices)
- Battery Capacity: 4000mAh
- Battery Life: 165 hours with RGB OFF, 40 hours with RGB ON
- Wireless Distance: Up to 10m
- Size: 303.2(L)x104.3(W)x45(H)mm
- Weight: 1018gr

## Size



## Secondary functions

Combination Keys	Windows	Mac
<b>Fn+Esc</b>	Hold 3 seconds, to reset keyboard	Hold 3 seconds, to reset keyboard
<b>Fn+F1</b>	Brightness-	Brightness+
<b>Fn+F2</b>	Brightness+	Brightness-
<b>Fn+F3</b>	Task View	Desktop Switch
<b>Fn+F4</b>	File Explorer	Call "Sir"
<b>Fn+F5</b>	Mail	---
<b>Fn+F6</b>	Home	---
<b>Fn+F7</b>	Previous Track	Previous Track
<b>Fn+F8</b>	Play/Pause Track	Play/Pause Track
<b>Fn+F9</b>	Next Track	Next Track
<b>Fn+F10</b>	Mute	Mute
<b>Fn+F11</b>	Volume -	Volume -
<b>Fn+F12</b>	Volume +	Volume +
<b>Fn+1</b>	Press: to switch BT1 mode Press & hold: Start pairing BT1	Press: to switch BT1 mode Press & hold: Start pairing BT1
<b>Fn+2</b>	Press: to switch BT2 mode Press & hold: Start pairing BT2	Press: to switch BT2 mode Press & hold: Start pairing BT2
<b>Fn+3</b>	Press: to switch BT3 mode Press & hold: Start pairing BT3	Press: to switch BT3 mode Press & hold: Start pairing BT3
<b>Fn+4</b>	Press: to switch 2.4Ghz mode Press & hold: Start pairing 2.4Ghz	Press: to switch 2.4Ghz mode Press & hold: Start pairing 2.4Ghz
<b>Fn+5</b>	Switch to wired mode	Switch to wired mode
<b>Fn+A</b>	Windows mode	Windows mode
<b>Fn+S</b>	Mac mode	Mac mode



# MAXFIT81 FROST WIRELESS

## MODULAR MECHANICAL KEYBOARD

### Apa yang disertakan di dalam kotak

1. Keyboard Mekanik FANTECH MAXFIT81 FROST WIRELESS
2. Penarik Switch
3. Penarik Keycaps
4. Kabel Tipe-C yang dapat dilepas
5. Panduan Pengguna

### Persyaratan sistem

1. Sistem operasi: Windows XP/7/8/10/11, MacOS (Perangkat lunak hanya bekerja dengan windows)
2. Satu port USB 2.0/3.0

### INSTRUKSI MANUAL

## Instruksi manual

Terima kasih telah membeli Keyboard Mekanik FANTECH MAXFIT81 MK910.

MAXFIT81 memiliki soket hotswappable yang kompatibel dengan Cherry, Gateron, Kailin dan soket lainnya, serta menampilkan keypad makro premium untuk kontrol yang mudah dari PC Anda. Desain tata letak anak panah memungkinkan pengetikan yang mudah. MAXFIT81 juga memiliki fitur OLED interaktif, serta mode koneksi BT5.0 + 2.4Ghz + USB. Mainkan game Anda dengan MAXFIT81!

## Spesifikasi teknis

- Jumlah tombol: 81 keys
- Jenis soket: Mechanical
- Anti-Ghosting: All keys
- Koneksi: Wired, 2.4Ghz, BT5.0 (Up to 5 devices)
- Kapasitas baterai: 4000mAh
- Daya tahan Baterai: 165 Jam dengan RGB OFF, 40 jam dengan RGB ON
- Jarak nirkabel: Sampai dengan 10m
- Ukuran: 303.2(L)x104.3(W)x45(H)mm
- Berat: 1018gr

## Ukuran



## Fungsi sekunder


Kombinasi Keys	Windows	Mac
<b>Fn+Esc</b>	Tahan 3 detik, untuk reset keyboard	Tahan 3 detik, untuk reset keyboard
<b>Fn+F1</b>	Kecerahan-	Kecerahan+
<b>Fn+F2</b>	Kecerahan+	Kecerahan-
<b>Fn+F3</b>	Task View	Desktop Switch
<b>Fn+F4</b>	File Explorer	Panggil "Sir"
<b>Fn+F5</b>	Mail	---
<b>Fn+F6</b>	Home	---
<b>Fn+F7</b>	Track sebelumnya	Track sebelumnya
<b>Fn+F8</b>	Play/Pause Track	Play/Pause Track
<b>Fn+F9</b>	Track selanjutnya	Track selanjutnya
<b>Fn+F10</b>	Bisu	Bisu
<b>Fn+F11</b>	Volume -	Volume -
<b>Fn+F12</b>	Volume +	Volume +
<b>Fn+1</b>	Tekan: untuk pindah mode BT1 Tekan & tahan: memulai pairing BT1	Tekan: untuk pindah mode BT1 Tekan & tahan: memulai pairing BT1
<b>Fn+2</b>	Tekan: untuk pindah mode BT2 Tekan & tahan: memulai pairing BT2	Tekan: untuk pindah mode BT2 Tekan & tahan: memulai pairing BT2
<b>Fn+3</b>	Tekan: untuk pindah mode BT3 Tekan & tahan: memulai pairing BT3	Tekan: untuk pindah mode BT3 Tekan & tahan: memulai pairing BT3
<b>Fn+4</b>	Tekan: untuk pindah mode 2.4Ghz Tekan & tahan: memulai pairing 2.4Ghz	Tekan: untuk pindah mode 2.4Ghz Tekan & tahan: memulai pairing 2.4Ghz
<b>Fn+5</b>	Pindah ke mode kabel	Pindah ke mode kabel
<b>Fn+A</b>	Mode Windows	Mode Windows
<b>Fn+S</b>	Mode Mac	Mode Mac

Combination Keys	Windows	Mac
<b>Fn+_Win</b>	Lock Windows	Lock Windows
<b>Fn+_O</b>	Print Screen	Print Screen
<b>Fn+_P</b>	Scroll Lock	Scroll Lock
<b>Fn+_[]</b>	Pause Break	Pause Break
<b>Fn+_I</b>	Insert	Insert
<b>Fn+_;</b>	Home	Home
<b>Fn+_'</b>	End	End
<b>Fn+_L_Chl</b>	Cycle OLED	Cycle OLED
<b>Fn+_Delete</b>	Spectrum mode selector	Spectrum mode selector
<b>Fn+_Page Up</b>	RGB color selector	RGB color selector
<b>Fn+_Page Down</b>	Changing spectrum direction (Only works on several spectrum mode)	Changing spectrum direction (Only works on several spectrum mode)
<b>Fn+_\</b>	RGB ON/OFF	RGB ON/OFF
<b>Fn+_M</b>	Case LED mode selector	Case LED mode selector
<b>Fn+_.</b>	Case LED color selector	Case LED color selector
<b>Fn+_.</b>	Case LED brightness	Case LED brightness
<b>Fn+_/'</b>	Case LED Speed	Case LED Speed
<b>Fn+_Up Arrow</b>	Spectrum Brightness+	Spectrum Brightness+
<b>Fn+_Down Arrow</b>	Spectrum Brightness-	Spectrum Brightness-
<b>Fn+_Left Arrow</b>	Spectrum Speed-	Spectrum Speed-
<b>Fn+_Right Arrow</b>	Spectrum Speed+	Spectrum Speed+

Notes: Cycle OLED allows for functions such as CPU status, Disk Status, Memory Status and more to be shown. For this, the keyboard must be connected to the software.


## How to use

### Change switches and keycaps

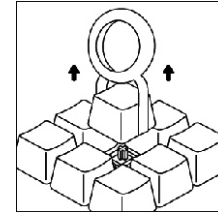

#### 1. Remove keycap


Use the keycap puller tool to clamp on a keycap and pull upwards to detach keycap from switch. Sometimes the switch may come out as well if the keycap is secured lightly on switch, which is normal. For longer keys such as the space bar, always clamp and remove from the MIDDLE of the keycap.

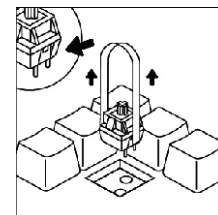

#### 2. Remove switch

Use the switch puller to push in the two tabs located on the top and bottom side of the switch. Once they are pushed in, pull upwards to remove switch from keyboard case.


Warning: It is very easy to scratch your keyboard case with this tool, so take caution when removing switches!

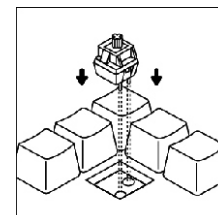

#### 3. Insert switch

When inserting a new switch, align switch to holes on the keyboard, and insert straight down. There should be minimal resistance and the switch should pop into the frame of the keyboard. It is recommended at this time to have a Notepad ready on your PC, open it and make sure the switch works when you press it. If the switch does not light up, or the key doesn't show up on your PC when you press it, then the switch was not inserted properly. Remove switch, and make sure pins are straight then insert again.



\* Note: It is safe to swap switches while your keyboard is plugged in to your PC

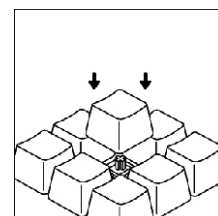


#### 4. Insert keycap

Once you have confirmed the switch was properly inserted, snap back in the appropriate keycap.

## How to connect

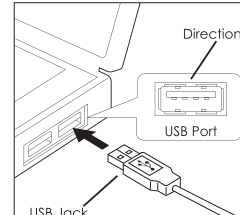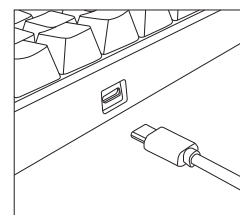


Plug in the Type-C cable to the keyboard, then connect the keyboard to computer by inserting USB jack to your computer USB port. Press Fn+S to activate wired mode, after it connects the OLED will notify the keyboard is connected.

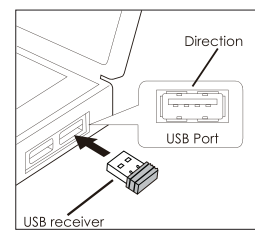

### 2.4Ghz mode:


Plug in the USB receiver to the computer USB port. Press Fn+4 to activate 2.4Ghz mode, after it connects, the OLED will notify the keyboard is connected. If it doesn't connect, please hold Fn+4 for 5 seconds to enter 2.4Ghz pairing mode.

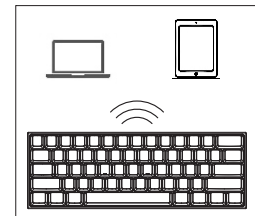


### BT mode:

MaxFIT81 Frost Wireless can connect up to 3 BT devices simultaneously via combination key, connect the BT by hold Fn+1 / Fn+2 / Fn+3 for 3 seconds. Then, navigate to your devices BT settings, and begin the pairing process. In pairing process the OLED will notify your keyboard still in pairing. After connected the OLED will notify the keyboard is connected.

Download our Manual / Software from our official website  
[www.fantechworld.com](http://www.fantechworld.com)

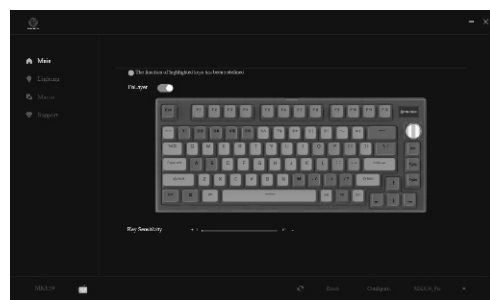

## Software

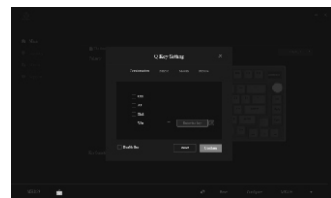


### Main

\* On the main screen, you can customize the keyboard's keys and set macros, by clicking on the keys. You also can customize the FN layers.


You can customize another layer of macro by turning on Fn Layer features.

1. Set or record the combination keys for the selected keys.
2. To activate the keys by pressing Fn + selected keys.

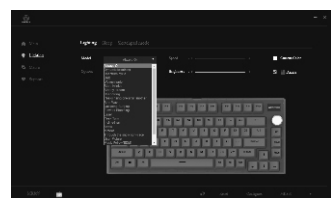

### Lighting


On this screen, you can customize up to 22 lighting modes, and even set the speed and brightness on some.

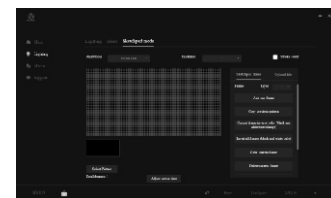


In this section, you can customize the OLED display by opening the sketchpad mode.

1. Set your display in the sketchpad frame section.
2. If you have any pictures that you already download from the web, you can import them by pressing "select picture".
3. After finishing setting your display, you can edit the frame, after finishing editing you can upload the design in the upload file section.

\* Note: - Picture format needs to be JPEG, PNG, GIF  
- If you found out the date and time on the OLED is not correct, please press "Adjust screen time" button to fix the date and time.

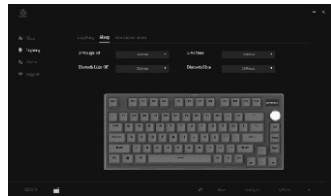

In this section, you can customize the sleep and light ON time of your keyboard when you are away from your computer.

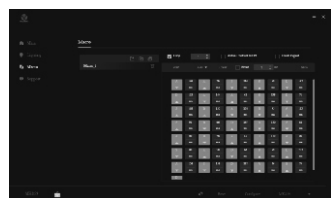

### Macro

To set up a new macro, click the "add" icon on the Macro bar, to start the macro customization.

Next, click the "Start" button, which will begin the macro input process. When finished, click the "Stop" button.

To save your new macro, click the "save" button after stopping the macro input.

After recording the macro, you can easily edit it by clicking the input step of the macro. To do this, you can click on "add" to add more steps, or "Modify" to modify the key.

After setting up the macro, return to the Main screen and click on a key to apply a macro to it.

### Loop


You can set the macro looping number

### Button control On/Off

Auto looping start once keys was pressed and end when the keys was pressed again.


### Touch repeat

Auto looping start upon holding and pressing the keys. It will end once you let go the key press

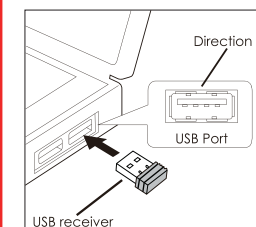

### Mode 2.4Ghz:


Masukkan Colokkan penerima USB ke port USB komputer. Tekan Fn+4 untuk mengaktifkan mode 2.4Ghz, setelah terhubung, OLED akan memberi tahu keyboard terhubung. Jika tidak terhubung, tahan Fn+4 selama 5 detik untuk masuk dalam pairing mode.

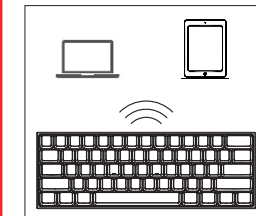

### Mode BT :


MaxFIT81 Frost Wireless dapat terhubung hingga 3 BT perangkat secara bersamaan melalui tombol kombinasi, sambungkan BT dengan menahan Fn+1 / Fn+2 / Fn+3 selama 5 detik. Kemudian, navigasikan ke pengaturan BT perangkat Anda, dan mulai proses pemasangan. Dalam proses pemasangan, OLED akan memberi tahu keyboard Anda masih di mode pairing. Setelah terhubung OLED akan memberi tahu keyboard terhubung.

Unduh Manual / Perangkat Lunak kami dari Situs web resmi kami  
[www.fantechworld.com](http://www.fantechworld.com)

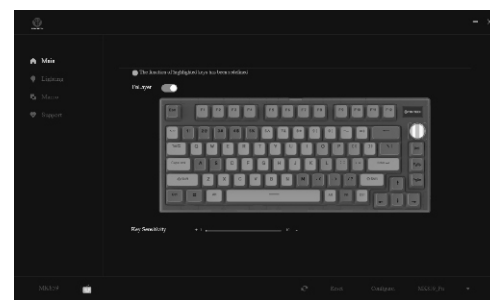


## Cara Penggunaan

### Cara mengganti switches dan keycaps

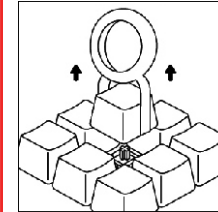


#### 1. Angkat keycap

Gunakan alat penarik keycap untuk menjepit keycap dan tarik ke atas untuk melepaskan keycap dari soket. Terkadang soket juga bisa keluar jika keycap di amankan erat pada soket dan kejadian ini normal. Untuk kunci yang lebih panjang seperti spasi, selalu jepit dan hapus dari tengah keycaps.

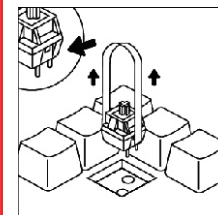

#### 2. Lepaskan switch


Gunakan penarik switch untuk mendorong dua tab yang terletak di sisi atas dan bawah switch. Setelah mereka didorong masuk, tarik ke atas untuk melepaskan switch dari casing keyboard. Peringatan: Sangat mudah untuk meledak casing keyboard anda dengan alat ini, jadi berhati-hatilah saat melepas switchnya.

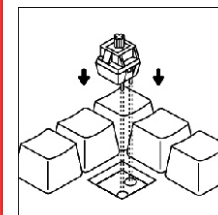

#### 3. Masukan switch

Saat memasang switch baru, sejajarkan switch dengan lubang pada keyboard, dan masukkan ke bawah. Harus ada hambatan minimal dan switch harus masuk ke bingkai keyboard. Saat ini di sarankan untuk menyiapkan notepad di PC anda, buka dan pastikan switch berfungsi saat anda menekannya. Jika switch tidak menyala, atau tombol tidak muncul di PC anda saat anda menekannya, berarti soket tidak dimasukkan dengan benar. Lepaskan switch dan pastikan pin lurus lalu masukkan kembali.



\* Catatan: Aman untuk menukar switch saat keyboard anda di colokkan ke PC anda.

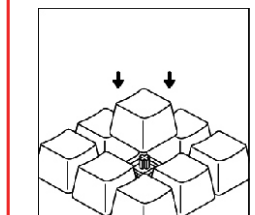

#### 4. Masukkan keycap


Setelah anda mengkonfirmasi bahwa switch telah dimasukkan dengan benar, pasang kembali keycap yang sesuai.

## How to connect

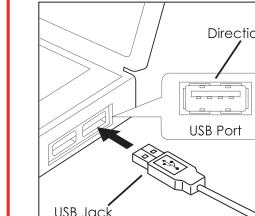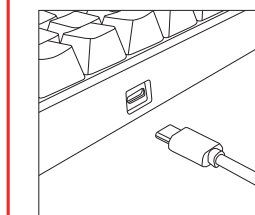

Colokkan kabel Tipe-C ke keyboard, lalu sambungkan keyboard ke komputer dengan memasukkan jack USB ke port USB komputer. Tahan Fn+5 selama 3 detik untuk mengaktifkan mode kabel, setelah terhubung tampilan OLED akan menunjukkan kalau keyboard sudah terhubung.

## Perangkat lunak

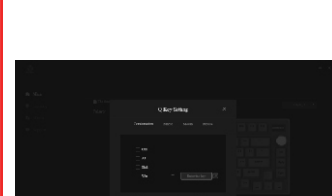


### Menu utama

\* Pada layar utama, Anda dapat menyesuaikan tombol keyboard dan mengaktifkan tombol kombinasi pada kunci. Anda juga dapat menyesuaikan tampilan FN.


Anda dapat menyesuaikan lapisan makro lain dengan mengaktifkan fitur FN Layer.

1. Atur atau rekam tombol kombinasi untuk kunci yang dipilih.
2. Untuk mengaktifkan tombol dengan menekan Fn + tombol yang dipilih.

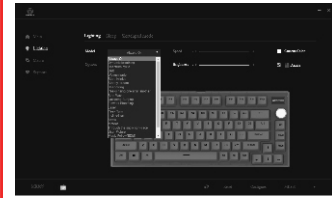

### Pencahayaannya


Di layar ini, Anda dapat menyesuaikan hingga 22 mode pencahayaan, dan bahkan mengatur kecepatan dan kecerahan pada beberapa mode pencahayaan.

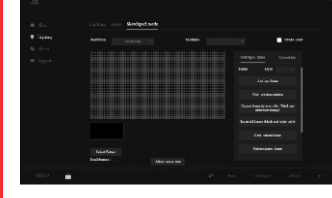


Di bagian ini, Anda dapat menyesuaikan tampilan OLED dengan membuka mode sketchpad.

1. Atur tampilan Anda di bagian bingkai sketchpad.
2. Jika Anda memiliki gambar yang sudah unduh dari web, Anda dapat mengimponya dengan menekan "pilih gambar".
3. Setelah selesai mengatur tampilan Anda, Anda dapat mengedit bingkai, setelah selesai mengedit, Anda dapat mengunggah desain di bagian unggah file.

\* Catatan: - Format gambar harus JPEG, PNG, GIF  
- Jika Anda mengalami gangguan dan waktu pada OLED tidak benar, silakan tekan "Sesuaikan Tombol Screen Time" untuk memperbaiki gangguan dan waktu.

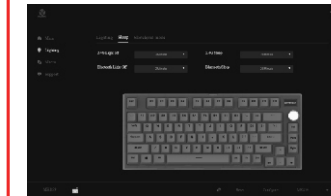

Di bagian ini, Anda dapat menyesuaikan fitur dan nyalaan waktu keyboard Anda saat Anda jauh dari komputer Anda.

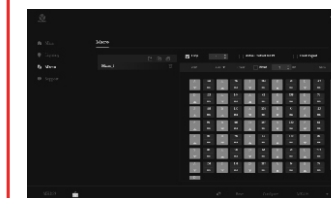

### Macro

Untuk menyiapkan makro baru, klik ikon "Tambah" pada bilah Makro, untuk memulai konfigurasi makro.

Selanjutnya, klik tombol "Start", yang akan memulai proses input makro. Setelah selesai, klik tombol "Stop".

Untuk menyimpan makro baru Anda, klik tombol "simpan" setelah menghentikan input makro.

Setelah merekam makro, Anda dapat dengan mudah mengedit itu dengan mengklik langkah input makro. Untuk melakukan ini, Anda dapat mengklik "tambah" untuk menambahkan lebih banyak langkah, atau "Modifikasi" untuk memodifikasi kunci.

Setelah menyiapkan makro, kembali ke Main layar dan klik pada tombol untuk menerapkan makro ke dalamnya.

### Loop

Anda dapat mengatur nomor perulangan makro

### Kontrol tombol On/Off

Perulangan otomatis dimulai setelah tombol ditekan dan Akhiri saat tombol ditekan lagi.

### Senyum ulang

Perulangan otomatis dimulai saat menahan dan menekan tombol, itu akan berakhir setelah Anda melepaskan penekanan tombol