



Georgian Bay Grills

EMBER PERSONAL FIREPIT

Model: EMBERBLK (BLACK)
EMBERBLU (BLUE)
EMBERGRN (GREEN)

Thank you for purchasing
**Georgian Bay Grills'
EMBER Personal Firepit.**


The EMBER will add terrific
ambiance and atmosphere to
your next outdoor adventure
and give you many hours of
enjoyment.

As with any fire producing
device, care and caution must
be used at all times while the
EMBER is in operation.

**For the safety of you and your
property, please read,
understand and follow all of
the instructions herein before,
during, and after the use of
your EMBER Personal Firepit.**

**Do not modify this appliance
in any way or use it for
purposes other than intended.**

Please retain this manual for
future reference.

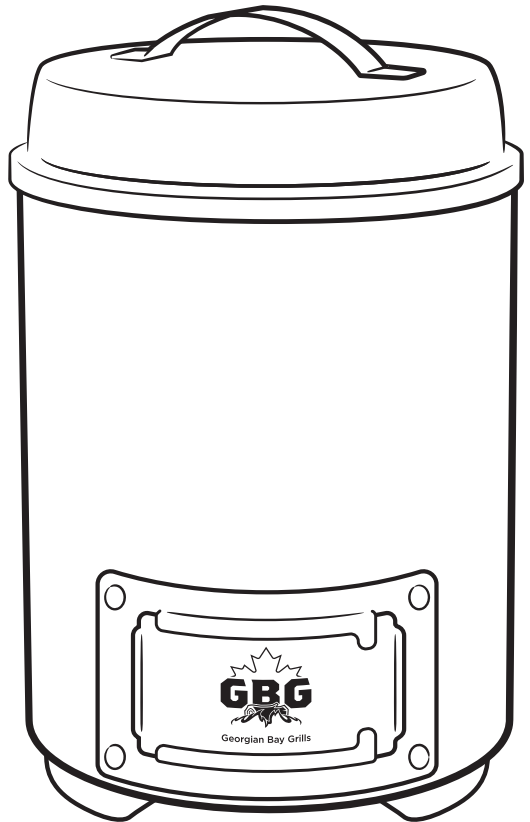

THIS PRODUCT IS FOR OUTDOOR USE ONLY

Sold by Georgian Bay Leisure Distributors Ltd.

CAUTION & SAFETY

For use outdoors only. Do not use in an enclosed space or indoors.

For use by adults only. Keep children and pets away from the EMBER while it is in use.

The EMBER becomes hot during use and will remain hot for some time after the fire has been extinguished. Once burning, do not touch the unit. Keep all flammable materials at least 12" (30 cm) away from the sides and top until the fire is out and the unit is completely cooled.

Never leave the EMBER unattended during use.

The EMBER is for use on nonflammable surfaces only, such as glass, stone or ceramic. Always use the protective pad under the EMBER while it is in use to help prevent heat transfer to the surface below.

For maximum safety when using the EMBER on a picnic or patio table: Place a ceramic plate on the table, followed by the protective pad, and then the EMBER on top.

Do not operate the EMBER in high winds.

It is not recommended to use the EMBER under a covered porch, patio roof, low hanging branches, trellis or overhangs of any kind.

Do not use gasoline, diesel fuel, kerosene, lighter fluid, etc. to light the unit. Please follow provided instructions herein.

When finished with your EMBER, ensure the front vent door is closed (using the provided tool) and the lid is securely in place. Do not move the unit or attempt to re-light it until it has completely cooled.


As with any fire product, it is critical that you keep a water source close at hand in case of emergency. In case of accidental tip over, by contact or other hazard, douse the unit and surrounding area with water immediately. Cool and completely dry the unit before storing.

Misuse of this appliance, failure to fully follow these instructions and/or heed warnings, may result in fire, product and/or property damage, or serious personal injury.


PARTS

Remove all parts from the box. Remove all packing materials — these will ignite and cause potentially harmful fumes if left in the EMBER when in use.


Lid

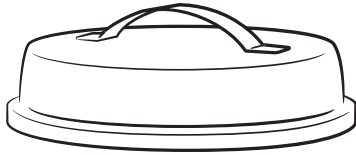

Fire Ring

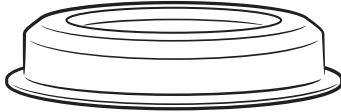


Main Unit

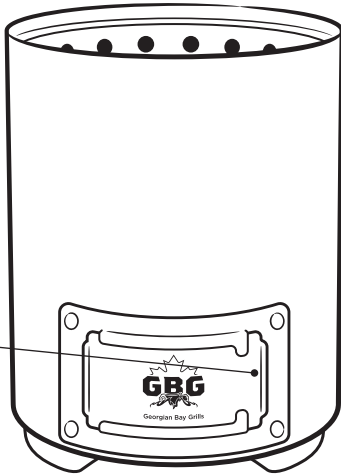


Sliding Vent

Storage Bag

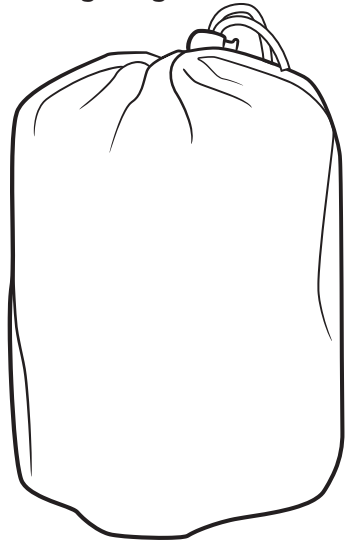

Protective Pad

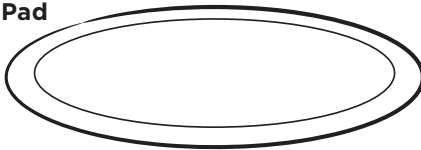

Tool




LIGHTING INSTRUCTIONS

- 1 Place the EMBER on a nonflammable surface (such as stone, glass, or ceramic) with the provided protective pad centered under the base.



When using the EMBER on other surfaces (such as a picnic or patio table), place a small ceramic plate (not provided) beneath the protective pad.

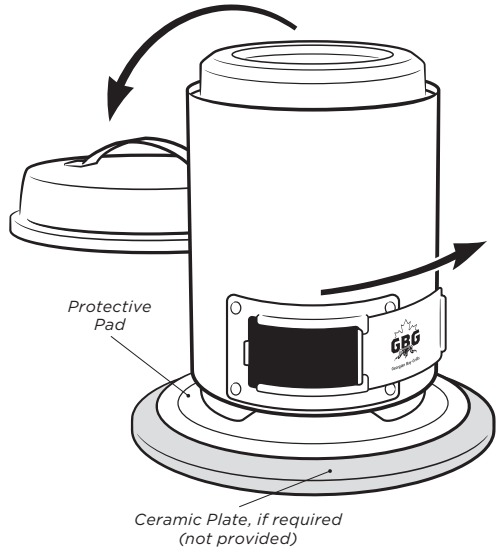

- 2 Remove the lid.
Fully open the sliding vent.

- 3 Fill the EMBER with any commercial wood pellets or small chips/chunks of wood.




Do not fill past the top vent holes on the center post.

- 4 Place a fire starter on the pellets/wood. Use a small lighting square or a tablespoon of lighting gel (both available at any hardware store).



Do not use liquid fire starters.

- 5 Ignite the fire starter.

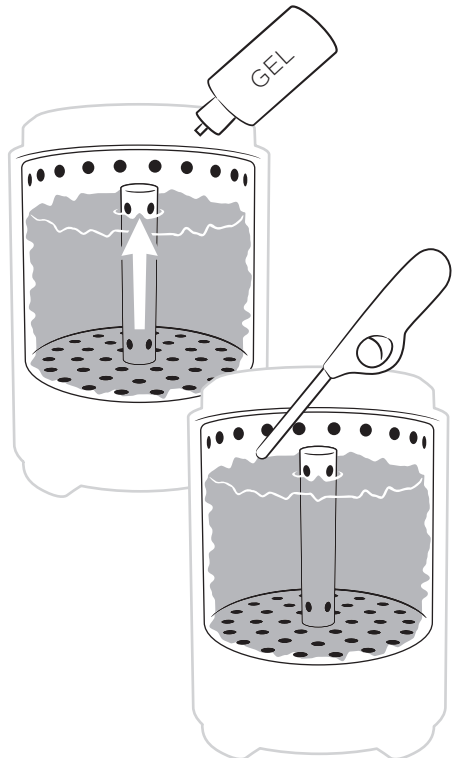

OPERATING INSTRUCTIONS

- 6** Once the flames are established (approximately 5-10 minutes), close the vent about half way with the provided tool.


The tool can be used to push or pull either side of the vent door.

Enjoy the beautiful 10-15" (25-38 cm) flames for about 60 to 90 minutes (depending on conditions).



Do not operate without the Fire Ring in place.


The EMBER's surfaces will be HOT. Never touch the EMBER while in use.

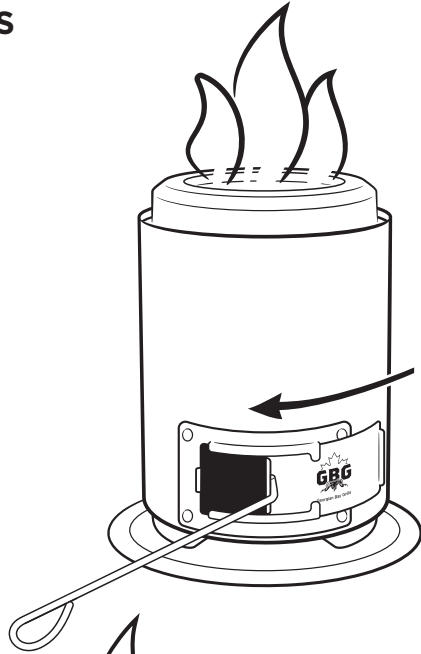

- 7** To control the intensity of the flame: Open the vent to get a more robust fire. Close the vent to bring the fire down.



Always use the tool to adjust the vent.

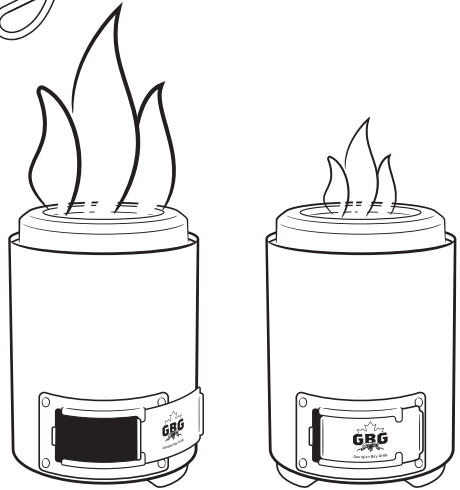

When using wood pellets:

It is recommended that you allow the pellets to fully burn down and the unit to cool before adding more pellets and re-lighting.

When using wood chips/chunks:

More chips can be added in small quantities at a time while the fire is underway.

EXTINGUISHING INSTRUCTIONS

8 Simply let the fire burn itself out.

OR

If you wish to extinguish the fire before it is out:


Fully close the sliding vent using the tool.

Place the lid firmly on top. This will suffocate the fire by depriving it of air.

The fire will go out within 1-2 minutes.




Do not use water to extinguish the fire (unless in an emergency).

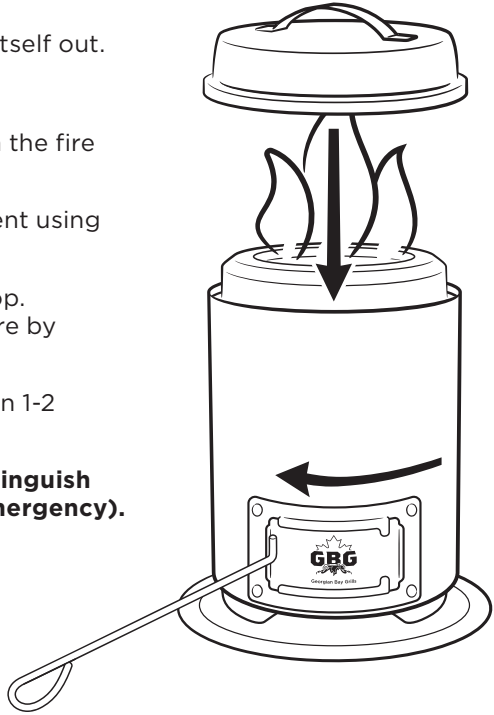

9 **Allow the EMBER to completely cool.**

Empty the ashes through the vent opening into a nonflammable container. Please dispose of ashes in an appropriate manner.

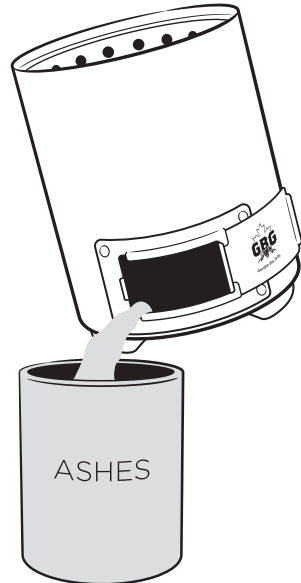

10 Place the lid on top of the EMBER and store in the provided bag.



Ensure the EMBER is cool, clean, and dry before storage.

DISCOLOURATION OF SURFACES

A natural fading of the finish of your EMBER will occur over time with use. Although heat-resistant paint and stainless steel is used in the production of the EMBER, the heat and flames will discolour the exterior somewhat.

This is not a defect in workmanship. It will not affect the performance of your EMBER!

WARRANTY

Georgian Bay Leisure warrants this appliance to the original purchaser to be free from manufacturer defect in materials and workmanship for a period of 90 days from date of purchase. Retain your proof of purchase.

Any damage caused by willful abuse, neglect, carelessness, tampering, modification, alteration, unauthorized repair, commercial or industrial use, or any use other than intended, is not covered by this warranty.

Have a warranty concern? Please contact us for further direction.



Do not modify this appliance.

Do not use any accessories other than described herein.

Do not burn materials other than wood pellets, chips, or chunks.

Our goal is to make this manual as complete and accurate as possible at the time of printing. Updated manuals can be found at [georgianbayleisure.com](http://www.georgianbayleisure.com)



Georgian Bay Grills is a division of
Georgian Bay Leisure Distributors Ltd.
252 King Street, Unit 4
Barrie, Ontario, Canada
www.georgianbayleisure.com