

QUICK GUIDE

Hills TouchNAV Security System




Powering Up the System

1. Go into the garage and turn off the powerpack for the alarm at the switch.
2. Open the box and you will see a large battery. On the two front corners of the battery will be a metal pin. One of these should already have a wire attached to it, usually a black one.
3. You will see an unconnected red wire with the same connection as the attached black one. Plug this into the metal pin on the battery. The metal pins have either a black or red square underneath them. Make sure that the black square is with the black wire and the red square with the red wire.
4. After both wires are attached close the box and switch the power back on.



Overview

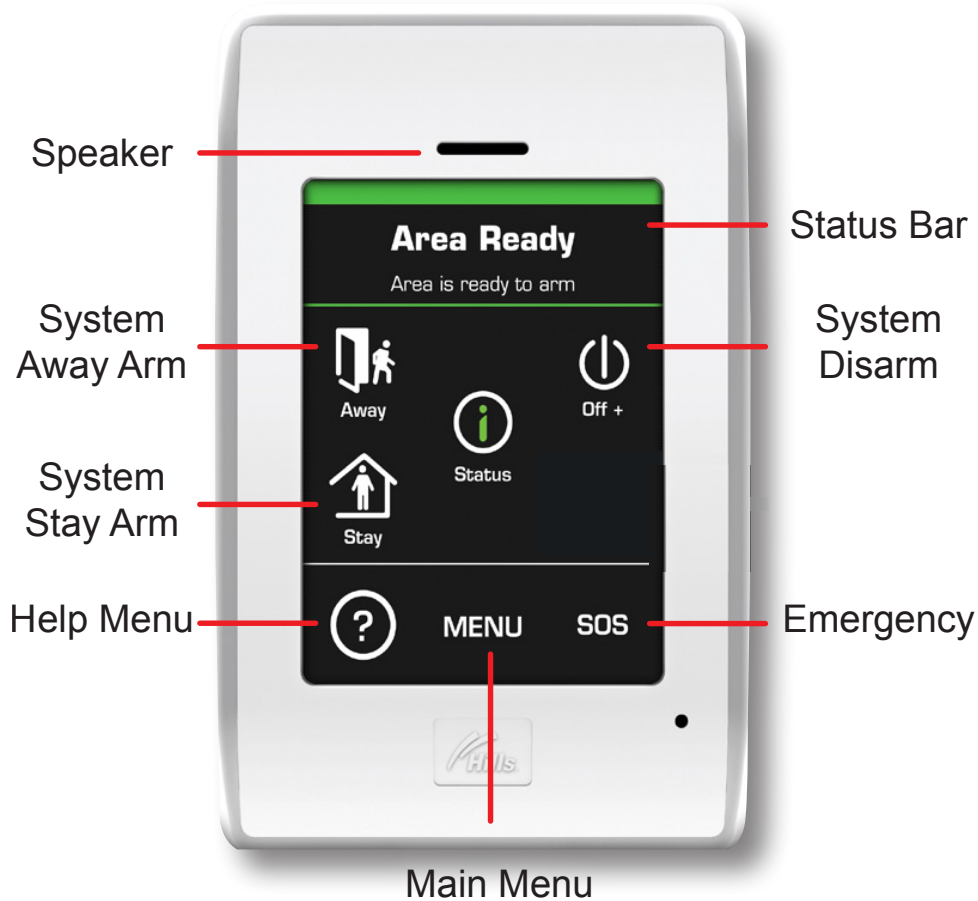


Changing the Time & Date

1. Press Menu>Settings> enter Master Code (default 1234)
2. Select Time and Date.
3. Adjust the time and date using the arrows.
4. When finished, press the Home icon or use the back arrows.



Changing the User Code

1. Press Menu>Controls>Users> enter Master Code (default 1234)
2. Select Master User.
3. Here you have to option to change the name of the master user. If you wish to do this select change name, type the name and click enter.
4. Press Change Code, enter your new code, and press enter. This changes your alarm pin. This is what you will enter when disarming the alarm system.
5. Clicking the back arrow brings you to the users menu and allows you to add users (e.g. children, guests, servicemen). If you would like to add a user select add user and add a name and code for them.

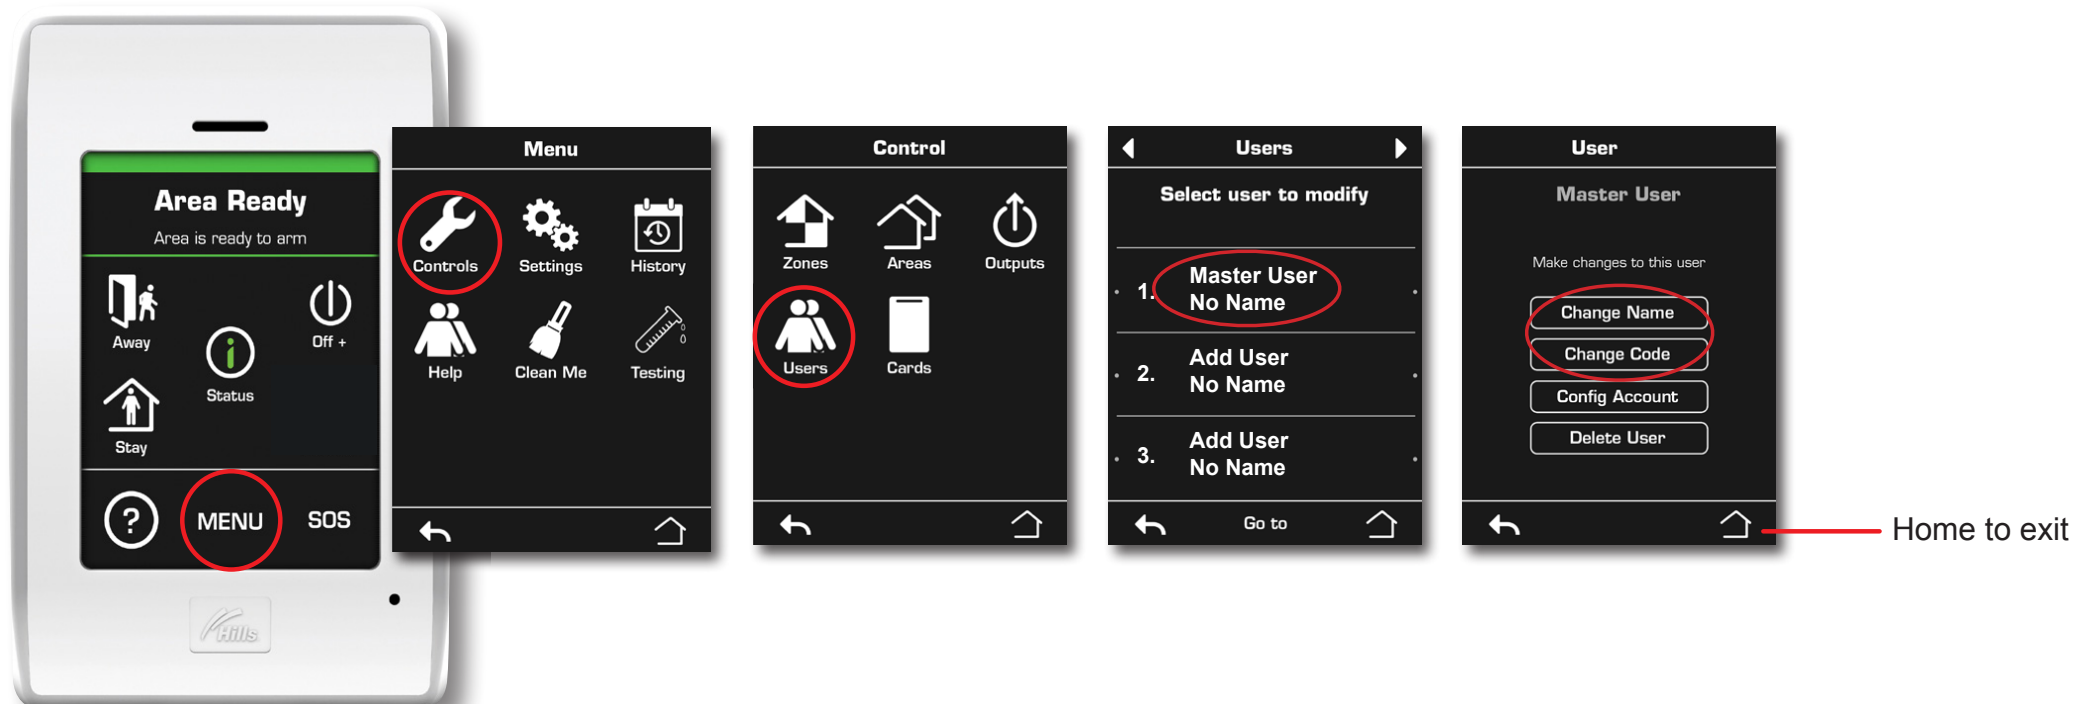

Arming the System

1. Close all doors and make sure the area is protected.
2. When the alarm is ready to be armed, the top of the keypad will display the message “Area Ready” with a green strip above. This is the status bar.
3. Press ‘Away’.
4. Once the system is armed, the status bar will turn blue.
5. After arming the system, you have 30 seconds to exit from the front door and 90 seconds to exit from the garage roller door.

Disarming the System

1. There is a delayed entry period when you enter the house that lasts for 30 seconds from the front door and 90 seconds from the garage roller door.
2. Within this time frame you must disarm the system, either with your wireless arming device (FOB) or by entering your pin into the keypad.
3. The security system is now disarmed.

