

Quick Guide to VoiceNAV Security Keypad



If power was not on at the site on the scheduled day of fit-off of the security panel, the power supply & battery will be disconnected. See the notes below titled **POWERING UP SYSTEM**.

Changing the USER CODE

STEPS

1. Press the **MENU** key, and then the **5** key
2. When prompted enter the default ARM/DISARM code of **1234**
3. Press the **1** key to configure the USER CODE.
4. Press the **1** key (to change the code for user 1) and then **ENTER**
5. Enter the homeowner's chosen four-digit number (which cannot start with 0), & then **ENTER**. This is now referred to as their USER CODE.
5. Press the **MENU** key three times to exit

Arming

1. Close doors to all protected areas. The Status indicator will be green
2. Enter the homeowner's USER CODE, which will arm the system.
3. The AWAY indicator will turn red. They may now leave the home.

Dis-Arming

1. As you enter the home & the protected areas, the VoiceNAV will emit a tone until you enter the USER code. This time period is called the delayed entry period, and is typically thirty seconds.
2. Enter the USER code into the VoiceNAV keypad, and the AWAY indicator will change from red to green.
3. The security system is now disarmed.

NOTE: If the Status indicator is flashing red during the delayed entry period, the security system has been activated in your absence. The homeowner is advised to leave the home on the assumption that it is not safe to enter.

Powering up system

THE FIRST 4 STEPS MUST BE CARRIED OUT IN CONSECUTIVE ORDER

1. Open the security panel door.
2. Plug in the power pack.
3. Connect the battery terminals with the red & black wires to the positive & negative, respectively.
4. Close the security panel door.
5. The **STATUS** indicator light will be red.

THE TIME & DATE MUST NOW BE SET

6. Press **MENU**
7. When prompted by the VoiceNAV, press **9** for Basic Configuration.
8. Press **1** to set the time & date
9. When prompted, enter the default default ARM/DISARM CODE of **1234**.
10. Press **1** to set the **TIME**
11. Follow the voice prompts to enter the current time into the keypad
12. Once time is entered, press **2** when prompted to set the **DATE**. It will be read aloud once complete.
13. Press the MENU button 3 times to exit. The STATUS indicator light will now be green.